

**Winter time
is service
time**

**BOMAG
is freezing
its prices!**



BOMAG
FAYAT GROUP

BOMAG Genuine Parts Kits.

Winter time is service time with BOMAG Genuine Parts kits! Order now & benefit!

Practical, reliable and quick: Prepare your machine for the next season - we will help you! Our **BOMAG Genuine Parts kits** offer you all the original parts you need in a practical set in proven BOMAG quality. You can therefore be certain that your machine will be ready for action again in no time at all.

Save time when it's most valuable and benefit from our special offer prices from **01/12/2012 to 31/03/2013**.



Scan the QR code **to win fantastic prizes every month**.
Or participate online at
www.bomag.com/service-media



BOMAG Genuine Parts Kits for Milling Machines



Service Kits for Milling Machines

The BOMAG genuine service kits are matched to the machine's maintenance schedule to ensure good functionality long-term. All of the parts needed for servicing, including documentation, come in a box:

1000h service kit: air filter, including safety cartridge, hydraulic and engine oil, and fuel filter, and primary fuel filter, V-belts, screw plug, grease cartridge and seals.

500h oil service kit: engine oil filter, screw plug, grease cartridge and seals.

1000h Service Kits

Specification	Machine	P/N	Required quantity per machine
1000h Service kit	BM 500/15 BM 600/15	770 882 00	1
1000h Service kit	BM 1000/30 (Tier 2) BM 1200/30 (Tier 2) BM 1300/30 (Tier 2)	770 836 10	1
1000h Service kit	BM 1000/30 (Tier 3) BM 1000/30-2 BM 1200/30 (Tier 3) BM 1200/30-2 BM 1300/30 (Tier 3) BM 1300/30-2	770 836 18	1
1000h Service kit	BM 2000/50 (Tier 2) BM 2000/60 (Tier 2)	770 836 13	1
1000h Service kit	BM 1500/50 BM 2000/50 (Tier 3) BM 2000/60 (Tier 3) BM 2000/60-2	770 836 20	1

500h Oil Service Kits

Specification	Machine	P/N	Required quantity per machine
500h Oil service kit	BM 500/15 BM 600/15	775 882 00	1
500h Oil service kit	BM 1000/30 (Tier 2) BM 1200/30 (Tier 2) BM 1300/30 (Tier 2)	775 836 10	1
500h Oil service kit	BM 1000/30 (Tier 3) BM 1000/30-2 BM 1200/30 (Tier 3) BM 1200/30-2 BM 1300/30 (Tier 3) BM 1300/30-2	775 836 18	1
500h Oil service kit	BM 2000/50 (Tier 2) BM 2000/60 (Tier 2)	775 836 13	1
500h Oil service kit	BM 1500/50 BM 2000/50 (Tier 3) BM 2000/60 (Tier 3) BM 2000/60-2	775 836 20	1

Crawler Track Units



BOMAG genuine crawler track units are made of hard-wearing components that provide for optimum machine performance and grip, as well as cost-effective work even with the toughest soil conditions. The special manufacturing technology provides for a long service life and great strength.

Specification	Machine	P/N	Required quantity per machine
Crawler track unit	BM 1000/30 (Tier 2) BM 1000/30 (Tier 3) BM 1200/30 (Tier 2) BM 1200/30 (Tier 3) BM 1300/30 (Tier 2) BM 1300/30 (Tier 3)	309 952 039	4
Crawler track unit	BM 1000/30-2 BM 1200/30-2 BM 1300/30-2	058 700 38	4
Crawler track unit	BM 1500/50 BM 2000/50 (Tier 3)	309 952 042	4
Crawler track unit	BM 2000/50 (Tier 2)	309 952 015	4
Crawler track unit	BM 2000/60 (Tier 2)	309 954 009	4
Crawler track unit	BM 2000/60 (Tier 3) BM 2000/60-2	311 662 23	4
Crawler track unit with track pads, premounted, kit	BM 1000/30 (Tier 2) BM 1000/30 (Tier 3) BM 1200/30 (Tier 2) BM 1200/30 (Tier 3) BM 1300/30 (Tier 2) BM 1300/30 (Tier 3)	836 011 41	4
Crawler track unit with track pads, premounted, kit	BM 1000/30-2 BM 1200/30-2 BM 1300/30-2	836 300 68	4
Crawler track unit with track pads, premounted, kit	BM 2000/60	836 010 90	4

Please observe the machine-specific maintenance schedules.

Track Pads



BOMAG genuine 3-stage track pads made of steel, with a cured polyurethane coating, have been specially designed for a long service life and resistance to wear. They are characterised by their great resistance to bending and breaking. Track pads can be precisely, quickly and easily fitted with the high-strength pad bolts provided. The crawler track unit kit includes the right number of track pads for a crawler track unit.

Specification	Machine	P/N	Required quantity per machine
Track pad kit	BM 1000/30 (Tier 2) BM 1000/30 (Tier 3) BM 1200/30 (Tier 2) BM 1200/30 (Tier 3) BM 1300/30 (Tier 2) BM 1300/30 (Tier 3)	836 010 79	4
Track pad kit	BM 1500/50 BM 2000/50	836 011 19	4
Track pad kit	BM 2000/60	836 010 91	4

Track Rollers



BOMAG genuine track rollers are precisely matched to the crawler track unit and designed for a long service life. The track roller kit contains one track roller and appropriate assembly material.

Specification	Machine	P/N	Required quantity per machine/ crawler track unit
Track roller, single, kit	BM 1000/30 (Tier 2) BM 1000/30 (Tier 3) BM 1200/30 (Tier 2) BM 1200/30 (Tier 3) BM 1300/30 (Tier 2) BM 1300/30 (Tier 3)	836 011 20	8/2
Track roller, single, kit	BM 1500/50 BM 2000/50	836 011 20	16/4
Track roller, single, kit	BM 1000/30-2 BM 1200/30-2 BM 1300/30-2	836 011 39	8/2
Track roller, single, kit	BM 2000/60	836 010 92	16/4



Scrapers



BOMAG genuine scraper segments are designed for the precise loading of milled material. The special scraper segments on the right and left of the scraper blade leave the edges clean-cut. The scraper kit contains assembly materials and scraper segments made of hard metal that smooth the milled surface by shearing off the cambered asphalt ridges.

Specification	Machine	P/N	Required quantity per machine
Scraper kit 300 mm	BM 500/15	882 010 52	1
Scraper kit 400 mm		882 010 53	1
Scraper kit 500 mm		882 010 27	1
Scraper kit 600 mm	BM 600/15	882 010 28	1
Scraper kit 1000 mm	BM 1000/30	836 011 45	1
Scraper kit 1200-1300 mm	BM 1200/30 BM 1300/30	836 011 06	1
Scraper kit 1500 mm	BM 1500/50	836 011 27	1
Scraper kit 2000 mm	BM 2000/50 BM 2000/60 (Tier 2) BM 2000/60 (Tier 3)	836 010 96	1
Scraper kit 2000 mm	BM 2000/60-2	836 010 81	1

Retainers



The BOMAG genuine retainer segments are made of highly wear-resistant material to ensure the retainer's long-term functionality.

The retainer segment kit includes all necessary retainer segments, including assembly materials.

Specification	Machine	P/N	Required quantity per machine
Retainer kit 500 mm, complete retainer	BM 500/15	882 010 29	1
Retainer segment kit 600 mm	BM 600/15	882 010 30	1
Retainer segment kit 1000-1300 mm	BM 1000/30-2 BM 1200/30-2 BM 1300/30-2	836 011 07	1
Retainer segment kit 2000 mm	BM 2000/60-2	836 010 38	1

Side Plates



Wear protection segments are used to minimise edge protection wear on the side of the milling drum housing. These are made of wear-resistant material and are easy to exchange. The wear protection segments are available in the kit, including assembly materials.

Specification	Machine	P/N	Required quantity per machine
---------------	---------	-----	-------------------------------

Side plates			
Side plate kit	BM 1000/30 (Tier 2) BM 1000/30 (Tier 3) BM 1200/30 (Tier 2) BM 1200/30 (Tier 3) BM 1300/30 (Tier 2) BM 1300/30 (Tier 3)	836 011 46	1
Side plate kit	BM 1000/30-2	836 011 42	1
Side plate kit	BM 1200/30-2 BM 1300/30-2	836 011 08	1
Side plate kit	BM 1500/50	836 011 28	1
Side plate kit	BM 2000/50 (Tier 3) BM 2000/60	836 011 05	1

Side plate cylinder			
Side plate cylinder kit	BM 500/15 BM 600/15	882 010 31	2
Seal kit for side plate cylinder	▼	058 503 72	2
Side plate cylinder kit	BM 1000/30-2 BM 1200/30-2 BM 1300/30-2	836 011 09	2
Side plate cylinder kit	BM 2000/60-2	836 010 82	2

Conveyor Belts



The particularly powerful and low-wear, BOMAG genuine conveyor belts ensure that the milled material is completely picked up without any losses and conveyed to the discharger.

Specification	Machine	P/N	Required quantity per machine
Discharge conveyor	BM 500/15 BM 600/15	059 500 12	1
Discharge conveyor	BM 1000/30 BM 1200/30 BM 1300/30	308 601 045	1
Discharge conveyor	BM 1500/50 BM 2000/50 BM 2000/60	308 601 044	1
Loading conveyor	BM 1500/50 BM 2000/50	308 602 016	1
Loading conveyor	BM 2000/60	308 602 015	1

Garlands & Return Idlers



Along with the conveyor belt the BOMAG genuine garlands and return idlers form a system that ensures that the milled material is reliably conveyed from the drum housing to the lorry. The components are precisely matched and perfectly configured in terms of friction coefficients, cost-effectiveness and quiet operation.

Specification	Machine	P/N	Required quantity per machine
---------------	---------	-----	-------------------------------

Garlands			
Garland kit for discharge conveyor	BM 500/15 BM 600/15	882 010 34	9
Garland kit for discharge conveyor (metal)	BM 1000/30 BM 1200/30 BM 1300/30	836 011 29	7
Garland kit for discharge conveyor (rubberised)	BM 1000/30 BM 1200/30 BM 1300/30	836 011 30	4
Garland kit for discharge conveyor (metal)	BM 1500/50 BM 2000/50 BM 2000/60	836 011 15	7
Garland kit for discharge conveyor (rubberised)	BM 1500/50 BM 2000/50 BM 2000/60	836 011 16	3
Garland kit for loading conveyor (rubberised)	BM 1000/30 BM 1200/30 BM 1300/30	836 011 30	4
Garland kit for loading conveyor	BM 1500/50 BM 2000/50 BM 2000/60	836 010 84	5

Return idlers			
Return idler kit for discharge conveyor	BM 500/15 BM 600/15	882 010 35	3
Return idler kit for discharge conveyor	BM 1000/30 BM 1200/30 BM 1300/30	836 011 31	6
Return idler kit for discharge conveyor	BM 1500/50 BM 2000/50 BM 2000/60	836 010 85	5
Return idler kit for loading conveyor	BM 1000/30 BM 1200/30 BM 1300/30	836 011 31	2
Return idler kit for loading conveyor	BM 1500/50 BM 2000/50 BM 2000/60	836 010 85	2



Drive and Return Rollers



BOMAG genuine drive and return rollers ensure the cost-effective transfer of material and quiet operation. The kit includes drive and return rollers and assembly materials.

Specification	Machine	P/N	Required quantity per machine
Return rollers			
Return roller kit for discharge conveyor	BM 500/15 BM 600/15	882 010 38	1
Return roller kit for discharge conveyor	BM 1000/30 BM 1200/30 BM 1300/30	836 011 34	2
Return roller kit for discharge conveyor	BM 1500/50 BM 2000/50 BM 2000/60	836 010 87	2
Return roller kit for loading belt	BM 1000/30 BM 1200/30 BM 1300/30	836 011 34	2
Return roller kit for loading belt	BM 1500/50 BM 2000/50 BM 2000/60	836 010 87	2
Drive rollers			
Drive roller kit for discharge conveyor	BM 500/15 BM 600/15	882 010 37	1
Drive roller kit for discharge conveyor	BM 1000/30 BM 1200/30 BM 1300/30	836 011 33	2
Drive roller kit for discharge conveyor	BM 1500/50 BM 2000/50 BM 2000/60	836 010 86	2
Drive roller kit for loading belt	BM 1000/30 BM 1200/30 BM 1300/30	836 011 33	2
Drive roller kit for loading belt	BM 1500/50 BM 2000/50 BM 2000/60	836 010 86	2

Rubber Seals




The original BOMAG rubber seals guarantee the safe transport of milled material inside the conveyor system and prevent milled material from falling out.

The rubber seal kit includes all rubber elements required for the discharge conveyor, loading conveyor or delivery hopper (delivery without assembly material).

Beschreibung	Maschine	T/N	Bedarf je Maschine
Rubber seal kit for discharge conveyor	BM 500/15 BM 600/15	882 010 39	1
Rubber seal kit for discharge conveyor	BM 1000/30 BM 1200/30 BM 1300/30	836 011 35	1
Rubber seal kit for discharge conveyor	BM 1500/50 BM 2000/50 BM 2000/60	836 011 23	1
Rubber seal kit for loading belt	BM 1000/30 BM 1200/30 BM 1300/30	836 011 36	1
Rubber seal kit for loading belt	BM 1500/50 BM 2000/50 BM 2000/60	836 011 26	1
Rubber seal kit for loading belt	BM 1000/30 BM 1200/30 BM 1300/30	836 011 01	1
Rubber seal kit for loading belt	BM 1500/50 BM 2000/50 BM 2000/60	836 010 88	1
Rubber seal kit for delivery hopper	BM 1000/30 BM 1200/30 BM 1300/30	836 011 37	1
Rubber seal kit for delivery hopper	BM 1500/50 BM 2000/50 BM 2000/60	836 010 88	1




BOMAG
Verschleißteilkits für MPH 122-2 / MPH 125.
Sorgenfrei arbeiten. Geld sparen.

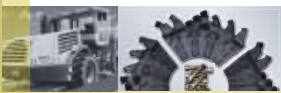

BOMAG
Wearing Parts
Don't worry, save money.



 
BOMAG Service für Kaltfräsen.
Sorgenfrei arbeiten. Geld sparen.



BOMAG Service for Milling Machines.



 BOMAG Service für Erd- und Müllverdichter.
Sorgenfrei arbeiten. Geld sparen.



BOMAG Service for Soil and Refuse Compactors.
Don't worry, save money.



BOMAG Service für Fertiger.
Sorgenfrei arbeiten. Geld sparen.



BOMAG Service Kits for Pavers.
Don't worry, save money.

Your BOMAG Genuine Parts Brochures

Please request our clearly arranged BOMAG Genuine Parts brochures and get an overview of all relevant

- BOMAG Genuine Parts
- BOMAG expendable part kits
- BOMAG service kits
- BOMAG emergency kits

for your machine.

Additionally, the brochures contain valuable tips which will help you in your daily work.

The following brochures are available in German and English:

- BOMAG service for recyclers/stabilizers
- BOMAG service for refuse compactors
- BOMAG service for milling machines
- BOMAG service for finishers

All BOMAG service brochures are also available for download at www.bomag.com



www.bomag.com/service-media

BOMAG Genuine Parts Kits for Finishers



Service Kits for Finishers

Regular services are vital to make sure your BOMAG machine functions reliably. BOMAG genuine service kits contain precisely the original parts that you need for maintenance, and proper and quick services.

1000 h service kit: air, hydraulic, engine oil and fuel filters, V-belts and seals

500 h oil service kit: fuel and engine oil filters

1000h Oil Service Kits

Specification	Machine	P/N	Required quantity per machine
1000h Service kit	MF 221	770 837 05	1
1000h Service kit	BF 222 C BF 223 C	770 837 37	1
1000h Service kit	MF 331 BF 331	770 837 00	1
1000h Service kit	BF 300	770 837 56	1
1000h Service kit	MF 571 BF 571	770 837 01	1
1000h Service kit	BF 600	770 837 45	1
1000h Service kit	MF 691 (Tier 2) BF 691 (Tier 2)	770 837 31	1
1000h Service kit	BF 691 (Tier 3)	770 837 38	1
1000h Service kit	BF 800	770 837 17	1

500h Oil Service Kits

Specification	Machine	P/N	Required quantity per machine
500h Oil service kit	MF 221 BF 222 C BF 223 C	775 837 37	1
500h Oil service kit	MF 331 BF 331	775 837 00	1
500h Oil service kit	BF 300	775 837 56	1
500h Oil service kit	MF 571 BF 571	775 837 01	1
500h Oil service kit	BF 600	775 837 46	1
500h Oil service kit	MF 691 (Tier 2) BF 691 (Tier 2)	775 837 31	1
500h Oil service kit	BF 691 (Tier 3)	775 837 38	1
500h Oil service kit	BF 800	775 837 17	1



Please observe the machine-specific maintenance schedules.

Scraper Chains



Wear-resistant, fully pre-mounted scraper chains are easy to replace and provide for the optimum movement of material. The BOMAG genuine scraper chains are available separately, or within the BOMAG Genuine Parts kit, including all shafts, bearings, brackets and assembly materials.

Specification	Machine	P/N	Required quantity per machine
---------------	---------	-----	-------------------------------

Scraper chain, single			
Scraper chain, single	MF 221 BF 222 C BF 223 C	B2447111	1
Scraper chain, single	MF 331 BF 331	700 190 722	2
Scraper chain, single	BF 300	837 231 19	2
Scraper chain, kit	MF 571 BF 600	B2543011	2
Scraper chain, single	MF 691 BF 691	B2361016	2
Scraper chain, single	BF 800	837 200 95	2

Scraper chain, kit			
Scraper chain, kit	MF 221 BF 222 C BF 223 C	837 012 10	1
Scraper chain, kit	MF 331 BF 331	837 012 11	1
Scraper chain, kit	BF 300	837 013 91	1
Scraper chain, kit	MF 571 BF 571 BF 600	837 012 12	1
Scraper chain, kit	MF 691 BF 691	837 012 13	1
Scraper chain, kit	BF 800	837 016 53	1

Drive Scraper Chains



Made of heavy duty material, the BOMAG genuine scraper belt drive shafts ensure efficient power transmission and the high-performance transfer of material. The kit includes chains, drive wheels and assembly material.

Specification	Machine	P/N	Required quantity per machine
Drive scraper chains, kits			
Drive scraper chain, kit	MF 221 BF 222 C BF 223 C	837 012 06	1
Drive scraper chain, kit	MF 331 BF 331	837 012 07	1
Drive scraper chain, kit	BF 300	837 013 90	1
Drive scraper chain, kit	MF 571 BF 571 BF 600	837 012 08	1
Drive scraper chain, kit	MF 691 BF 691	837 012 09	1
Drive scraper chain, kit	BF 800	837 015 98	1

Hopper



BOMAG genuine wear plates are made of extremely hard-wearing steel designed for the toughest applications, providing full availability and use of the machine.

All BOMAG genuine wear plates are available separately or in a kit.

Specification	Machine	P/N	Required quantity per machine
Wear plate kit			
Wear plate hopper, kit	MF 221	837 011 77	1
Wear plate hopper, kit	BF 222 C BF 223 C	837 012 05	1
Wear plate hopper, kit	MF 331 BF 331	837 011 79	1
Wear plate hopper, kit	BF 300	837 013 92	1
Wear plate hopper, kit	MF 571 BF 571 BF 600	837 011 80	1
Wear plate hopper, kit	MF 691 BF 691	837 011 81	1
Wear plate hopper, kit	BF 800	837 016 52	1

Hopper Rubber Strips



BOMAG genuine hopper rubber strips are matched to each machine; this guarantees the material remains in the hopper for the best utilisation of material during paving.

Specification	Machine	P/N	Required quantity per machine
Hopper rubber strip			
Hopper rubber strip, outer	MF 221 BF 222 C BF 223 C	837 632 43	2
Hopper rubber strip, central	MF 331 BF 331	D218302501	1
Hopper rubber strip, outer	▼	D218302502	2
Hopper rubber strip, central	BF 300	837 632 18	1
Hopper rubber strip, outer	▼	837 632 16	2
Hopper rubber strip, central	MF 571 BF 571 BF 600 BF 691 BF 800	837 601 71	1
Hopper rubber strip, outer	▼	837 601 72	2
Hopper rubber strip, right and left, short	BF 800	837 609 41	2

Fastening plate for hopper rubber strip			
Fastening plate	BF 221 BF 222 C BF 223 C	D2448224	2
Fastening plate, central	MF 331 BF 331	D218302103	1
Fastening plate, right and left, long	▼	D218302101	2
Fastening plate, outer short	▼	D218302102	2
Fastening plate, central	BF 300	837 632 19	1
Fastening plate, outer	▼	837 632 17	2
Fastening plate, central	MF 571 BF 571	D222803403	1
Fastening plate, outer long	▼	D222803301	2
Fastening plate, outer short	▼	D222803303	2
Fastening plate, central	BF 600	D222803403	1
Fastening plate, outer	▼	837 601 02	2
Fastening plate, central	BF 691	837 600 69	1
Fastening plate, outer long	▼	837 600 90	2
Fastening plate, outer short	▼	837 600 98	2



Screw Blade (Extensions)



BOMAG genuine screw blades are produced with top precision using the latest manufacturing techniques. This enables fast repairs to be carried out on site.

All BOMAG genuine screw blades for screeds are available separately or in a kit.

Specification	Machine	P/N	Required quantity per machine
---------------	---------	-----	-------------------------------

Basic auger screw blades			
Basic auger HFG, kit	MF 221	837 011 82	1
Basic auger HFE/HFG, kit	BF 222 C BF 223 C	837 011 84	1
Basic auger HD/HE, kit	MF 331 BF 331	837 011 86	1
Basic auger S340, kit	BF 300	837 013 89	1
Basic auger HC/HS, kit	MF 571 BF 571 BF 600	837 011 89	1
Basic auger HB/HS, kit	MF 691 BF 691	837 011 95	1
Basic auger S500/S600, kit	BF 800	837 015 99	

Screw blade extension			
Extension HFG (2.0 m - 3.2 m)	MF 221	837 011 83	1
Extension HFG/HFE (2.0 m - 3.2 m/2.0 m - 3.3 m)	BF 222 C BF 223 C	837 011 85	1
Extension HD/HE (2.2 m - 3.6 m)	MF 331 BF 331	837 011 87	1
Extension HD/HE (2.6 m - 4.0 m/2.4 m - 3.8 m)	MF 331 BF 331	837 011 88	1
Extension S340 (2.3 m - 4.0 m)	BF 300	837 013 97	1
Extension HC/HS (3.2 m - 5.45 m/3.05 m - 5.5 m)	MF 571 BF 571 BF 600	837 011 91	1
Extension HC/HS (3.9 m - 6.15 m/4.05 m - 6.5 m)	↓	837 011 92	1
Extension HC/HS (4.6 m - 6.85 m/4.55 m - 7 m)	↓	837 011 93	1
Extension HC (5.3 m - 7.55 m)	MF 571 C BF 571 C HCE BF 571 C HCG BF 600 C HCE BF 600 C HCG	837 011 94	
Extension HB/HS (3.2 m - 5.45 m/3.05 m - 5.5 m)	MF 691 BF 691	837 011 96	1
Extension HB/HS (3.9 m - 6.15 m/4.05 m - 6.5 m)	↓	837 011 97	1
Extension HB/HS (4.6 m - 6.85 m/4.55 m - 7 m)	↓	837 011 98	1
Extension HB/HS (5.9 m - 8.15 m/5.55 m - 8 m)	↓	837 012 01	1
Extension HB (5.3 m - 7.55 m)	↓	837 011 99	1
Extension HB (6.38 m - 8.63 m)	↓	837 012 02	1
Extension HB (6.98 m - 9.23 m)	↓	837 012 03	1
Extension S500/S600 (up to 6.50 m)	BF 800	837 016 74	1
Extension S500/S600 (up to 7.00 m)	↓	837 016 62	1
Extension S500/S600 (up to 7.50 m)	↓	837 016 75	1

Specification	Machine	P/N	Required quantity per machine
---------------	---------	-----	-------------------------------

Auger drives			
Auger drive, kit	MF 221 BF 222 C BF 223 C	837 015 61	1
Auger drive, kit	MF331 BF 331 BF 300	837 015 62	1
Auger drive, kit	MF 571 BF 571 BF 600	837 015 63	1
Auger drive, kit	BF 800	837 016 54	1

Crawler Track Units



BOMAG genuine crawler track units with bolt-on track pads meet every site requirement including high stability, durability and optimum traction, even under the most extreme conditions. Track pads can be precisely, quickly and easily fitted with the high-strength pad bolts.

Specification	Machine	P/N	Required quantity per machine
---------------	---------	-----	-------------------------------

Crawler track unit with track pads, premounted	MF 221	309 310 014	2
Crawler track unit with track pads, premounted	BF 222 C BF 223 C	700 280 861	2
Crawler track unit with track pads, premounted	BF 300 C	058 700 06	2
Crawler track unit with track pads, premounted	MF 571 C BF 571 C BF 600 C	309 950 071	2
Crawler track unit with track pads, premounted	MF 691 C BF 691 C	311 620 49	2
Crawler track unit with track pads, premounted	BF 800 C	837 016 55	2

Track pads, single			
Track pad, single, kit	MF 221 BF 222 C BF 223 C	837 010 49	78
Track pad, single, kit	BF 300 C	837 013 93	76
Track pad, single, kit	MF 571 C BF 571 C BF 600 C	837 010 51	88
Track pad, single, kit	MF 691 C BF 691 C	837 010 51	100
Track pad, single, kit	BF 800 C	837 010 51	106

Track pads, kit			
Track pads, kit	MF 221 BF 222 C BF 223 C	837 010 52	2
Track pads, kit	BF 300 C	837 013 94	2
Track pads, kit	MF 571 C BF 571 C BF 600 C	837 010 84	2
Track pads, kit	MF 691 C BF 691 C	837 011 65	2
Track pads, kit	BF 800 C	837 015 66	2

Track Rollers



The exact shape of BOMAG genuine track rollers are matched to the crawler track unit. The maintenance-free track rollers are available individually, or in the crawler track kit.

The BOMAG Genuine Parts kit includes one track roller, bolts and nuts.

Specification	Machine	P/N	Required quantity per machine
---------------	---------	-----	-------------------------------

Track roller, single			
Track roller, single, kit	MF 221	837 014 08	14
Track roller, single, kit	BF 222 C BF 223 C	837 014 09	14
Track roller, single front, kit	BF 300 C	837 014 50	14
Track roller, single rear, kit	BF 300 C	837 014 51	2
Track roller, single front, kit	MF 571 C BF 571 C BF 600 C MF 691 C BF 691 C BF 800 C	837 014 11	16
Track roller, single front, kit	MF 691 C BF 691 C BF 800 C	837 014 11	18
Track roller, single rear, kit	MF 691 C BF 691 C BF 800 C	837 014 12	2

Crawler Track Sets




BOMAG genuine crawler track sets save time and money when overhauling a machine.

The complete, premounted crawler track unit comprises track pads, drive sprockets, guide wheel for the chain tensioner, and bolts for one machine side.

Specification	Machine	P/N	Required quantity per machine
Crawler track set	MF 221	837 011 73	2
Crawler track set	BF 222 C BF 223 C	837 011 74	2
Kettenfahrwerk komplett, Kit	BF 300 C	837 013 96	2
Crawler track set	MF 571 C BF 571 C BF 600 C	837 011 75	2
Crawler track set	MF 691 C BF 691 C	837 011 76	2
Crawler track set	BF 800 C	837 016 58	2

 Smoothing Plates and Gas Screed Tamper Bars

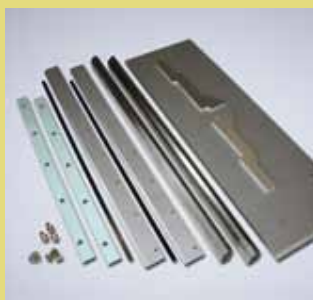

BOMAG genuine smoothing plates produce outstanding evenness and a perfect surface structure on the asphalt. This guarantees high quality placing results.

All BOMAG genuine smoothing plates and gas screed tamper bars are available separately or in a kit.

Specification	Machine	P/N	Required quantity per machine
---------------	---------	-----	-------------------------------

Basic screed, kit			
Basic screed HF, kit	MF 221	837 012 78	1
Basic screed HF, kit	BF 222 C	837 012 80	1
Basic screed HE, kit	MF 331 BF 331	837 012 84	1
Basic screed HD, kit	MF 331 BF 331	837 012 86	1
Basic screed HCG, kit	MF 571 BF 571 BF 600	700 280 676	1
Basic screed HSG, kit	MF 571 BF 571 BF 600 BF 691	700 280 858	1
Basic screed HB, kit	BF 691	837 014 13	1

Mechanical attachment screed, kit			
Attachment screed HF, kit (300 mm)	MF 221	837 012 79	1
Attachment screed HF, kit (300 mm)	BF 222 C	837 012 81	1
Attachment screed HD, kit (250 mm)	MF 331 BF 331	837 012 85	1
Attachment screed HD, kit (250 mm)	MF 331 BF 331	837 012 88	1
Attachment screed HD, kit (450 mm)	MF 331 BF 331	837 012 87	1
Attachment screed HB, kit (350 mm)	BF 691	837 014 14	1
Attachment screed HB, kit (700 mm)	BF 691	837 014 16	1
Attachment screed HB, kit (1.000 mm)	BF 691	837 014 17	1
Attachment screed HB, kit (1.250 mm)	BF 691	837 014 18	1

Smoothing Plates and Electric Screed Tamper Bars

Specification	Machine	P/N	Required quantity per machine
---------------	---------	-----	-------------------------------

Basic screed, kit			
Basic screed HFE, kit	BF 223 C	837 012 82	1
Basic screed S340 V, kit	BF 300	837 014 79	1
Basic screed S340 TV, kit	BF 300	837 013 99	1
Basic screed HCE, kit	MF 571 BF 571 BF 600	837 012 89	1
Basic screed HSE, kit	MF 571 BF 571 BF 600 MF 691 BF 691	837 012 92	1
Basic screed S600 TV, kit	BF 800	837 015 68	1
Basic screed S500 TV, kit	BF 800	837 015 69	1

Attachment screed, kit			
Attachment screed HFE, kit (350 mm)	BF 223 C	837 012 83	1
Attachment screed S340E-TV, kit (300 mm)	BF 300	837 014 00	1
Attachment screed HCE, kit (350 mm)	MF 571 BF 571	837 012 91	1
Attachment screed HCE, kit (700 mm)	BF 600	837 012 90	1
Attachment screed HSE, kit (250 mm)	MF 571 BF 571 BF 600	837 012 93	1
Attachment screed HSE, kit (750 mm)	MF 691 BF 691	837 012 94	1
Attachment screed S500/S600, kit (500 mm)	BF 800	837 016 59	1
Attachment screed S500/S600, kit (750 mm)	BF 800	837 016 68	1
Attachment screed S500/S600, kit (1250 mm)	BF 800	837 016 63	1

BOMAG Genuine Parts kits

- include all of the single parts required by the individual operating and maintenance manual in a set. A check list and illustration will help your employees to carry out the servicing work quickly.
- will simplify the ordering process. Simply provide the serial number and number of BOMAG Genuine Parts kits to receive all the individual parts you require.
- pay off. Benefit from the more attractively priced BOMAG Genuine Parts kits compared to ordering the parts individually. You will save both time and money.
- are completely made up of 100% BOMAG Genuine Parts. This will ensure both your machine's performance and long service life, as well as allow you to benefit from all of the warranty advantages. BOMAG Genuine Parts are high quality, reliable and perfectly matched to your machine.

Service Training

In our website service area, you will find more information on our service training courses: **www.bomag.com/training**



Order form

Company stamp, dealer imprint, and branch



Please enter your machine serial no.:

[illegible][illegible]

BOMAG Genuine Parts

**Winter time
is service
time**



BOMAG
FAYAT GROUP

**BOMAG
is freezing
its prices!**

BOMAG Genuine Parts Kits.

Winter time is service time with BOMAG Genuine Parts Kits! Order now & benefit!

High quality, durable and cost-effective: prevent long downtimes or even consequential damage to your **BOMAG tandem roller** or **single drum roller** by having them regularly serviced – we're here to help you! In our winter special offer, we are offering BOMAG service kits and Genuine Parts at excellent value for money.

Approach the next season well-prepared and take advantage of our special offer available from **01/12/2012 to 31/03/2013**.



Scan the QR code to win
fantastic prizes every month.
Or participate online at
www.bomag.com/service-media



BOMAG Genuine Parts kits for single drum rollers



Service kits for single drum rollers

To optimise your machine's long-term performance we can offer you original BOMAG service kits that are precisely matched to the machine's maintenance schedule.

The 1000 h service kits include all filters, V-belts and seals needed for the annual service.

1000 h service kit			1000 h service kit		
Machine	Serial no. from/to	T/N	Machine	Serial no. from/to	T/N
BW 177 DHC-4	101 582 00 1001 - 101 582 00 9999	582 020 85	BW 213 D-4	101 583 08 1003 - 101 583 08 9999	770 583 08
BW 177 DH-4 BVC	101 582 23 1005 - 101 582 23 9999	582 020 91	BW 213 DHC-4	101 583 11 1001 - 101 583 11 9999	↓
BW 177 DH-4	101 582 21 1003 - 101 582 21 9999	↓	BW 213 PD-4	101 583 13 1001 - 101 583 13 9999	↓
BW 177 PDH-4	101 582 22 1001 - 101 582 22 9999	↓	BW 213 PDHC-4	101 583 12 1001 - 101 583 12 9999	↓
BW 177 DH-4 BVC (Tier 3)	101 583 28 1001 - 101 583 28 9999	582 021 46	BW 213 DH-4 + Plates	101 583 37 1001 - 101 583 37 9999	770 583 14
BW 177 DH-4 TCD	101 583 32 1001 - 101 583 32 9999	↓	BW 213 DH-4 BVC* + Plates	101 583 06 1001 - 101 583 06 9999	↓
BW 177 DH-4	101 584 10 1001 - 101 584 10 9999	↓	BW 213 DH-4 BVC*	101 583 16 1001 - 101 583 16 9999	↓
BW 177 DHC-4 (Tier 3)	101 583 29 1001 - 101 583 29 1003	↓	BW 213 DH-4 BVC*	101 584 12 1001 - 101 584 12 9999	↓
BW 177 PD-4	101 583 43 1001 - 101 583 43 9999	↓	BW 213 DH-4	101 583 14 1001 - 101 583 14 9999	↓
BW 177 PDH-4 TCD	101 583 31 1001 - 101 583 31 9999	↓	BW 213 DH-4	101 584 11 1001 - 101 584 11 9999	↓
BW 177 D-4 (Tier 3)	101 583 27 1001 - 101 583 27 9999	582 021 47	BW 213 PDH-4	101 583 15 1001 - 101 583 15 9999	↓
BW 177 D-4	101 582 20 1003 - 101 582 20 9999	770 582 20	BW 214 DHC-4	101 582 06 1001 - 101 582 06 9999	582 020 85
BW 179 DH-4	101 582 24 1003 - 101 582 24 9999	582 020 91	BW 214 PDHC-4	101 582 07 1001 - 101 582 07 9999	↓
BW 179 PDH-4	101 582 25 1001 - 101 582 25 9999	↓	BW 214 DH-4	101 582 58 1001 - 101 582 58 9999	582 020 95
BW 179 DH-4 TCD	101 583 33 1001 - 101 583 33 9999	582 021 46	BW 214 PDH-4	101 582 59 1001 - 101 582 59 9999	↓
BW 179 DHC-4 TCD	101 583 34 1001 - 101 583 34 9999	↓	BW 214 D-4	101 583 42 1001 - 101 583 42 9999	770 583 08
BW 179 PDH-4 TCD	101 583 35 1001 - 101 583 35 9999	↓	BW 214 DHC-4	101 583 17 1001 - 101 583 17 9999	↓
BW 179 PDHC-4 TCD	101 583 36 1001 - 101 583 36 9999	↓	BW 214 PDHC-4	101 583 18 1001 - 101 583 18 9999	↓
BW 211 D-4	101 582 40 1001 - 101 582 40 9999	582 020 85	BW 214 DH-4	101 583 19 1001 - 101 583 19 9999	770 583 14
BW 211 D-4	101 582 41 1029 - 101 582 41 9999	↓	BW 214 PDH-4	101 583 20 1001 - 101 583 20 9999	↓
BW 211 D-40	101 582 42 1001 - 101 582 42 9999	↓	BW 216 D-4	101 582 62 1002 - 101 582 62 9999	582 020 95
BW 211 PD-4	101 582 45 1001 - 101 582 45 9999	↓	BW 216 D-40	101 583 39 1001 - 101 582 39 9999	↓
BW 211 PD-40	101 582 47 1001 - 101 582 47 9999	↓	BW 216 DHC-4	101 582 08 1001 - 101 582 08 9999	↓
BW 211 D-4	101 582 41 1002 - 101 582 41 1028	582 020 91	BW 216 PD-40	101 583 40 1001 - 101 583 40 9999	↓
BW 211 DE-40	101 583 45 1001 - 101 583 45 9999	582 020 95	BW 216 PDHC-4	101 582 09 1001 - 101 582 09 9999	↓
BW 211 D-4	101 583 09 1001 - 101 583 09 9999	770 583 08	BW 216 DH-4	101 582 60 1004 - 101 582 60 9999	582 021 12
BW 211 PD-4	101 583 10 1001 - 101 583 10 9999	↓	BW 216 PDH-4	101 582 61 1001 - 101 582 61 9999	↓
BW 212 D-40	101 582 43 1002 - 101 582 43 9999	582 020 85	BW 216 DH-4	101 584 00 1001 - 101 584 00 9999	770 582 77
BW 212 D-40	101 583 49 1001 - 101 583 49 9999	↓	BW 216 DH-4	101 582 64 1001 - 101 582 64 9999	↓
BW 212 PD-40	101 582 48 1001 - 101 582 48 9999	↓	BW 216 PDH-4	101 584 01 1001 - 101 584 01 9999	↓
BW 212 PD-40	101 583 50 1001 - 101 583 50 9999	↓	BW 216 PDH-4	101 582 65 1001 - 101 582 65 9999	↓
BW 213 D-4	101 582 50 1023 - 101 582 50 9999	↓	BW 216 D-4	101 583 23 1001 - 101 583 23 9999	770 583 14
BW 213 D-40	101 582 44 1002 - 101 582 44 9999	↓	BW 216 D-4	101 584 13 1001 - 101 584 13 9999	↓
BW 213 DHC-4	101 582 04 1001 - 101 582 04 9999	↓	BW 216 DHC-4	101 583 21 1001 - 101 583 21 9999	↓
BW 213 PD-4	101 582 46 1001 - 101 582 46 9999	↓	BW 216 PDH-4	101 583 24 1001 - 101 583 24 9999	↓
BW 213 PD-40	101 582 49 1001 - 101 582 49 9999	↓	BW 216 PDHC-4	101 583 22 1001 - 101 583 22 9999	↓
BW 213 PDHC-4	101 582 05 1001 - 101 582 05 9999	↓	BW 218 D-40	101 583 41 1001 - 101 583 41 9999	582 020 95
BW 213 D-4	101 582 50 1002 - 101 582 50 1022	582 020 91	BW 219 D-4	101 582 72 1001 - 101 582 72 9999	582 021 12
BW 213 DH-4 BVC* + Plates	101 582 54 1002 - 101 582 54 1014	582 020 95	BW 219 DH-4 (Tier 2)	101 582 70 1001 - 101 582 70 9999	↓
BW 213 DH-4 BVC* + Plates	101 582 54 1018 - 101 582 54 9999	↓	BW 219 PD-4 (Tier 2)	101 582 73 1001 - 101 582 73 9999	↓
BW 213 DH-4 BVC*	101 582 53 1002 - 101 582 53 9999	↓	BW 219 PDH-4 (Tier 2)	101 582 71 1001 - 101 582 71 9999	↓
BW 213 DH-4	101 582 51 1002 - 101 582 51 9999	↓	BW 219 D-4	101 584 02 1001 - 101 584 02 9999	770 582 77
BW 213 PDH-4	101 582 52 1003 - 101 582 52 9999	↓	BW 219 D-4 (Tier 3)	101 582 10 1001 - 101 582 10 9999	↓

* Please order Vario kit, too.

1000 h service kit

Machine	Serial no. from/to	T/N
BW 219 DH-4	101 584 04 1001 - 101 584 04 9999	770 582 77
BW 219 DH-4 (Tier 3)	101 582 77 1001 - 101 582 77 9999	
BW 219 PD-4	101 584 03 1001 - 101 584 03 9999	
BW 219 PD-4 (Tier 3)	101 582 11 1001 - 101 582 11 9999	
BW 219 PDH-4	101 584 05 1001 - 101 584 05 9999	
BW 219 PDH-4 (Tier 3)	101 582 78 1001 - 101 582 78 9999	▼
BW 226 DH-4	101 582 80 1001 - 101 582 80 9999	582 021 12
BW 226 DH-4 BVC*	101 582 82 1001 - 101 582 82 9999	
BW 226 PDH-4	101 582 81 1001 - 101 582 81 9999	▼
BW 226 DH-4	101 584 06 1001 - 101 584 06 9999	770 582 77
BW 226 DH-4 BVC*	101 584 08 1001 - 101 584 08 9999	
BW 226 DH-4 BVC*	101 582 86 1001 - 101 582 86 9999	
BW 226 DH-4 (Tier 3)	101 582 88 1001 - 101 582 88 9999	
BW 226 PDH-4 (Tier 3)	101 582 89 1001 - 101 582 89 9999	
BW 226 PDH-4	101 584 07 1001 - 101 584 07 9999	▼

Oil service kit



The BOMAG oil service kit includes all filter elements needed for the oil service.

Machine	Serial no. from/to	T/N
BW 177 D-4 (Tier 3)	101 583 27 1001 - 101 583 27 9999	775 582 20
BW 177 D-4	101 582 20 1003 - 101 582 20 9999	
BW 177 DH-4 BVC (Tier 3)*	101 583 28 1001 - 101 583 28 9999	
BW 177 DH-4 TCD	101 583 32 1001 - 101 583 32 9999	
BW 177 DH-4	101 584 10 1001 - 101 584 10 9999	
BW 177 DHC-4 (Tier 3)	101 583 29 1001 - 101 583 29 9999	
BW 177 PD-4	101 583 43 1001 - 101 583 43 9999	
BW 177 PDH-4 TCD	101 583 31 1001 - 101 583 31 9999	▼
BW 177 PDHC-4 TCD	101 583 30 1001 - 101 583 30 9999	775 582 50
BW 177 DH-4 BVC*	101 582 23 1005 - 101 582 23 9999	
BW 177 DH-4	101 582 21 1003 - 101 582 21 9999	
BW 177 DHC-4	101 582 00 1001 - 101 582 00 9999	▼
BW 177 PDH-4	101 582 22 1001 - 101 582 22 9999	
BW 179 DH-4 TCD	101 583 33 1001 - 101 583 33 9999	775 582 20
BW 179 DHC-4 TCD	101 583 34 1001 - 101 583 34 9999	
BW 179 PDH-4 TCD	101 583 35 1001 - 101 583 35 9999	
BW 179 PDHC-4 TCD	101 583 36 1001 - 101 583 36 9999	▼
BW 179 DH-4	101 582 24 1003 - 101 582 24 9999	775 582 50
BW 179 PDH-4	101 582 25 1001 - 101 582 25 9999	
BW 211 D-4	101 582 40 1001 - 101 582 40 9999	
BW 211 D-4	101 582 41 1002 - 101 582 41 9999	
BW 211 D-4	101 583 09 1001 - 101 583 09 9999	
BW 211 D-40	101 582 42 1001 - 101 582 42 9999	
BW 211 DE-40	101 583 45 1001 - 101 583 45 9999	
BW 211 PD-4	101 582 45 1001 - 101 582 45 9999	
BW 211 PD-4	101 583 10 1001 - 101 583 10 9999	
BW 211 PD-40	101 582 47 1001 - 101 582 47 9999	
BW 212 D-40	101 582 43 1002 - 101 582 43 9999	
BW 212 D-40	101 583 49 1001 - 101 583 49 9999	
BW 212 PD-40	101 582 48 1001 - 101 582 48 9999	
BW 212 PD-40	101 583 50 1001 - 101 583 50 9999	▼
BW 213 DH-4 + Platten	101 583 37 1001 - 101 583 37 9999	582 021 48
BW 213 DH-4 BVC + Platten*	101 583 06 1001 - 101 583 06 9999	
BW 213 DH-4 BVC*	101 583 16 1001 - 101 583 16 9999	
BW 213 DH-4 BVC*	101 584 12 1001 - 101 584 12 9999	
BW 213 DH-4	101 583 14 1001 - 101 583 14 9999	▼

*Please order Vario kit, too

Oil service kit

Machine	Serial no. from/to	T/N
BW 213 DH-4	101 584 11 1001 - 101 584 11 9999	582 021 48
BW 213 PDH-4	101 583 15 1001 - 101 583 15 9999	▼
BW 213 D-4	101 582 50 1002 - 101 582 50 9999	775 582 50
BW 213 D-4	101 583 08 1003 - 101 583 08 9999	
BW 213 D-40	101 582 44 1002 - 101 582 44 9999	
BW 213 DH-4 BVC + Plates*	101 582 54 1002 - 101 582 54 1014	
BW 213 DH-4 BVC + Plates*	101 582 54 1018 - 101 582 54 9999	
BW 213 DH-4 BVC*	101 582 53 1002 - 101 582 53 9999	
BW 213 DH-4	101 582 51 1002 - 101 582 51 9999	
BW 213 DHC-4	101 582 04 1001 - 101 582 04 9999	
BW 213 DHC-4	101 583 11 1001 - 101 583 11 9999	
BW 213 PD-4	101 582 46 1001 - 101 582 46 9999	
BW 213 PD-4	101 583 13 1001 - 101 583 13 9999	
BW 213 PD-40	101 582 49 1001 - 101 582 49 9999	
BW 213 PDH-4	101 582 52 1003 - 101 582 52 9999	
BW 213 PDHC-4	101 582 05 1001 - 101 582 05 9999	
BW 213 PDHC-4	101 583 12 1001 - 101 583 12 9999	▼
BW 214 DH-4	101 583 19 1001 - 101 583 19 9999	582 021 48
BW 214 PDH-4	101 583 20 1001 - 101 583 20 9999	▼
BW 214 D-4	101 583 42 1001 - 101 583 42 9999	775 582 50
BW 214 DH -4	101 582 58 1001 - 101 582 58 9999	
BW 214 DHC-4	101 582 06 1001 - 101 582 06 9999	
BW 214 DHC-4	101 583 17 1001 - 101 583 17 9999	
BW 214 PDH -4	101 582 59 1001 - 101 582 59 9999	
BW 214 PDHC-4	101 582 07 1001 - 101 582 07 9999	
BW 214 PDHC-4	101 583 18 1001 - 101 583 18 9999	▼
BW 216 D-4	101 583 23 1001 - 101 583 23 9999	582 021 48
BW 216 D-4	101 584 13 1001 - 101 584 13 9999	
BW 216 DHC-4	101 583 21 1001 - 101 583 21 9999	
BW 216 PD-4	101 583 24 1001 - 101 583 24 9999	
BW 216 PDHC-4	101 583 22 1001 - 101 583 22 9999	▼
BW 216 DH-4	101 582 60 1004 - 101 582 60 9999	775 582 08
BW 216 DHC-4	101 582 08 1001 - 101 582 08 9999	
BW 216 PD-40	101 583 40 1001 - 101 583 40 9999	
BW 216 PDH-4	101 582 61 1001 - 101 582 61 9999	
BW 216 PDHC-4	101 582 09 1001 - 101 582 09 9999	▼
BW 216 D-4	101 582 62 1002 - 101 582 62 9999	775 582 50
BW 216 D-40	101 583 39 1001 - 101 582 39 9999	▼
BW 216 DH-4	101 584 00 1001 - 101 584 00 9999	775 582 77
BW 216 DH-4	101 582 64 1001 - 101 582 64 9999	
BW 216 PDH-4	101 584 01 1001 - 101 584 01 9999	
BW 216 PDH-4	101 582 65 1001 - 101 582 65 9999	▼
BW 218 D-40	101 583 41 1001 - 101 583 41 9999	775 582 08
BW 219 D-4	101 582 72 1001 - 101 582 72 9999	
BW 219 DH-4 (Tier 2)	101 582 70 1001 - 101 582 70 9999	
BW 219 PD-4 (Tier 2)	101 582 73 1001 - 101 582 73 9999	
BW 219 PDH-4 (Tier 2)	101 582 71 1001 - 101 582 71 9999	▼
BW 219 D-4	101 584 02 1001 - 101 584 02 9999	775 582 77
BW 219 D-4 (Tier 3)	101 582 10 1001 - 101 582 10 9999	
BW 219 DH-4	101 584 04 1001 - 101 584 04 9999	
BW 219 DH-4 (Tier 3)	101 582 77 1001 - 101 582 77 9999	
BW 219 PD-4	101 584 03 1001 - 101 584 03 9999	
BW 219 PD-4 (Tier 3)	101 582 11 1001 - 101 582 11 9999	
BW 219 PDH-4	101 584 05 1001 - 101 584 05 9999	
BW 219 PDH-4 (Tier 3)	101 582 78 1001 - 101 582 78 9999	▼
BW 226 DH-4	101 582 80 1001 - 101 582 80 9999	775 582 08
BW 226 DH-4 BVC*	101 582 82 1001 - 101 582 82 9999	▼
BW 226 PDH-4	101 582 81 1001 - 101 582 81 9999	
BW 226 DH-4	101 584 06 1001 - 101 584 06 9999	775 582 77
BW 226 DH-4 BVC*	101 582 86 1001 - 101 582 86 9999	
BW 226 DH-4 BVC*	101 584 08 1001 - 101 584 08 9999	
BW 226 DH-4 (Tier 3)	101 582 88 1001 - 101 582 88 9999	
BW 226 PDH-4 (Tier 3)	101 582 89 1001 - 101 582 89 9999	
BW 226 PDH-4	101 584 07 1001 - 101 584 07 9999	▼

Vario kit

Machine	Serial no. from/to	T/N
BW 177 DH-4 BVC (Tier 3)	101 583 28 1001 - 101 583 28 9999	582 021 31
BW 177 DH-4 BVC	101 582 23 1005 - 101 582 23 9999	
BW 213 DH-4 BVC + Platten	101 582 54 1002 - 101 582 54 9999	
BW 213 DH-4 BVC + Platten	101 583 06 1001 - 101 583 06 9999	
BW 213 DH-4 BVC	101 582 53 1002 - 101 582 53 9999	
BW 213 DH-4 BVC	101 583 16 1001 - 101 583 16 9999	
BW 213 DH-4 BVC	101 584 12 1001 - 101 584 12 9999	
BW 226 DH-4 BVC	101 584 08 1001 - 101 584 08 9999	
BW 226 DH-4 BVC	101 582 85 1002 - 101 582 85 9999	
BW 226 DH-4 BVC	101 582 82 1001 - 101 582 82 9999	
BW 226 DH-4 BVC	101 582 86 1001 - 101 582 86 9999	▼



Please observe the machine-specific maintenance schedules.

Rubber to metal bonded rail & rubber buffers



BOMAG genuine rubber buffers have been specially developed and matched to individual types of rollers. The buffers have long service lives achieved by optimised geometry and the subsequent, more homogeneous distribution of tension. The high quality natural rubber buffers isolate the exciter vibrations of the drums from the roller frame, all fitted parts and the operator's platform. They reduce the transmission of structure-borne noise and provide optimum driving comfort without any disturbing vibrations.

Machine	Specification	T/N	Required quantity per machine
Rubber to metal bonded rail			
BW 211 - BW 214	Rubber to metal bonded rail	061 801 00	4
BW 216 - BW 218	Rubber to metal bonded rail		6
BW 219 - BW 226	Rubber to metal bonded rail		8
BW 332	Rubber to metal bonded rail		12
Rubber buffer			
BW 177 - BW 179	Rubber buffer	061 299 02	10
BW 211 - BW 213 D	Rubber buffer		9
BW 213 DH - BW 214	Rubber buffer		12
BW 216 - BW 226	Rubber buffer		16
BW 332	Rubber buffer		24
BW 177 - BW 332	Rubber buffer / cabin mount	061 803 14	4
BW 177 - BW 332	Rubber buffer / cooler mounting	061 160 81	2

Smooth drum scraper



The hard-wearing original BOMAG contact scrapers at the front and rear ensure the drum surfaces are kept clean thanks to the high quality polyurethane. The scrapers can be added as required easily and quickly.

Machine	Specification	T/N	Required quantity per machine
BW 177 - BW 179	Scrapers	580 302 34	4
BW 211 - BW 226	Scrapers	580 302 57	4

Tamping feet scrapers



Patented and unique: the scraper teeth are grouped together on bars and can be centrally adjusted in no time at all. The special teeth profile minimises friction losses. The teeth caps are made of highly wear resistant, hardened manganese steel.

If the case arises, they can be exchanged easily and quickly by means of a knockout punch or assembly mandrel.

Machine	Specification	T/N	Required quantity per machine
BW 177 - BW 179	Scraper tooth replacement cap for PD scrapers	580 305 21	14
BW 177 - BW 179	Dowel pin	091 512 15	14
BW 211 - BW 226	Scraper tooth replacement cap for PD scrapers	580 305 21	18
BW 211 - BW 226	Dowel pin	091 512 15	18
BW 177 - BW 179	PD scrapers, complet	580 302 72	2
BW 177 - BW 179	Hexagon screws	071 320 77	8
BW 177 - BW 179	Panels	085 121 36	8
BW 211 - BW 226	PD scrapers, complet	580 302 74	2
BW 211 - BW 226	Hexagon screws	071 320 77	8
BW 211 - BW 226	Panels	085 121 36	8



BOMAG Genuine Parts kits for tandem rollers

Service kits for tandem rollers

Service is vital to guaranteeing a long service life. The 1000 h service kits for tandem rollers include all filters, V-belts and seals needed for the annual service.



1000 h service kit

Machine	Serial no. from/to	T/N
BW 141 AD-4 AM	101 920 20 1001 - 101 920 20 1026	770 920 00
BW 141 AD-4	101 920 00 1003 - 101 920 00 1164	▼
BW 141 AD-4 AM	101 920 20 1027 - 101 920 20 9999	770 920 01
BW 141 AD-4	101 920 00 1165 - 101 920 00 9999	▼
BW 141 AD-4 AM	101 920 24 1001 - 101 920 24 9999	770 920 04
BW 141 AD-4	101 920 07 1001 - 101 920 07 9999	▼
BW 141 AD-4	101 920 60 1001 - 101 920 60 9999	▼
BW 151 AC-4 AM	101 920 41 1001 - 101 920 41 1020	770 920 00
BW 151 AC-4	101 920 10 1001 - 101 920 10 1107	▼
BW 151 AD-4 AM	101 920 21 1001 - 101 920 21 1042	▼
BW 151 AD-4	101 920 01 1001 - 101 920 01 1180	▼
BW 151 AC-4 AM	101 920 41 1021 - 101 920 41 9999	770 920 01
BW 151 AC-4	101 920 10 1108 - 101 920 10 9999	▼
BW 151 AD-4 AM	101 920 21 1043 - 101 920 21 9999	▼
BW 151 AD-4	101 920 01 1181 - 101 920 01 9999	▼
BW 151 AC-4 AM	101 920 42 1001 - 101 920 42 9999	770 920 04
BW 151 AC-4	101 920 16 1001 - 101 920 16 9999	▼
BW 151 AD-4 AM	101 920 67 1001 - 101 920 67 9999	▼
BW 151 AD-4 AM	101 920 27 1001 - 101 920 27 9999	▼
BW 151 AD-4	101 920 08 1001 - 101 920 08 9999	▼
BW 151 AD-4	101 920 61 1001 - 101 920 61 9999	▼
BW 154 ACP	101 870 63 1001 - 101 870 63 1003	770 870 61
BW 154 ACP-AM	101 870 62 1001 - 101 870 62 1028	▼
BW 154 AP-AM	101 870 60 1001 - 101 870 60 1117	▼
BW 154 AP	101 870 61 1001 - 101 870 61 1033	▼
BW 154 ACP	101 870 63 1004 - 101 870 63 9999	770 870 62
BW 154 ACP-AM	101 870 62 1029 - 101 870 62 9999	▼
BW 154 AP-AM	101 870 60 1118 - 101 870 60 9999	▼
BW 154 AP	101 870 61 1034 - 101 870 61 9999	▼
BW 154 AD-4	101 920 31 1001 - 101 920 31 1046	770 920 00
BW 154 AD-4 AM	101 920 51 1001 - 101 920 51 1077	▼
BW 154 AD-4	101 920 31 1047 - 101 920 31 9999	770 920 01
BW 154 AD-4 AM	101 920 51 1078 - 101 920 51 9999	▼
BW 154 AD-4 AM	101 920 52 1001 - 101 920 52 9999	770 920 04
BW 154 AD-4	101 920 32 1001 - 101 920 32 9999	▼
BW 161 AC-4	101 920 11 1001 - 101 920 11 1001	770 920 02
BW 161 AD-4	101 920 02 1005 - 101 920 02 1052	▼
BW 161 ADH-4	101 920 04 1001 - 101 920 04 1004	▼
BW 161 AC-4	101 920 11 1002 - 101 920 11 9999	770 920 03
BW 161 AD-4	101 920 02 1053 - 101 920 02 9999	▼
BW 161 ADH-4	101 920 04 1005 - 101 920 04 9999	▼
BW 161 AC-4	101 920 17 1001 - 101 920 17 9999	770 920 09
BW 161 AD-4	101 920 09 1001 - 101 920 09 9999	▼
BW 161 AD-4	101 920 62 1001 - 101 920 62 9999	▼
BW 161 AD-40	101 920 40 1001 - 101 920 40 9999	▼

1000 h service kit

Machine	Serial no. from/to	T/N
BW 170 AD-AM	101 870 11 1001 - 101 870 11 9999	770 870 13
BW 170 AD	101 870 01 1001 - 101 870 01 9999	▼
BW 170 AD	101 870 02 1001 - 101 870 02 9999	▼
BW 170 AD-2 AM	101 870 13 1001 - 101 870 13 9999	▼
BW 170 AP-AM	101 870 14 1001 - 101 870 14 9999	▼
BW 170 AP-AM	101 870 15 1001 - 101 870 15 1003	770 870 15
BW 170 AP-AM	101 870 15 1001 - 101 870 15 1003	770 870 16
BW 174 AC-AM	101 870 45 1001 - 101 870 45 9999	770 870 13
BW 174 AC	101 870 41 1001 - 101 870 41 9999	▼
BW 174 AC-2	101 870 43 1001 - 101 870 43 9999	▼
BW 174 AC-2	101 870 48 1001 - 101 870 48 9999	▼
BW 174 ACP	101 870 42 1001 - 101 870 42 9999	▼
BW 174 ACP-AM	101 870 47 1001 - 101 870 47 9999	▼
BW 174 AD-AM	101 870 51 1001 - 101 870 51 9999	▼
BW 174 AD	101 870 31 1001 - 101 870 31 9999	▼
BW 174 AD-2 AM	101 870 53 1001 - 101 870 53 9999	▼
BW 174 AD-2	101 870 33 1001 - 101 870 33 9999	▼
BW 174 AP-3 AM	101 870 54 1001 - 101 870 54 9999	▼
BW 174 AP-3	101 870 34 1001 - 101 870 34 9999	▼
BW 174 ACP	101 870 44 1001 - 101 870 44 1013	770 870 15
BW 174 ACP-AM	101 870 49 1001 - 101 870 49 1006	▼
BW 174 AP (Tier 3)	101 870 35 1001 - 101 870 35 1031	▼
BW 174 AP-AM (Tier 3)	101 870 55 1001 - 101 870 55 1115	▼
BW 174 ACP	101 870 44 1014 - 101 870 44 9999	770 870 16
BW 174 ACP-AM	101 870 49 1001 - 101 870 49 1006	▼
BW 174 AP (Tier 3)	101 870 35 1032 - 101 870 35 9999	▼
BW 174 AP-AM (Tier 3)	101 870 55 1116 - 101 870 55 9999	▼
BW 174 AP-4 AM	101 870 70 1050 - 101 870 70 9999	770 870 70
BW 174 AP-4	101 870 71 1003 - 101 870 71 9999	▼
BW 174 AP-4 AM	101 870 70 1050 - 101 870 70 9999	770 870 71
BW 174 AP-4	101 870 71 1003 - 101 870 71 9999	▼
BW 190 AD-4 AM	101 920 26 1002 - 101 920 26 1015	770 920 02
BW 190 AD-4	101 920 06 1005 - 101 920 06 1016	▼
BW 190 AD-4 AM	101 920 26 1016 - 101 920 06 9999	770 920 03
BW 190 AD-4	101 920 06 1017 - 101 920 06 9999	▼
BW 190 AD-4 AM (Tier 3)	101 920 29 1001 - 101 920 29 9999	770 920 29
BW 190 AD-4	101 920 15 1001 - 101 920 15 9999	▼
BW 190 AD-4	101 920 65 1001 - 101 920 65 9999	▼
BW 190 AD-4	101 920 66 1001 - 101 920 66 9999	▼
BW 202 AD-4	101 920 03 1003 - 101 920 03 1006	770 920 02
BW 202 AD-4	101 920 03 1007 - 101 920 03 9999	770 920 03
BW 202 AD-4 (Tier 3)	101 920 12 1001 - 101 920 12 9999	770 920 29
BW 202 AD-4	101 920 63 1001 - 101 920 63 9999	▼
BW 203 AD-4	101 920 05 1001 - 101 920 05 1007	770 920 02
BW 203-4 AM	101 920 25 1001 - 101 920 25 1011	▼
BW 203 AD-4	101 920 05 1008 - 101 920 05 9999	770 920 03
BW 203-4 AM	101 920 25 1012 - 101 920 25 9999	▼
BW 203 AD-4 AM	101 920 28 1001 - 101 920 28 9999	770 920 29
BW 203 AD-4	101 920 14 1001 - 101 920 14 9999	▼
BW 203 AD-4	101 920 64 1001 - 101 920 64 9999	▼

Oil service kit



The BOMAG oil service kit includes all filter elements needed for the oil service.

Machine	Serial no. from/to	T/N
BW 141 AD-4 AM	101 920 20 1001 - 101 920 20 9999	775 582 20
BW 141 AD-4	101 920 00 1003 - 101 920 00 9999	▼
BW 141 AD-4 AM	101 920 24 1001 - 101 920 24 9999	775 920 07
BW 141 AD-4	101 920 07 1001 - 101 920 07 9999	▼
BW 141 AD-4	101 920 60 1001 - 101 920 60 9999	▼
BW 151 AC-4 AM	101 920 41 1001 - 101 920 41 9999	775 582 20
BW 151 AC-4	101 920 10 1001 - 101 920 10 9999	▼
BW 151 AD-4 AM	101 920 21 1001 - 101 920 21 9999	▼
BW 151 AD-4	101 920 01 1001 - 101 920 01 9999	▼
BW 151 AC-4 AM	101 920 42 1001 - 101 920 42 9999	775 920 07
BW 151 AC-4	101 920 16 1001 - 101 920 16 9999	▼
BW 151 AD-4 AM	101 920 67 1001 - 101 920 67 9999	▼
BW 151 AD-4 AM	101 920 27 1001 - 101 920 27 9999	▼
BW 151 AD-4	101 920 08 1001 - 101 920 08 9999	▼
BW 151 AD-4	101 920 61 1001 - 101 920 61 9999	▼
BW 154 AD-4	101 920 31 1001 - 101 920 31 9999	775 582 20
BW 154 AD-4 AM	101 920 51 1001 - 101 920 51 9999	▼
BW 154 ACP	101 870 63 1001 - 101 870 63 1003	775 870 15
BW 154 ACP-AM	101 870 62 1001 - 101 870 62 1029	▼
BW 154 AP-AM	101 870 60 1001 - 101 870 60 1121	▼
BW 154 AP	101 870 61 1001 - 101 870 61 1034	▼
BW 154 ACP	101 870 63 1004 - 101 870 63 9999	775 870 60
BW 154 ACP-AM	101 870 62 1030 - 101 870 62 9999	▼
BW 154 AP-AM	101 870 60 1122 - 101 870 60 9999	▼
BW 154 AP	101 870 61 1035 - 101 870 61 9999	▼
BW 154 AD-4 AM	101 920 52 1001 - 101 920 52 9999	775 920 07
BW 154 AD-4	101 920 32 1001 - 101 920 32 9999	▼
BW 161 AC-4	101 920 11 1001 - 101 920 11 9999	775 920 02
BW 161 AD-4	101 920 02 1005 - 101 920 02 9999	▼
BW 161 ADH-4	101 920 04 1001 - 101 920 04 9999	▼
BW 161 AC-4	101 920 17 1001 - 101 920 17 9999	775 920 07
BW 161 AD-4	101 920 09 1001 - 101 920 09 9999	▼
BW 161 AD-4	101 920 62 1001 - 101 920 62 9999	▼
BW 161 AD-40	101 920 40 1001 - 101 920 40 9999	▼
BW 170 AD-AM	101 870 11 1001 - 101 870 11 9999	775 870 02
BW 170 AD	101 870 01 1001 - 101 870 01 9999	▼
BW 170 AD	101 870 02 1001 - 101 870 02 9999	▼
BW 170 AD-2 AM	101 870 13 1001 - 101 870 13 9999	▼
BW 170 AP-AM	101 870 14 1001 - 101 870 14 9999	▼
BW 170 AP-AM	101 870 15 1001 - 101 870 15 1003	775 870 15
BW 170 AP-AM	101 870 15 1004 - 101 870 15 9999	775 870 16
BW 174 AC-AM	101 870 45 1001 - 101 870 45 9999	775 870 02
BW 174 AC	101 870 41 1001 - 101 870 41 9999	▼
BW 174 AC-2	101 870 43 1001 - 101 870 43 9999	▼
BW 174 AC-2	101 870 48 1001 - 101 870 48 9999	▼
BW 174 ACP	101 870 42 1001 - 101 870 42 9999	▼
BW 174 ACP-AM	101 870 47 1001 - 101 870 47 9999	▼
BW 174 AD-AM	101 870 51 1001 - 101 870 51 9999	▼
BW 174 AD-AM-2	101 870 53 1001 - 101 870 53 9999	▼
BW 174 AD	101 870 31 1001 - 101 870 31 9999	▼
BW 174 AD-2	101 870 33 1001 - 101 870 33 9999	▼
BW 174 AP-3 AM	101 870 54 1001 - 101 870 54 9999	▼
BW 174 AP-3	101 870 34 1001 - 101 870 34 9999	▼
BW 174 ACP	101 870 44 1001 - 101 870 44 1013	775 870 15
BW 174 ACP-AM	101 870 49 1001 - 101 870 49 9999	▼
BW 174 AP (Tier 3)	101 870 35 1001 - 101 870 35 1031	▼
BW 174 AP-AM (Tier 3)	101 870 55 1001 - 101 870 55 1115	▼
BW 174 ACP	101 870 44 1014 - 101 870 44 9999	775 870 16
BW 174 ACP-AM	101 870 49 1001 - 101 870 49 1006	▼
BW 174 AP (Tier 3)	101 870 35 1032 - 101 870 35 9999	▼

Oil service Kits

Machine	Serial no. from/to	T/N
BW 174 AP-4 AM	101 870 70 1050 - 101 870 70 9999	775 870 16
BW 174 AP-AM (Tier 3)	101 870 55 1116 - 101 870 55 9999	▼
BW 174 AP-4 AM	101 870 70 1001 - 101 870 70 1049	775 870 70
BW 174 AP-4	101 870 71 1001 - 101 870 71 9999	▼
BW 190 AD-4 AM	101 920 26 1002 - 101 920 26 9999	775 920 02
BW 190 AD-4	101 920 06 1001 - 101 920 06 9999	▼
BW 190 AD-4	101 920 66 1001 - 101 920 66 9999	775 920 07
BW 190 AD-4 AM (Tier 3)	101 920 29 1001 - 101 920 29 9999	775 920 29
BW 190 AD-4	101 920 15 1001 - 101 920 15 9999	▼
BW 190 AD-4	101 920 65 1001 - 101 920 65 9999	▼
BW 202 AD-4	101 920 03 1003 - 101 920 03 9999	775 920 02
BW 202 AD-4 (Tier 3)	101 920 12 1001 - 101 920 12 9999	775 920 29
BW 202 AD-4	101 920 63 1001 - 101 920 63 9999	▼
BW 203 AD-4	101 920 05 1001 - 101 920 05 9999	775 920 02
BW 203-4 AM	101 920 25 1003 - 101 920 25 9999	▼
BW 203 AD-4 AM	101 920 28 1001 - 101 920 28 9999	775 920 29
BW 203 AD-4	101 920 14 1001 - 101 920 14 9999	▼
BW 203 AD-4	101 920 64 1001 - 101 920 64 9999	▼

Sprinkler nozzles



Please observe the machine-specific maintenance schedules.



BOMAG genuine sprinkler nozzles are perfectly protected from dirt by the integrated primary filters. Long service life is provided by the use of high quality synthetic materials. Nozzles and filters can easily be replaced on site manually without tools. To prevent unnecessary downtimes original spare nozzles should be available on every roller. Sprinkler nozzles and primary filters are both available as single packs or in packs of 25, 50 and 100.

Machine	Specification	T/N
BW 141 - BW 203	Sprinkler nozzle, single	055 560 52
▼	Sprinkler nozzle, 25 pcs.	055 560 52C25
▼	Sprinkler nozzle, 50 pcs.	055 560 52C50
▼	Sprinkler nozzle, 100 pcs.	055 560 52C100
▼	Primary filter, single	055 560 50
▼	Primary filter, 25 pcs.	055 560 50C25
▼	Primary filter, 50 pcs.	055 560 50C50
▼	Primary filter, 100 pcs.	055 560 50C100



Scrapers



The hard-wearing BOMAG genuine scrapers at the front and rear ensure the drum surfaces are kept smooth and clean thanks to the high quality polyurethane.

Machine	Serial no. from/to	T/N	Required quantity per machine
BW 141 AD-4	101 920 07 1001 - 101 920 07 9999	841 101 03	4
BW 141 AD-4	101 920 60 1001 - 101 920 60 9999	▼	4
BW 141 AD-4 AM	101 920 24 1001 - 101 920 24 9999	▼	4
BW 151 AC-4	101 920 16 1027 - 101 920 16 9999	842 301 07	2
BW 151 AC-4 AM	101 920 42 1001 - 101 920 42 9999	▼	2
BW 151 AD-4	101 920 08 1001 - 101 920 08 9999	▼	4
BW 151 AD-4	101 920 61 1001 - 101 920 61 9999	▼	4
BW 151 AD-4 AM	101 920 27 1001 - 101 920 27 9999	▼	4
BW 151 AC-4	101 920 16 1002 - 101 920 16 9999	920 174 06	2
BW 151 AC-4	101 920 41 1001 - 101 920 41 1021	▼	2
BW 151 AC-4 AM	101 920 42 1001 - 101 920 42 9999	▼	2
BW 154 ACP	101 870 63 1001 - 101 870 63 9999	841 101 03	2
BW 154 ACP-AM	101 870 62 1001 - 101 870 62 9999	▼	2
BW 154 AP	101 870 61 1002 - 101 870 61 9999	▼	4
BW 154 AP-AM	101 870 60 1004 - 101 870 60 9999	▼	4
BW 154 AD-4	101 920 32 1001 - 101 920 32 9999	842 301 07	4
BW 154 AD-4 AM	101 920 52 1001 - 101 920 52 9999	▼	4
BW 154 ACP	101 870 63 1001 - 101 870 63 9999	876 110 92	2
BW 154 ACP-AM	101 870 62 1001 - 101 870 62 9999	▼	2
BW 161 AC-4	101 920 17 1001 - 101 920 17 9999	842 301 07	2
BW 161 AC-4	101 920 66 1001 - 101 920 66 9999	▼	2
BW 161 AD-4	101 920 09 1002 - 101 920 09 9999	▼	4
BW 161 AD-4	101 920 62 1001 - 101 920 62 9999	▼	4
BW 161 AD-40	101 920 40 1001 - 101 920 40 9999	▼	4

Machine	Serial no. from/to	T/N	Required quantity per machine
BW 161 AC-4	101 920 17 1001 - 101 920 17 9999	921 108 58	2
BW 161 AC-4	101 920 66 1001 - 101 920 66 9999	▼	2
BW 174 AP-4	101 870 71 1003 - 101 870 71 9999	842 301 07	4
BW 174 AP-4 AM	101 870 70 1006 - 101 870 70 9999	▼	4
BW 190 AD-4	101 920 15 1001 - 101 920 15 9999	920 176 08	4
BW 190 AD-4 AM	101 920 29 1002 - 101 920 29 9999	▼	4
BW 202 AD-4	101 920 12 1001 - 101 920 12 9999	413 009 04	4
BW 202 AD-4	101 920 63 1001 - 101 920 63 9999	▼	4
BW 202 AD-4	101 920 65 1001 - 101 920 65 9999	▼	4
BW 203 AD-4	101 920 14 1001 - 101 920 14 9999	▼	4
BW 203 AD-4	101 920 05 1001 - 101 920 05 1060	▼	4
BW 203 AD-4	101 920 64 1001 - 101 920 64 9999	▼	4
BW 203 AD-4 AM	101 920 25 1003 - 101 920 25 1041	▼	4
BW 203 AD-4 AM	101 920 28 1001 - 101 920 28 9999	▼	4



Your BOMAG Genuine Parts brochures

Please request our clearly arranged BOMAG Genuine Parts brochures and get an overview of all relevant

- BOMAG Genuine Parts
 - BOMAG expendable part kits
 - BOMAG service kits
 - BOMAG emergency kits
- for your machine.

Additionally, the brochures contain valuable tips which will help you in your daily work.

The following brochures are available in German and English:

- BOMAG service for recyclers/stabilizers
- BOMAG service for refuse compactors
- BOMAG service for cold milling machines
- BOMAG service for finishers

All BOMAG service brochures are also available for download at www.bomag.com.



www.bomag.com/service-media

