

CDP-CX210/CX681

SERVICE MANUAL

US Model

CDP-CX210/CX681

Canadian Model

CDP-CX210

- CDP-CX210 is similar to the earlier CDP-CX200 (CND) model.
- CDP-CX681 is similar to the earlier CDP-CX200 (CND) model.
- Refer to CDP-CX200 service manual (9-960-723-XX) for information not contained in this service manual.

DIFFERENCE TABLE

NOTE:

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Abbreviation
CND : Canadian model

Page	Ref. No.	CDP-CX200 (US)			CDP-CX210/CX681		
		<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
		*** EXPLODED VIEWS ***			*** EXPLODED VIEWS ***		
50	1	3-363-099-01	SCREW (CASE 3 TP2)		3-710-901-11	SCREW, TAPPING (CX205)	
					3-701-901-01	SCREW, TAPPING (CX681)	
	7	* 4-982-790-01	PANEL, BACK		* 4-900-213-01	PANEL, BACK (CX210:US)	
					* 4-900-213-11	PANEL, BACK (CX210:CND)	
					* 4-900-213-21	PANEL, BACK (CX681:US)	

COMPACT DISC PLAYER

SONY®



Page	Ref. No.	CDP-CX200 (US)			CDP-CX210/CX681		
		Part No.	Description	Remark	Part No.	Description	Remark
52	101	X-4947-588-1	LID (200) ASSY		X-4948-429-1	LID (205) ASSY (CX681) NOT USED (CX205)	
	108	X-4947-216-1	PANEL, ASSY, FRONT		X-4949-904-1	PANEL ASSY, FRONT (CX210)	
	133		NOT USED		X-4949-908-1	PANEL ASSY, FRONT (CX681)	
	134		NOT USED		X-4950-039-1	WINDOW (LID) ASSY (CX210)	
	135		NOT USED		4-983-370-01	LID (R)(CX210)	
					4-982-797-11	SPRING (A), TORSION (CX210)	
62		*** ACCESSORIES & PACKING MATERIALS ***			*** ACCESSORIES & PACKING MATERIALS ***		
		1-473-800-11	REMOTE COMMANDER (RM-DX200)			NOT USED (CX681)	
		3-856-765-21	MANUAL, INSTRUCTION (ENGLISH)		3-862-573-11	MANUAL, INSTRUCTION (ENGLISH)(CX210)	
					3-862-573-21	MANUAL, INSTRUCTION (FRENCH)(CX210:CND)	
					3-862-574-11	MANUAL, INSTRUCTION (ENGLISH)(CX681)	
		4-981-643-01	COVER, BATTERY (FOR RM-DX200)			NOT USED (CX681)	