



MAINTENANCE & PARTS MANUAL



SJ-800E Series
Battery Powered

Models: **ROUGH TERRAIN SERIES**
8831E & 8841E

For Service please call 800 275-9522

Skyjack Inc. Service Center 3451 Swenson Ave., St. Charles, IL. 60174..... FAX 630 262-0006

For Parts in North America and Asia please call 800 965-4626

Skyjack Inc. Parts Center 3451 Swenson Ave., St. Charles, IL. 60174..... FAX 888 782-4825

For Parts & Service in Europe please call 44-1691-676-235

Skyjack Europe, Glovers Meadow, Maesbury Rd., Oswestry, Shropshire, U.K....FAX 44-1691- 676-239

119153AN

Printed in Canada

April 2007

Table of Contents

Section - Paragraph	Page No.	S
Section 1 - About Your Aerial Platform		E
Aerial Platform Definition.....	1	C
Purpose of Equipment.....	1	T
Use of Equipment	1	I
Manual.....	1	O
Operator	1	N
Scope of this Manual	2	
Operator Safety Reminders	3	
Electrocution Hazard	3	
Safety Precautions	4	
Section 2 - List of Tables		
Table of Contents	1	
Section 3 - System Component Identification and Schematics - Operation		
Table of Contents	1	
Section 4 - Troubleshooting Information - Operation		
Table of Contents	1	
Section 5 - Maintenance and Service - Operation		
Table of Contents	1	
Section 6 - Parts Lists - Operation		
Table of Contents	1	
		I
		N
		D
		E
		X

1

2

3

4

5

6

The Safety Alert Symbol identifies important safety messages on machines, safety signs in manuals or elsewhere. When you see this symbol, be alert to the possibility of personal injury or death. Follow the instructions in the safety message.



This Safety Alert Symbol means attention!

Become alert! Your safety is involved.



DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

IMPORTANT

IMPORTANT indicates a procedure(s) essential for safe operation and which, if not followed, may result in a malfunction or damage to the machine.