



2015 QUICK REFERENCE PARTS GUIDE

COMPACT UTILITY EQUIPMENT & ATTACHMENTS, TRX WALK-BEHIND TRENCHERS,
STX STUMP GRINDERS, HANDLE BAR STUMP GRINDERS, PRO SNEAK™ VIBRATORY PLOWS

2015 CONTRACTOR CATALOG

TORO®



The Finer Points of Toro Parts

The Genuine Toro Parts Promise Since The Toro Company was formed, it has built its reputation on unmatched quality, service and commitment to very precise standards. Toro holds itself to these standards with all equipment and parts that bear the Toro name. Will-fit manufacturers cannot offer the same commitment to quality and often cut corners to reduce cost.

At The Toro Company we employ 140 full-time people whose jobs specifically support your service parts needs. Through teamwork and dedication this group delivers an industry-leading 98+% fill rate, on time deliveries and the customer care excellence you expect and deserve from The Toro Company.

The three areas that have the greatest impact on servicing your parts needs are Parts Distribution, Parts Order Services and Parts Inventory Control.

Toro Parts Distribution

The Toro Company's WorldWide Parts Distribution Center is located in Plymouth, Wisconsin, one hour north of Milwaukee. The distribution center covers nearly 10 acres and contains over 105,000 parts for Toro, Wheelhorse, and Lawn-Boy equipment.

The Toro parts distribution center is staffed year-round by 85 employees and operates three shifts beginning at 7:00 a.m. and ending at 12:00 a.m. Due to the seasonality of Toro's parts business, the distribution center staff will grow by almost 50% in the summer months.

On any given day in the summer months they will pick more than 17,000 lines and ship over 3,000 orders around the world. Their commitment to providing accurate orders and on-time delivery is unparalleled.

Toro Parts Order Services

The Toro Company's WorldWide Parts Order Services Department is located in Minneapolis, Minnesota and is responsible for managing all parts order-related functions.

The Order Services group is staffed by 22 full-time employees and will grow by 20% during the summer months. This group of people will answer over 106,000 phone calls and process over 440,000 orders this year.

Whether they are looking up a part, helping your dealer place an order, or resolving an issue, this group is always enthusiastic and professional.

Toro Parts Inventory Control

The Parts Inventory Control Department is located in Minneapolis, Minnesota. This 10-person team manages nearly 120,000 part numbers stocked in Toro's Plymouth and European parts distribution centers.

This group works directly with manufacturing plants and vendors on a daily basis to ensure every part is available for shipment. Whether they are strategically forecasting customer demand, working with suppliers on supply chain improvements, or analyzing slow-moving parts, this team is committed to making sure each and every part is available to meet your needs.

At The Toro Company we take our commitment to you very seriously. We'll let our performance speak for itself.

Table of Contents

The Finer Points of Toro Parts	inside front cover
Using the 2015 Toro Compact Utility Equipment Parts Reference Guide	4
How to Know When Your Products Were Produced	5
Traction Units	
Hydraulic System Parts	6 - 7
Engine and Fuel System Parts	8 - 9
Electrical and Drive System Parts	10 - 11
Accessories	12
Hydraulic Connectors	13
Attachments	
Augers	14
Backhoe Models 22412 and 23160	15
Backhoe Model 23163	16
Buckets	17
Concrete Breakers	18
Cultivator Model 23101	19
Fork Attachments	20
Grading Attachments	21
Power Rake Model 22425	22
Reamers and Boring Bits	23
Rotary Broom Model 22415	24
Snowthrower Model 22456	25
Stump Grinder Model 22429	26
Tiller Model 22445	27
Tracks	28
Trench Filler Model 22472	29
Trencher Attachments	30 - 31
TRX Trencher	32 - 33
Vibratory Plow	34
Wheels and Tires	35
Vibratory Plow and Trencher	36 - 37
Tree Care Line	38
STX Stump Grinders	39
Handle Bar Stump Grinders	40 - 41
Brush Chipper	42
Log Splitter	43
Compact Utility Equipment and Accessories	44 - 46
Program Parts Index	47 - 51
Notes	52



Using the 2015 Toro Quick Reference Parts Guide

HOW TO USE THIS GUIDE

This guide covers a wide variety of common replacement parts for Toro Compact Utility Equipment products manufactured through model year 2014.

The guide is organized by the following PRODUCT CATEGORIES:

- Traction Unit Parts and Accessories
- Hydraulic Connectors
- Attachment Parts and Accessories

The traction unit category is divided into functional part groupings like Engine Parts, Electrical Components, and Hydraulic System Parts.

The list of models for a part group may span across more than one page.

Only current parts (parts available at time of catalog printing) are listed in the tables.
Superseded parts are not listed for reference in this catalog.


Familiarize yourself with the specific model numbers of your products before searching for applicable program parts.
A reference guide to assist in determining the model year of manufacture can be found on the following pages.

To help locate the correct parts for your products, the catalog includes the following FEATURES:


- | | |
|-------------------|---|
| Table of Contents | For quick reference to product categories and functional part groupings |
| Part Number Index | Lists all parts referenced in this guide. The part numbers appear in numeric order.
Each entry includes the part description, program dealer price, commercial sale price and the page(s) on which the part appears. |

How To Know When Your Products Were Produced


Toro products produced prior to model year 2000 are stamped with a 5-digit model number followed by a 6-digit serial number. The first 2 digits of the serial number indicate the product model year as shown.

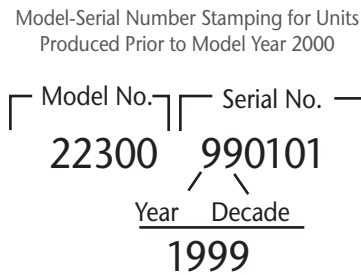


Toro products produced from model year 2000 to 2009 are stamped with a 5-digit model number followed by a 9-digit serial number. The first 2 digits of the serial number indicate the product model year as shown.

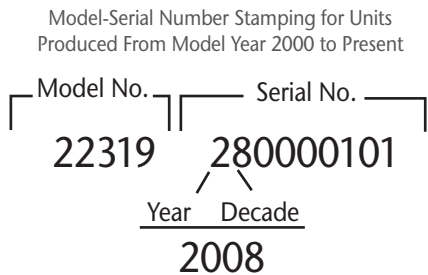

Toro products produced from model year 2010 to present are stamped with a 5-digit model number followed by a 9-digit serial number. The second and third digits of the serial number indicate the product model year as shown.

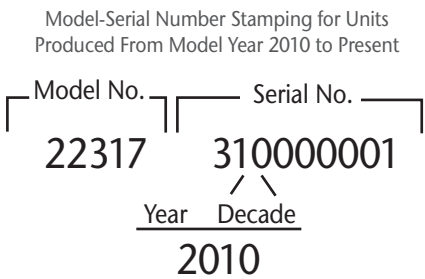

Traction Unit Hydraulic System Parts

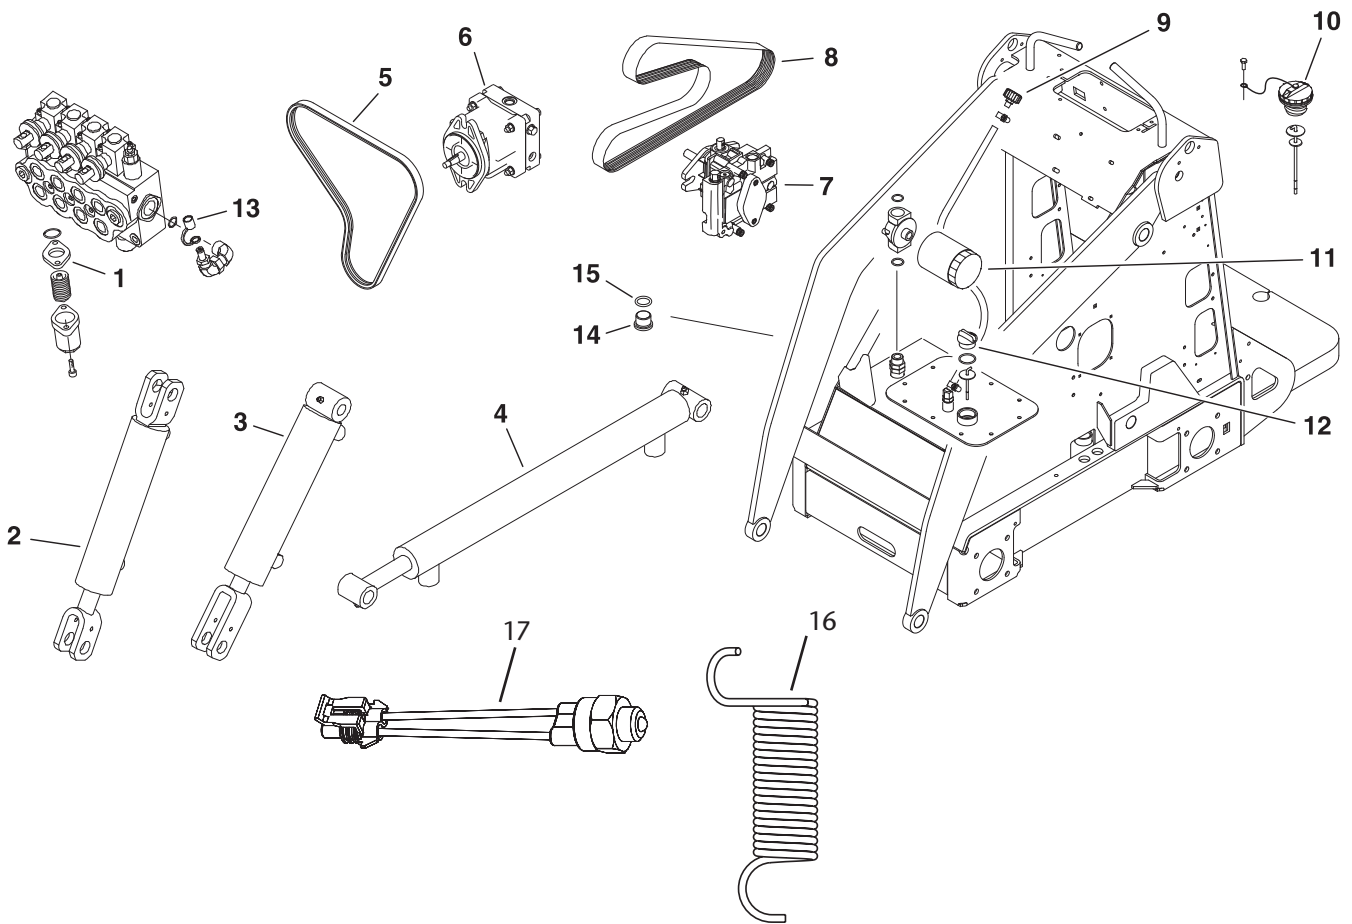


Traction Unit Hydraulic System Parts

Ref. No.	Part #	Description	22300 Dingo 222	22302 Dingo 220-D	22303 Dingo 320-D	22304 Dingo 222	22305 Dingo 322	22306 Dingo TX	22307 Dingo TX 425	22308 Dingo TX 413	22311 Dingo 220	22312 Dingo 323	22317 Dingo 220	22318 Dingo 323	22319 Dingo TX 525	22320 Dingo TX 525	22321 TX 427	22322 TX 427 Wide	22324 TX 525 Wide
1	99-3074	GASKET			X	X	X	X			X	X	X	X	X	X	X	X	X
2	100-4163	CYLINDER KIT		X	X	X	X				X	X							
2	99-1352	KIT-SEAL		X	X	X	X				X	X							
3	105-8370	TILT CYLINDER ASM						X	X						X	X	X	X	X
3	107-9320	KIT-CYLINDER,TILT						X	X										
4	106-3161	CYLINDER-HYD								X									
4	106-3162	CYLINDER-HYD								X									
4	99-6162	CYLINDER-LIFT						X	X										
5	108-6262	V-BELT													X	X			X
5	95-3611	V-BELT						X	X								X	X	
6	106-5705	PUMP-HYD, LH						X	X								X	X	
6	106-5706	PUMP-HYD, RH						X	X								X	X	
6	106-9590	PUMP-HYD, RH													X	X			X
6	106-9591	PUMP-HYD, LH													X	X			X
7	106-9470	PUMP-HYD								X									
8	106-9422	BELT-POLY-V								X									
9	68-6150	BREATHER			X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
10	93-7160	CAP-OIL, HYD						X								X			X
11	54-0110	FILTER-OIL, TRANSMISSION			X	X	X			X	X	X	X	X					
11	86-3010	FILTER-OIL						X	X						X	X	X	X	X
11	99-5084	FILTER-ELEMENT	X	X															
12	93-7498	PLUG-PLASTIC			X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
13	354-79	CAP-DUST			X		X	X	X	X	X	X	X	X	X	X	X	X	X
14	353-989	PLUG-HEX, HOLLOW													X	X			X
15	237-42	O-RING	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
16	112-2738	SPRING-TORSION						X	X						X	X	X	X	X
17	72-4310	SWITCH-BALL			X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
*	105-6184	SEAL OVERHAUL KIT								X									

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

* Not illustrated

Traction Unit Engine & Fuel System Parts

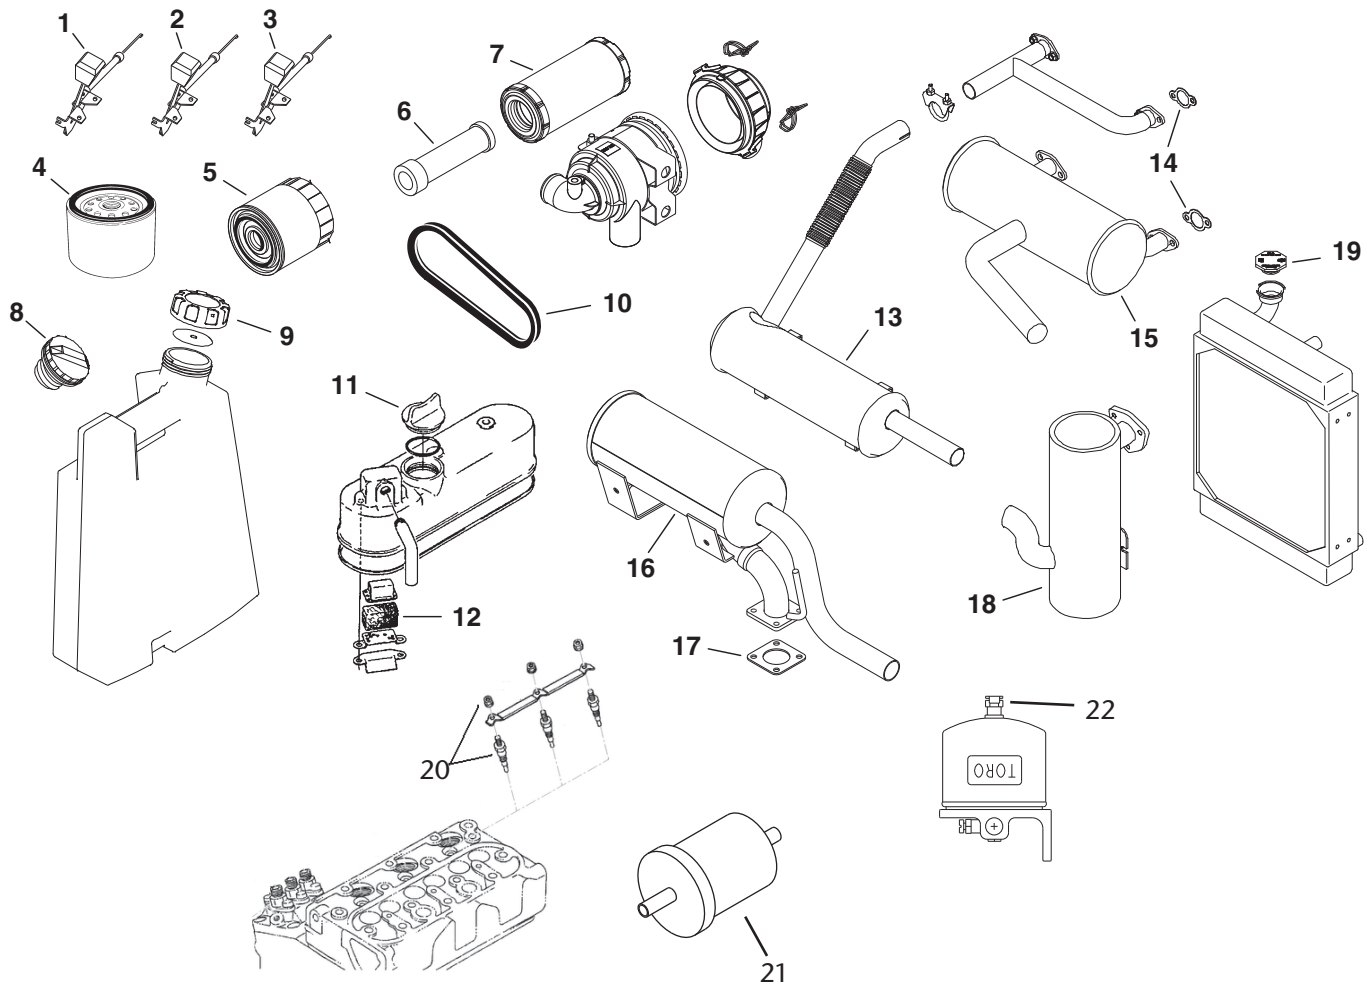


Traction Unit Engine & Fuel System Parts

Ref. No.	Part #	Description	22300 Dingo 222	22302 Dingo 220-D	22303 Dingo 320-D	22304 Dingo 222	22305 Dingo 322	22306 Dingo TX	22307 Dingo TX 425	22308 Dingo TX 413	22311 Dingo 220	22312 Dingo 323	22317 Dingo 220	22318 Dingo 323	22319 Dingo TX 525	22320 Dingo TX 525	22321 TX 427	22322 TX 427 Wide	22324 TX 525 Wide
1	106-9434	CABLE-THROTTLE							X										
1	99-1422	CONTROL-THROTTLE			X														
2	106-9435	CABLE-CHOKE							X										
3	108-4679	CABLE-THROTTLE/CHOKE					X	X									X	X	
3	99-6173	CABLE-THROTTLE					X	X											
4	63-8300	ELEMENT-SPIN ON			X										X	X			X
5	115-8189	FILTER-OIL, ENGINE		X	X										X	X			X
6	99-3198	FILTER-SAFETY			X		X				X		X	X	X	X	X	X	X
7	99-3173	ELEMENT-FILTER, AIR			X		X				X		X	X	X	X	X	X	X
8	107-2172	CAP-DIESEL													X	X			X
8	115-5304	CAP-FUEL						X	X								X	X	
8	93-3102	CAP-FUEL													X	X			X
9	104-7418	CAP-FUEL, GAS				X	X				X	X	X	X					
9	104-7419	CAP-FUEL, DIESEL			X														
9	95-4192	UNLEADED GAS CAP ASM							X										
9	98-2710	DIESEL FUEL CAP ASM		X	X														
10	100-1979	V-BELT		X	X														
10	112-2511	BELT													X	X			X
11	107-9075	PLUG-FILLER, OIL		X	X										X	X			X
12	100-1881	ELEMENT-BREATHER		X	X														
13	105-0249	MUFFLER						X	X								X	X	
13	98-2759	MUFFLER						X											
14	110-6697	GASKET-EXHAUST	X			X	X	X	X		X	X	X	X			X	X	
15	105-8381	MUFFLER				X	X				X	X	X	X					
16	106-9584	MUFFLER ASM													X	X			X
17	99-8343	GASKET-MUFFLER		X											X	X			X
18	117-1828	MUFFLER			X														
19	66-3240	CAP-RADIATOR			X														
19	93-5957	CAP-RADIATOR													X	X			X
20	100-1854	PLUG-GLOW		X	X										X	X			X
21	98-7612	FILTER-FUEL													X	X			X
22	63-7650	SEPARATOR-FILTER / WATER			X										X	X			X
*	115-7788	CAP-FUEL											X	X					

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

* Not illustrated

 Traction Unit Electrical & Drive System Parts

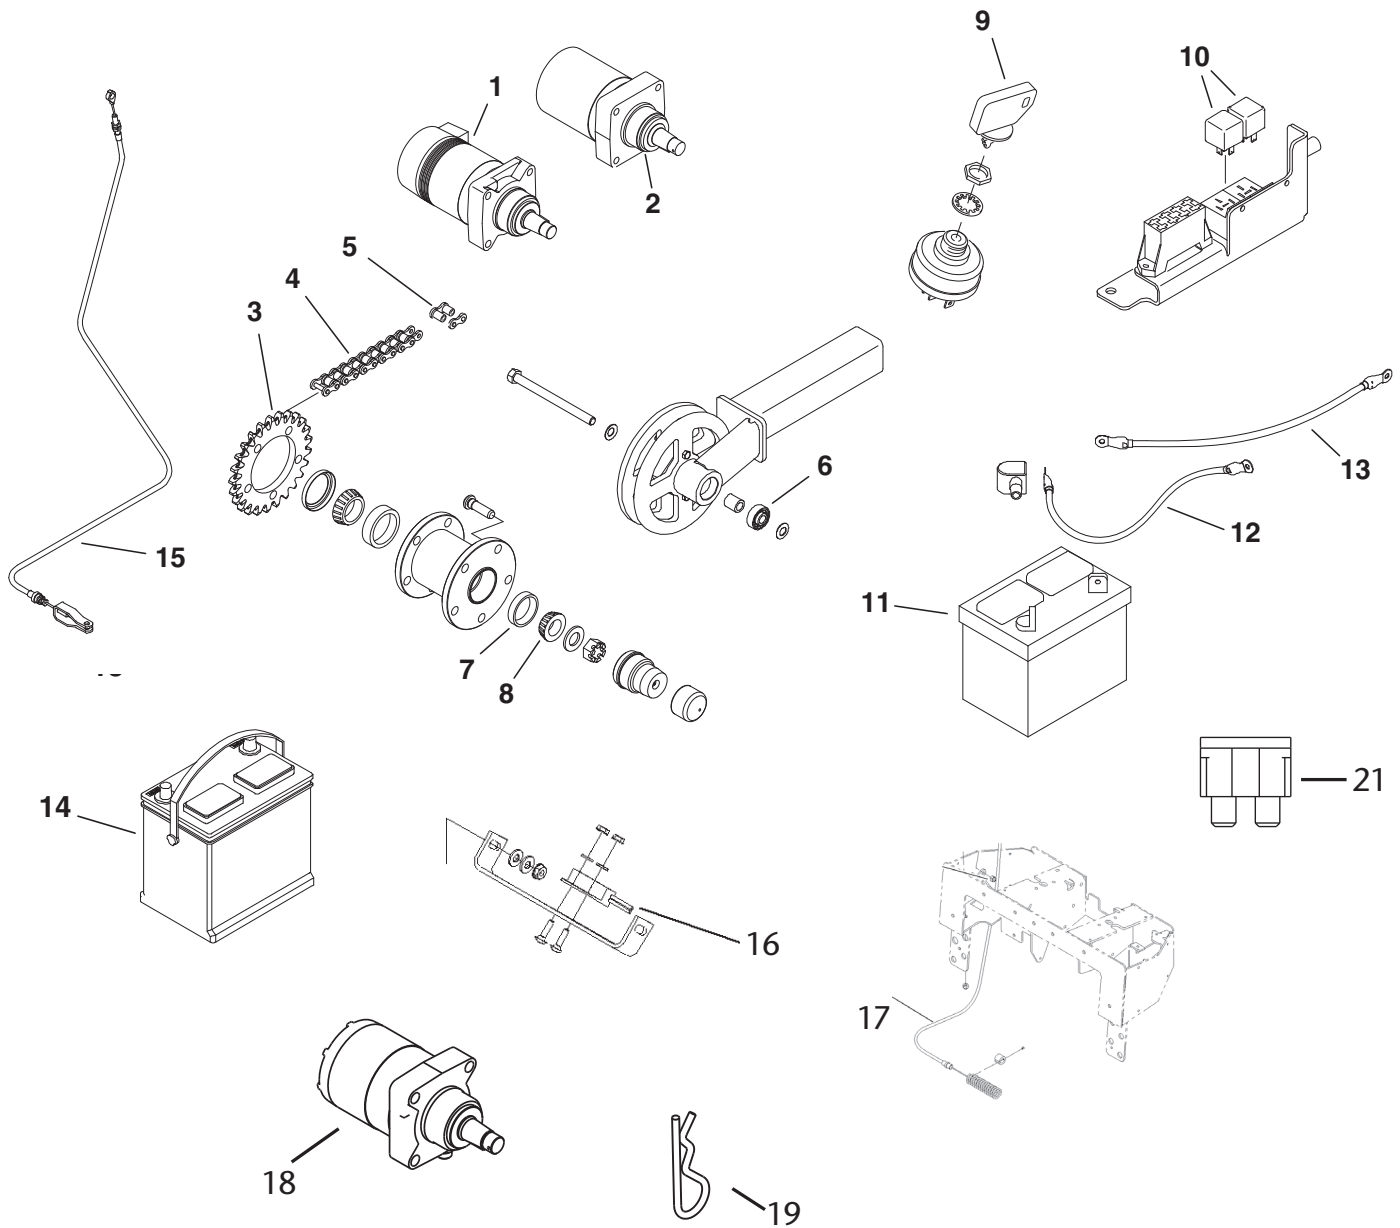


Traction Unit Electrical & Drive System Parts

Ref. No.	Part #	Description	22300 Dingo 222	22302 Dingo 220-D	22303 Dingo 320-D	22304 Dingo 222	22305 Dingo 322	22306 Dingo TX	22307 Dingo TX 425	22308 Dingo TX 413	22311 Dingo 220	22312 Dingo 323	22317 Dingo 220	22318 Dingo 323	22319 Dingo TX 525	22320 Dingo TX 525	22321 TX 427	22322 TX 427 Wide	22324 TX 525 Wide
1	100-6131	SEAL KIT						X	X	X					X	X	X	X	X
1	106-7645	COUPLING-SHAFT						X	X						X	X	X	X	X
1	106-7654	HYD MOTOR ASM						X	X						X		X		
1	114-1756	MOTOR-HYD							X							X		X	X
1	98-2767	MOTOR-WHEEL, HYD						X	X										
2	94-8178	SEAL KIT	X	X	X	X	X				X	X	X	X					
2	99-3052	HYD MOTOR ASM			X	X	X				X	X	X	X					
2	99-3090	SHAFT-COUPLING	X	X	X	X	X	X	X	X	X	X	X	X					
3	98-9937	SPROCKET-25T	X	X		X					X		X						
4	98-4906	CHAIN-ROLLER	X	X		X					X		X						
5	98-9089	LINK-CONNECTING	X	X		X					X		X						
6	120-5378	BEARING						X	X	X					X	X	X	X	X
7	254-72	BEARING-CUP, TAPERED				X					X		X						
8	254-94	BEARING-CONE, TAPERED				X					X		X						
9	63-8360	KEY-IGNITION (W/SHIELD)			X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
10	98-7249	RELAY			X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
11	104-2492	BATTERY							X	X	X	X	X						
12	92-6989	WIRE-21 INCH				X					X		X						
12	99-7404	CABLE-POSITIVE							X										
13	111074	CABLE-BLACK				X					X		X						
13	111075	WIRE ASM					X					X		X					
13	1-413540	CABLE-BATTERY, NEGATIVE							X										
14	104-9979	BATTERY						X	X						X	X	X	X	X
14	99-1441	BATTERY			X														
15	100-1283	CABLE-BRAKE						X	X										
15	106-9394	CABLE-BRAKE						X	X						X	X			
16	100-1270	SWITCH-PROXIMITY						X	X	X					X	X	X	X	X
17	112-2791	CABLE-BRAKE						X	X						X	X	X	X	X
18	104-8470	HYD WHEEL MOTOR ASM								X									
19	3290-467	PIN-HAIR	X	X	X	X	X			X	X	X	X	X					
21	109355	FUSE-BLADE, 15 AMP						X	X								X	X	
21	218-578	FUSE-BLADE, 10 AMP						X	X								X	X	
*	105-6184	SEAL OVERHAUL KIT								X									


Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

* Not illustrated

 
Traction Unit Accessories

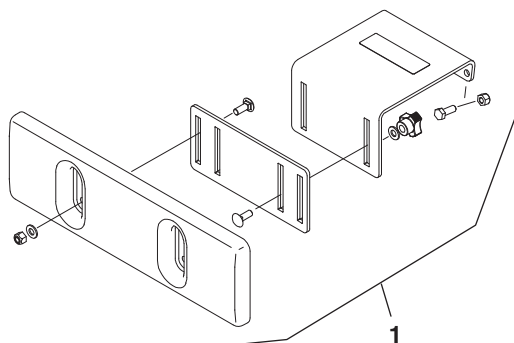

THIGH SUPPORT

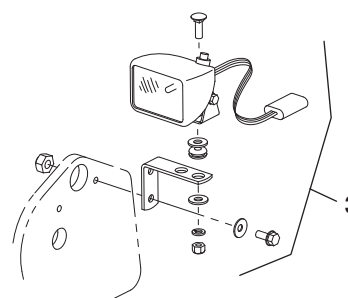 

LIGHT KITS

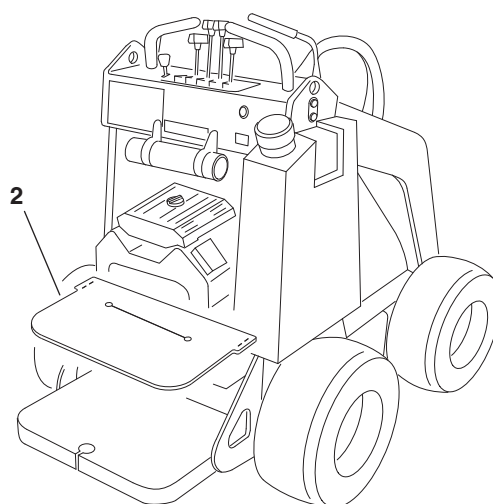 





FOOT MAT

Ref. No.	Part #	Description	22300 Dingo 222	22302 Dingo 220-D	22303 Dingo 320-D	22304 Dingo 222	22305 Dingo 322	22306 Dingo TX	22307 Dingo TX 425	22308 Dingo TX 413	22311 Dingo 220	22312 Dingo 323	22317 Dingo 220	22318 Dingo 323	22319 Dingo TX 525	22320 Dingo TX 525	22321 TX 427	22322 TX 427 Wide	22324 TX 525 Wide
1	105-0330	KIT - THIGH SUPPORT (DING)	X				X	X	X				X						
2	105-5805	MAT-FOOT	X				X	X	X				X						
3	100-8840	KIT-LIGHT				X			X	X	X	X		X	X	X	X	X	X
3	100-8940	KIT-LIGHT		X	X	X		X					X						











Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

Traction Unit Hydraulic Connectors

  
 
 
ATTACHMENTS

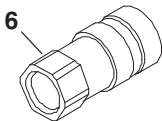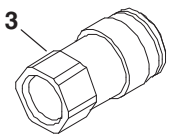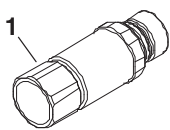

TRACTION UNITS

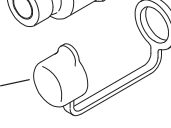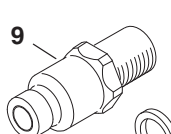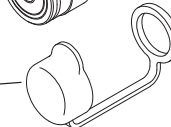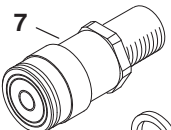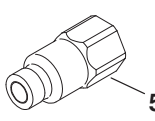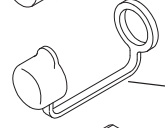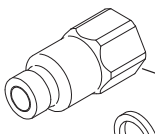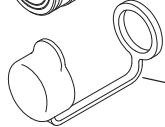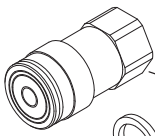          

CONVERSION KITS

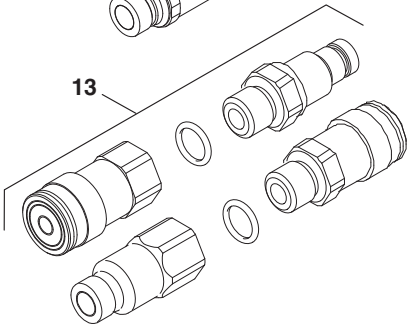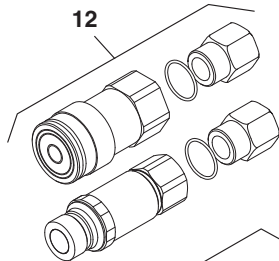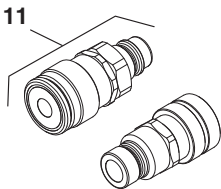   


Always consult your product's
Parts Catalog to ensure that the
correct parts will be ordered.

*Not for use on TX Units
Note: TX 413 Traction Units = 3/4" connectors.
All other Traction Units = 1" connectors.
Attachments = 7/8" connectors

Ref. No.	Part #	Description
1	100-4701	NIPPLE-CONNECT, PRESSURE
2	96-1275	COUPLER-FACE, FLUSH
3	104-6134	COUPLER-FACE, FLUSH
4	106-7692	NIPPLE-FACE, FLUSH
4	96-1276	NIPPLE-FACE, FLUSH
5	104-6114	NIPPLE-CONNECTOR
6	104-6115	COUPLER-FEMALE
7	105-8394	BULKHEAD COUPLER ASM
8	100-8816	CAP-DUST, COUPLER
9	105-8395	BULKHEAD NIPPLE ASM
10	100-8815	CAP-DUST, NIPPLE
11	100-4789	QUICK DISCONNECT CONVERSION KIT
12	100-4744	KIT-FLUSH FACE, ORB
13	106-7695	TX413 QUICK COUPLER KIT

 Augers

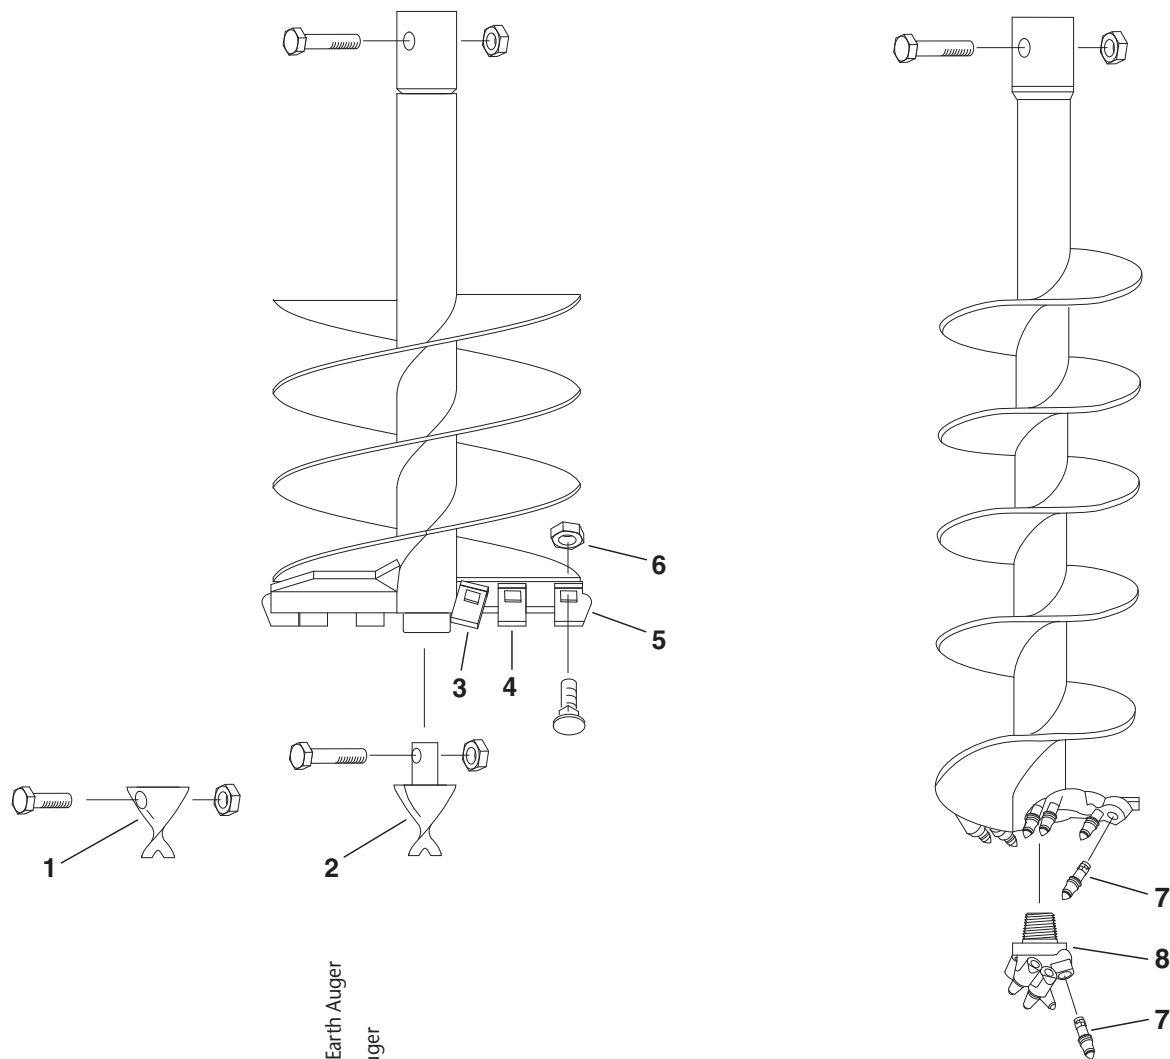


Ref. No.	Part #	Description	6" - 30" Earth Auger	Rock Auger
1	98-8211	PILOT - AUGER	X	
2	104-5998	PILOT-HARDFACED	X	
2	107-9314	PILOT-AUGER	X	
3	104-5996	TOOTH-WISDOM, CARBIDE	X	
3	107-9312	TOOTH-INNER	X	
4	104-5997	TOOTH-CHISEL, CARBIDE	X	
5	107-9313	TOOTH-OUTER	X	
6	3296-53	NUT-LOCK, NI	X	
7	98-8215	TEETH - ROCK AUGER		X
8	98-8214	PILOT - ROCK AUGER		X

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

* Visual inspection required to determine correct Pilot Auger (see illustration)

 
Backhoe Models 22412 & 23160

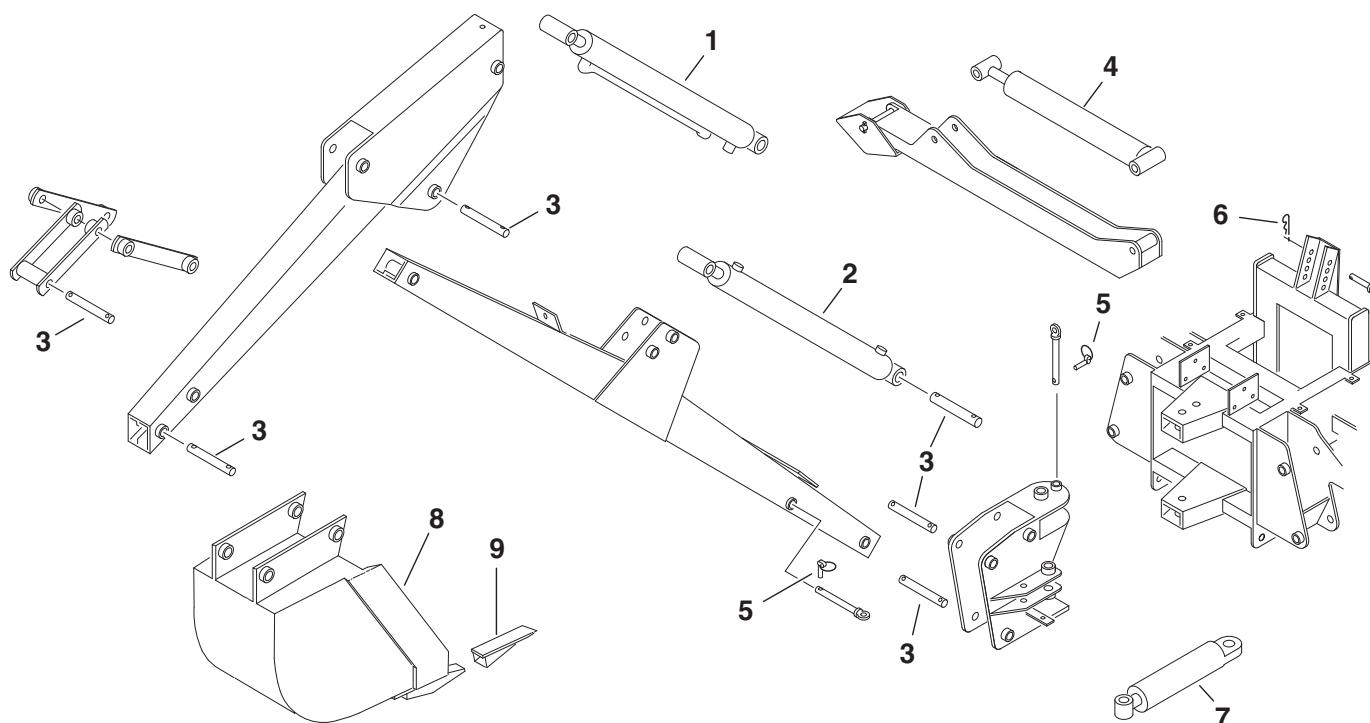

Ref. No.	Part #	Description
1	108-5509	HYD CYLINDER ASM,
2	100-7203	CYLINDER-HYD, BOOM
3	100-7170	PIN-BUCKET
4	100-7217	STABILIZER CYLINDER ASM
5	283-72	PIN-LYNCH
6	3290-355	PIN-HAIR
7	100-7201	CYLINDER-HYD, SWING
8	100-4640	9" BACKHOE BUCKET ASM
8	100-4641	12" BACKHOE BUCKET ASM
8	100-4642	16" BACKHOE BUCKET ASM
9	100-7233	TOOTH-BUCKET

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

 Backhoe Models 23163

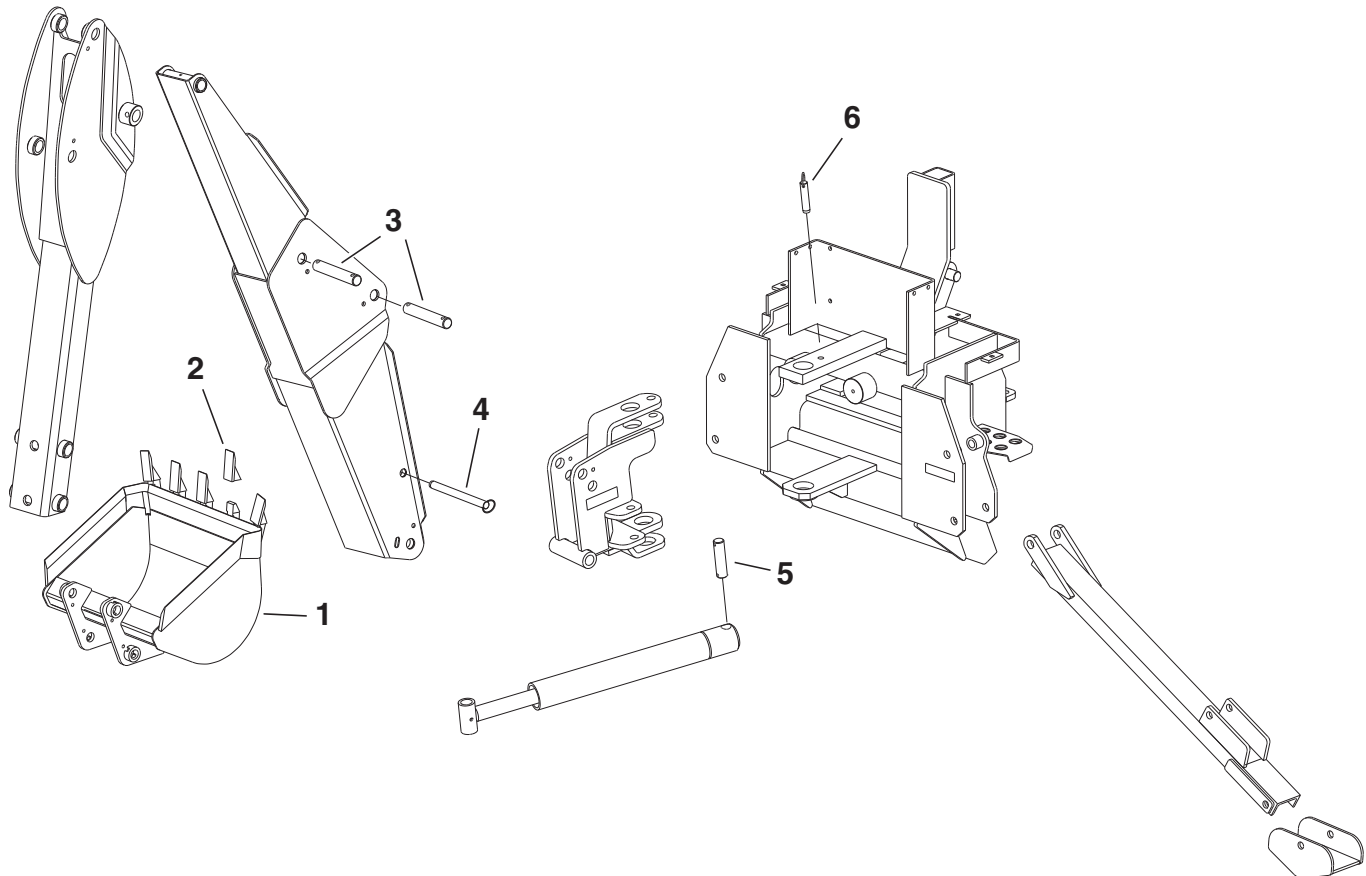


Ref.
No. Part # Description

1	108-5683	13" BACKHOE BUCKET ASM
1	110-0065	9" BACKHOE BUCKET ASM
1	110-0066	16" BUCKET ASM, FINAL
2	108-5692	TOOTH-BUCKET
3	108-5653	PIN-PIVOT
4	107-9343	PIN-HITCH
5	108-5658	PIN-PIVOT
6	107-9342	PIN-HITCH
*	3253-4	WASHER-LOCK

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

* Not illustrated



 
Buckets

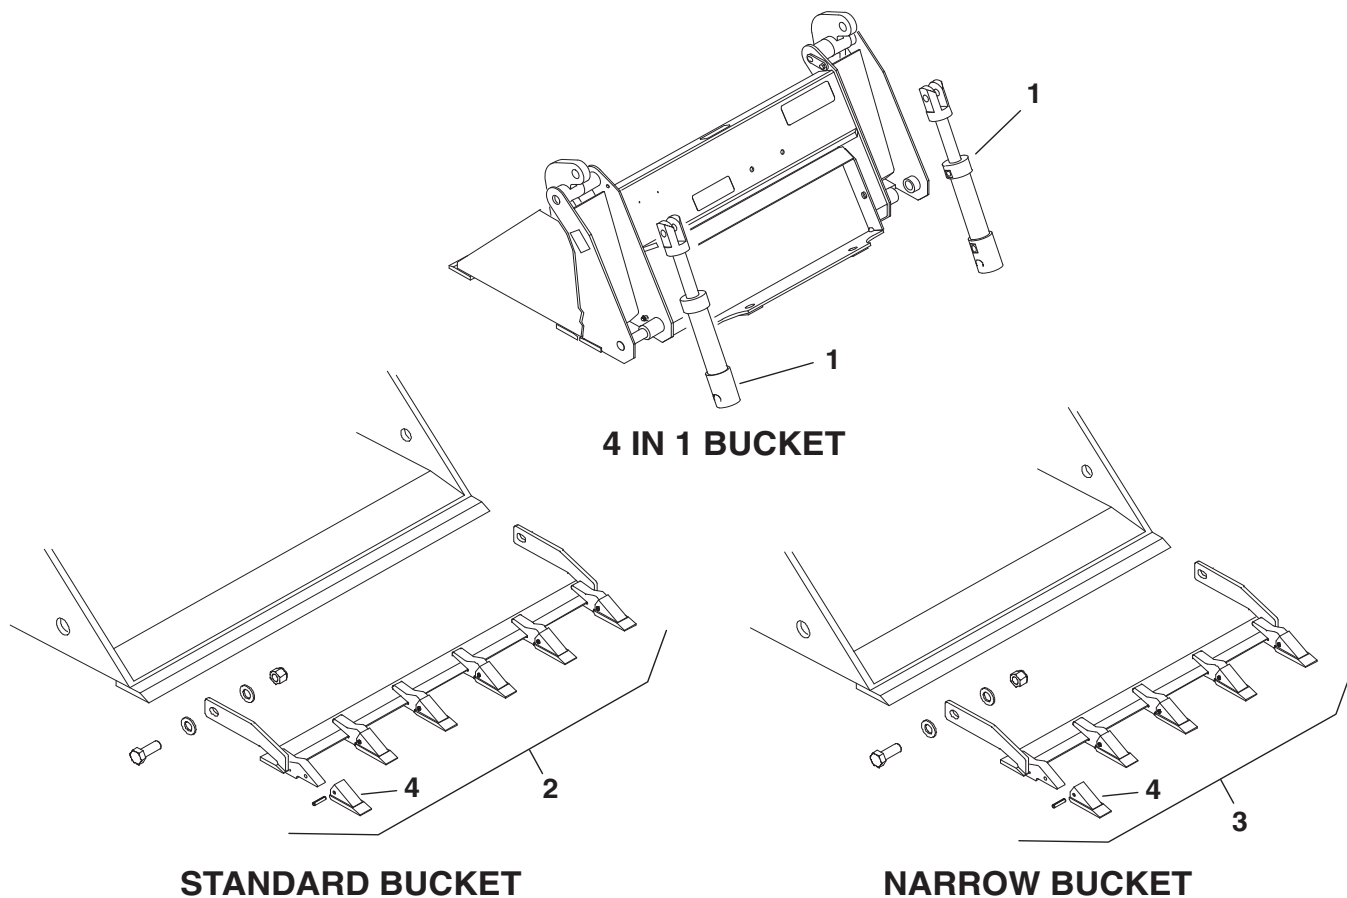

Ref. No.	Part #	Description	22411 4-in-1 Bucket	22409 Standard Bucket	22520 Narrow Bucket
1	99-1395	CYLINDER - HYDRAULIC	X		
2	104-1990	STD BUCKET TOOTH BAR KIT		X	
3	104-6020	NARROW BUCKET TOOTH BAR K			X
4	104-2048	TOOTH-BUCKET		X	X

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

   Concrete Breakers

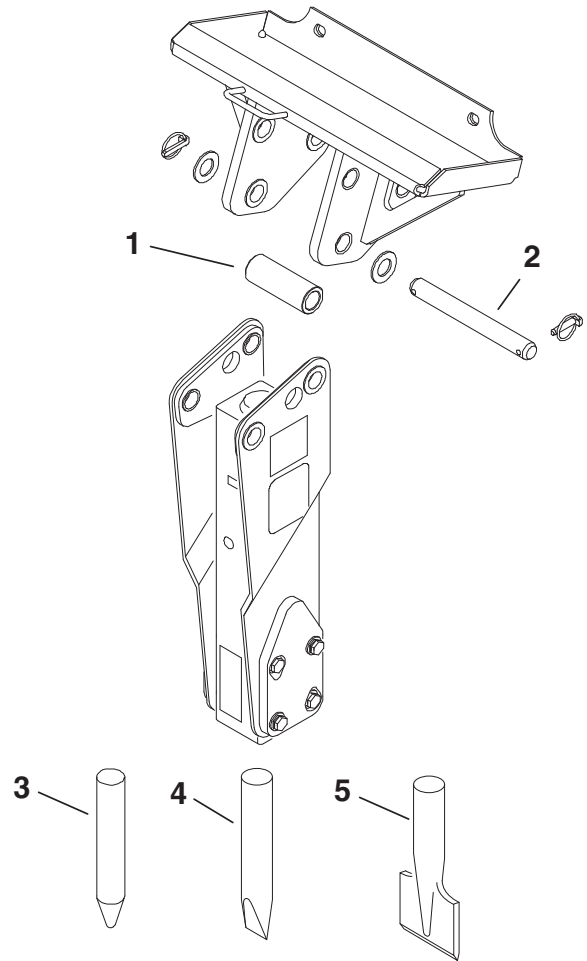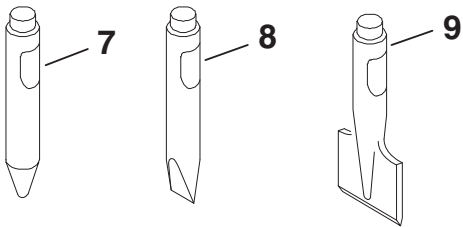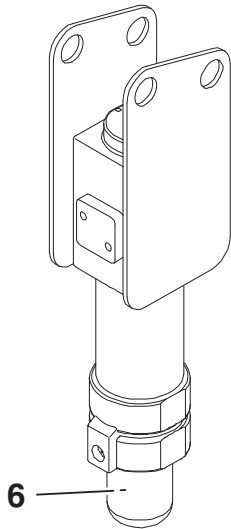


Ref. No.	Part #	Description	23135 Indeco	22411 Stanley
1	99-4345	SPACER	X	
2	99-4315	PIN-MOUNTING	X	
4	99-4363	TOOL-LINE CUT, CHISEL	X	
5	99-4364	TOOL-LINE CUT, ASPHALT	X	
6	106-7656	KIT-SEAL		X
7	106-7666	TOOL-MOIL		X
8	106-7667	TOOL-CHISEL		X
9	106-7684	TOOL-ASPHALT		X
*	106-7685	TOOL-TAMPER		X

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

* Not illustrated

 
Cultivator Model 23101

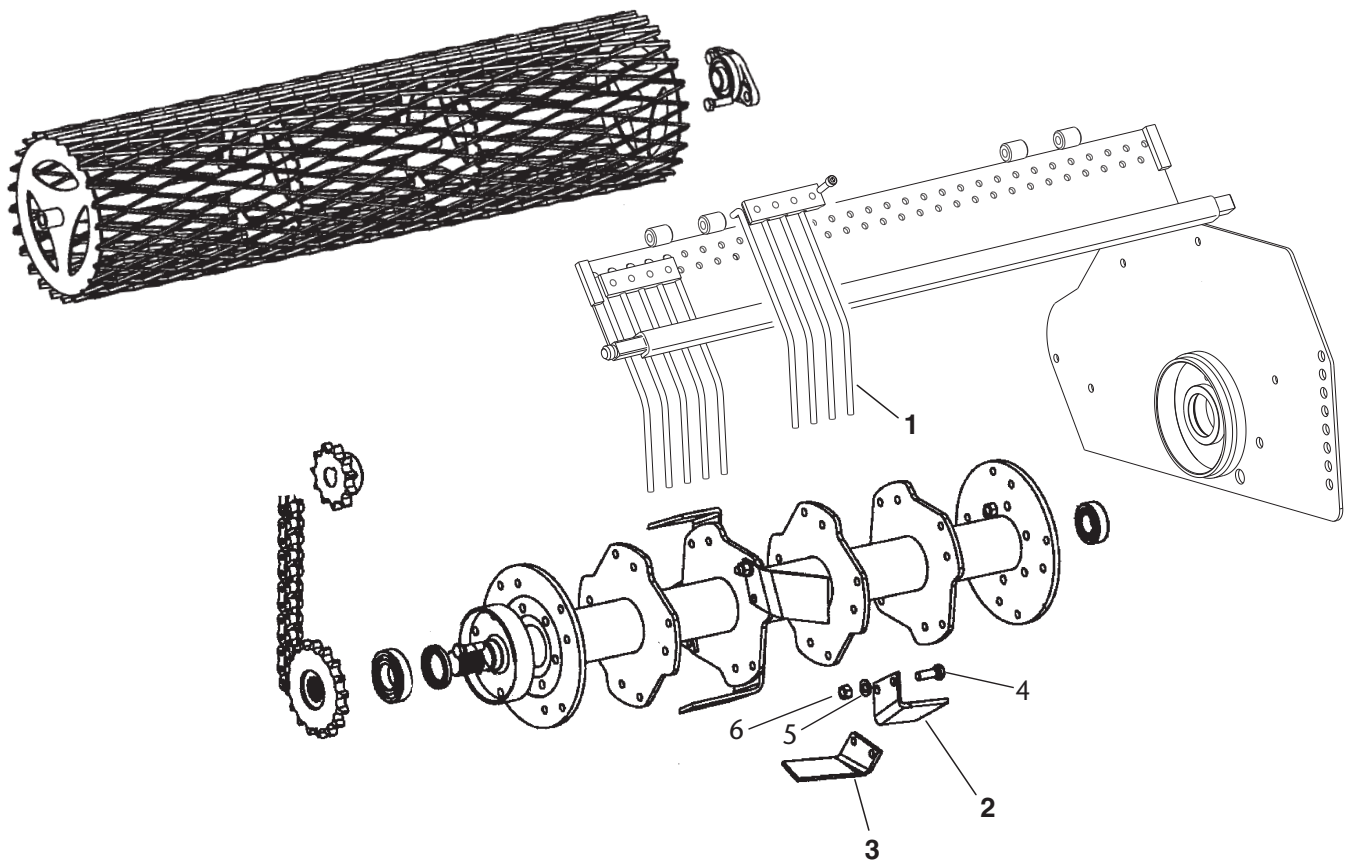

Ref. No.	Part #	Description
1	114-1439	ROD-SCREENING
2	114-7801	BLADE-RIGHT
3	114-7800	BLADE-LEFT
4	104-1853	BOLT-HH
5	3253-6	WASHER-LOCK
6	3217-8	NUT-HEX

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

 Fork Attachments

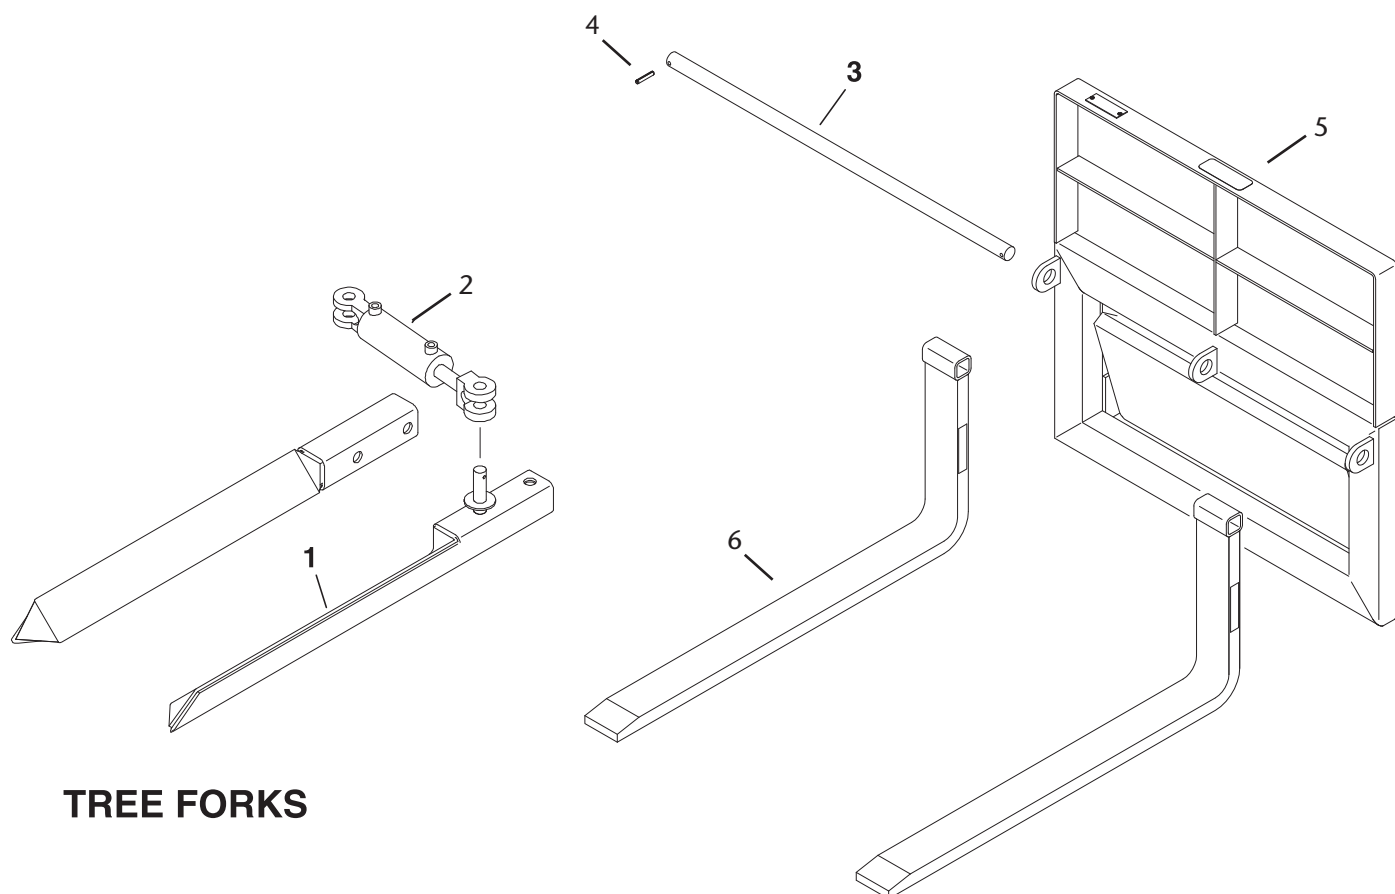


TREE FORKS

Ref. No.	Part #	Description	22418 Adjustable Forks	22438 Tree Forks
1	99-1683	ARM-PIVOT, LH		X
2	110-0079	HYD CYLINDER ASM		X
3	104-5943	SHAFT-FORK	X	
4	32121-15	PIN-ROLL	X	
5	98-8231-03	FORK FRAME ASM	X	
6	98-9939-03	FORK ASM	X	
*	3253-4	WASHER-LOCK		X


Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

* Not illustrated

 
Grading Attachments

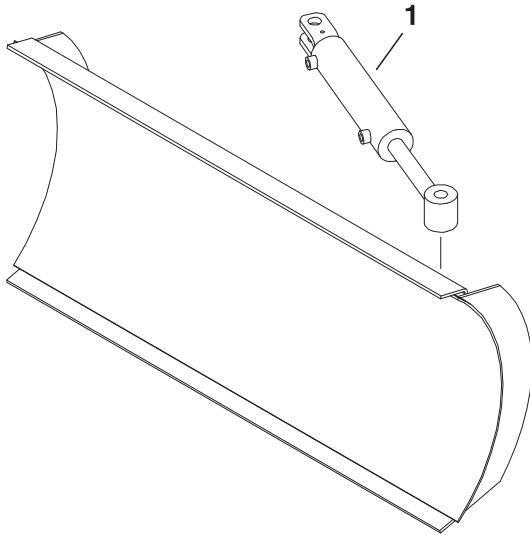

48" HYDRAULIC BLADE

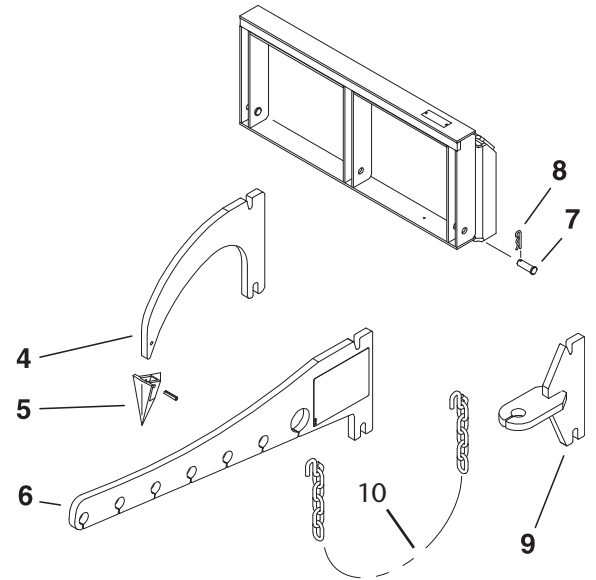 

MULTI-PURPOSE TOOL

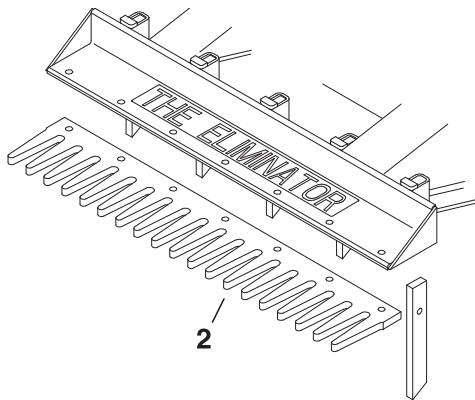 


SCARIFIER/GROOMER

Ref. No.	Part #	Description	22414 48" Hydraulic Blade	22423 Multi-Purpose Tool	22443 Scarifier/Groomer
1	98-9942	CYLINDER-HYD	X	X	
1	99-1352	KIT-SEAL	X	X	
2	98-9056	COMB - LEVELING			X
4	104-1999-03	PLATE-TYNE		X	
5	99-5147-03	POINT-SPEAR		X	
6	98-4889-03	JIB		X	
7	283-68	Pin-CLEVIS		X	
8	3290-355	PIN-HAIR		X	
9	98-4897-03	TOW BAR ASM		X	
10	99-1410	CHAIN-LIFT		X	

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

 Power Rake Model 22425

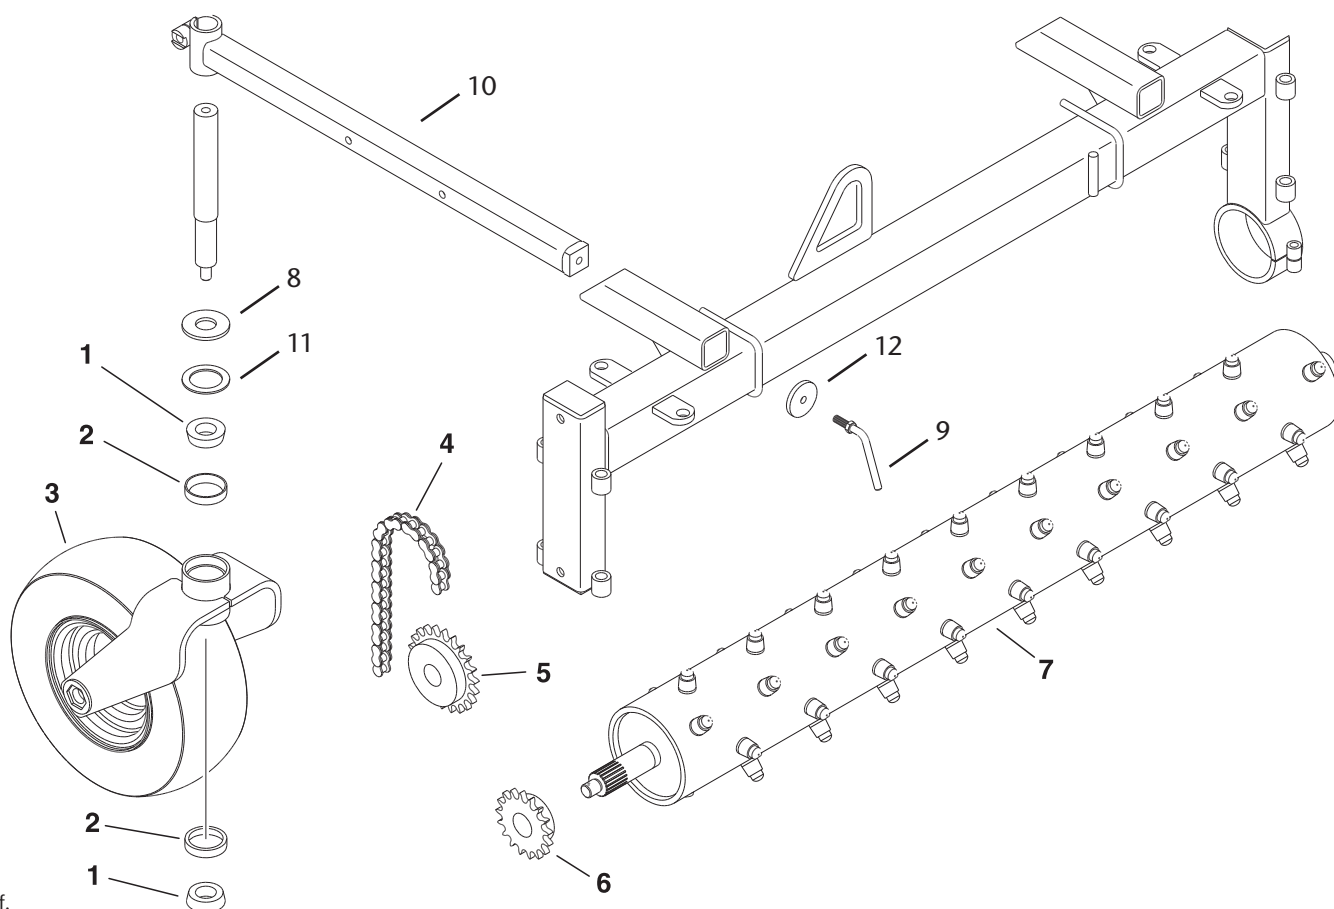


Ref.
No. Part # Description

1	254-94	BEARING-CONE, TAPERED
2	254-72	BEARING-CUP, TAPERED
3	107-9433	WHEEL AND TIRE ASM
4	107-9438	CHAIN-ROLLER
5	107-9417	SPROCKET-22 TOOTH
6	107-9416	SPROCKET-17 TOOTH
7	107-9403	ROLLER-TOOTH, CARBIDE
8	104-6126	WASHER-FLAT
9	107-9422	HANDLE-ARM, CASTOR
10	107-9435	ARM-SUPPORT, CASTOR
11	107-9459	WASHER-FELT
12	107-9463	WASHER-FLAT
*	3217-7	NUT-HEX
*	3253-4	WASHER-LOCK

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

* Not illustrated

 
Reamers & Boring Bits

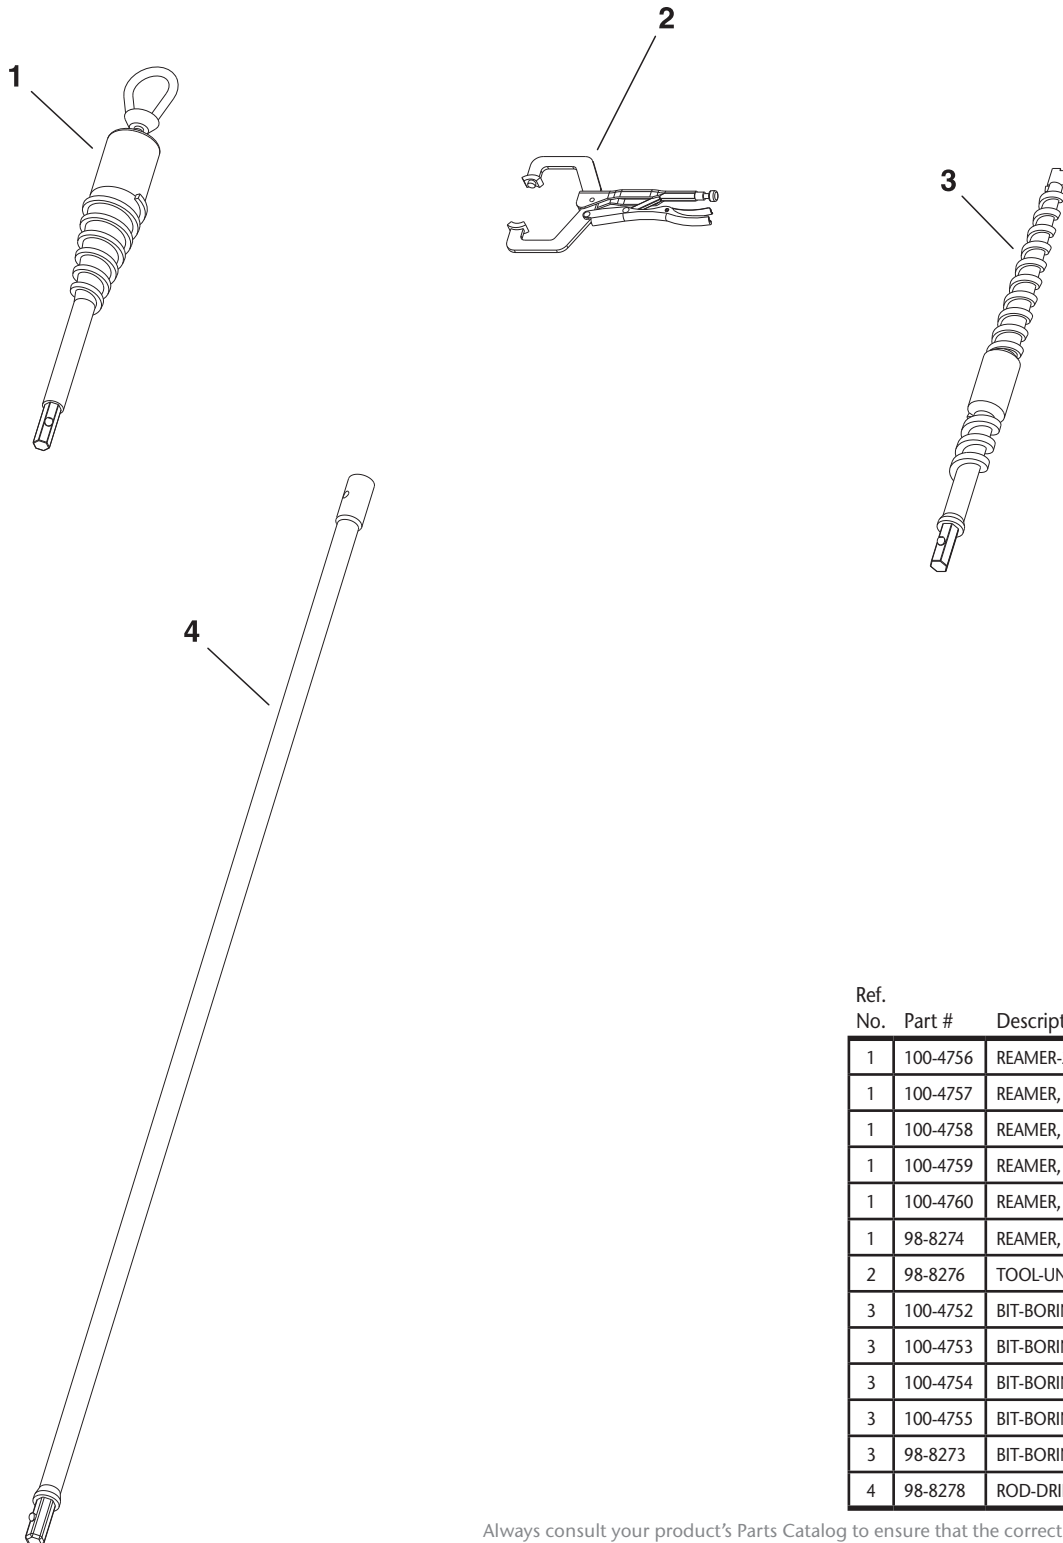

Ref. No.	Part #	Description
1	100-4756	REAMER-2 INCH
1	100-4757	REAMER, 2-7/8 INCH
1	100-4758	REAMER, 3-1/4 INCH
1	100-4759	REAMER, 3-1/2 INCH
1	100-4760	REAMER, 4-1/2 INCH
1	98-8274	REAMER, 2-1/2 INCH
2	98-8276	TOOL-UNCOUPLING
3	100-4752	BIT-BORING, 1-1/4 INCH
3	100-4753	BIT-BORING, 1-7/16 INCH
3	100-4754	BIT-BORING, 2 INCH
3	100-4755	BIT-BORING, 2-1/2 INCH
3	98-8273	BIT-BORING, 1-3/4 INCH
4	98-8278	ROD-DRILL, 60 INCH

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

 Rotary Broom Model 22415

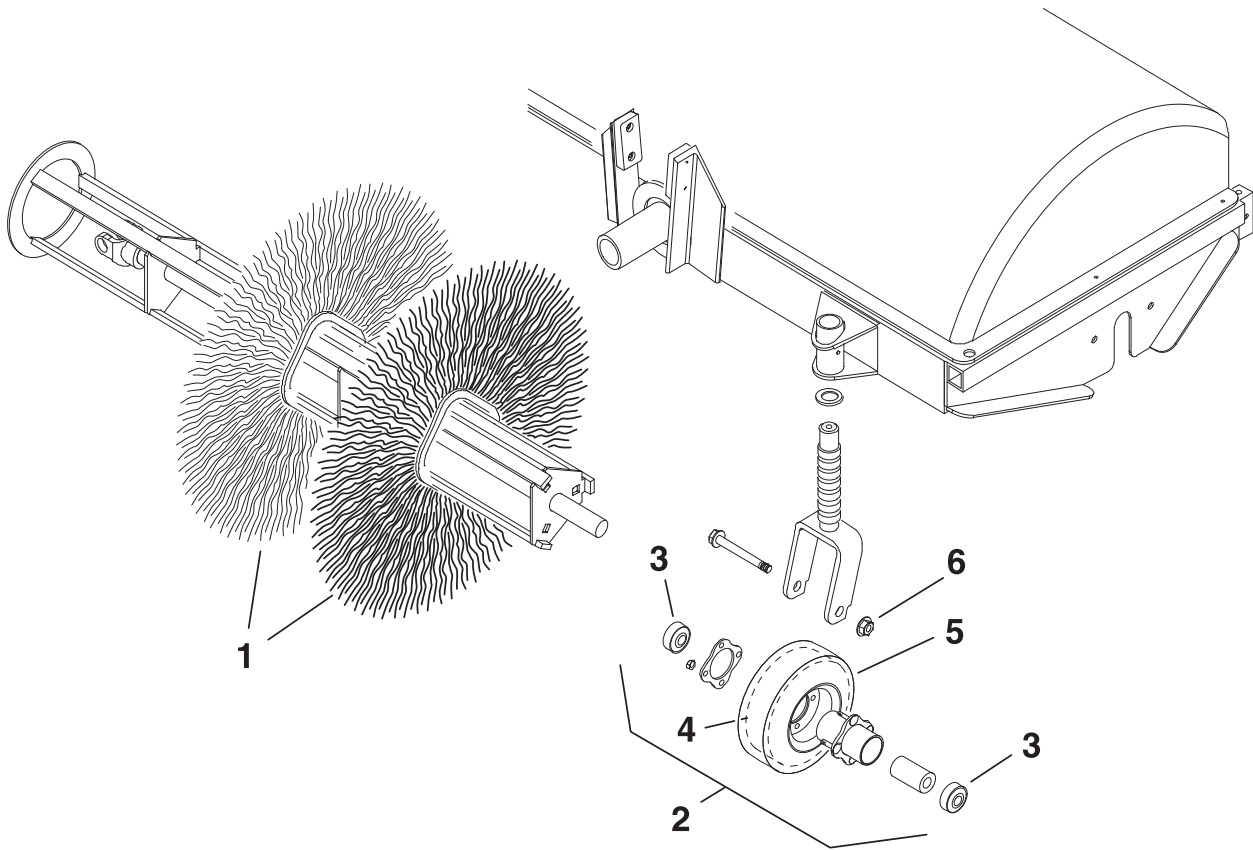


Ref.
No. Part # Description

1	94-7372	ELEMENT-BRUSH, POLY
1	95-5942	ELEMENT-BRUSH, WIRE (OPTIONAL)
2	93-9938	8 INCH WHEEL ASM
3	120-5378	BEARING
4	93-9939	TIRE
5	68-8950	TUBE-INNER (W/VALVE)
6	3296-53	NUT-LOCK, NI

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

Snowthrower

 
Model 22456

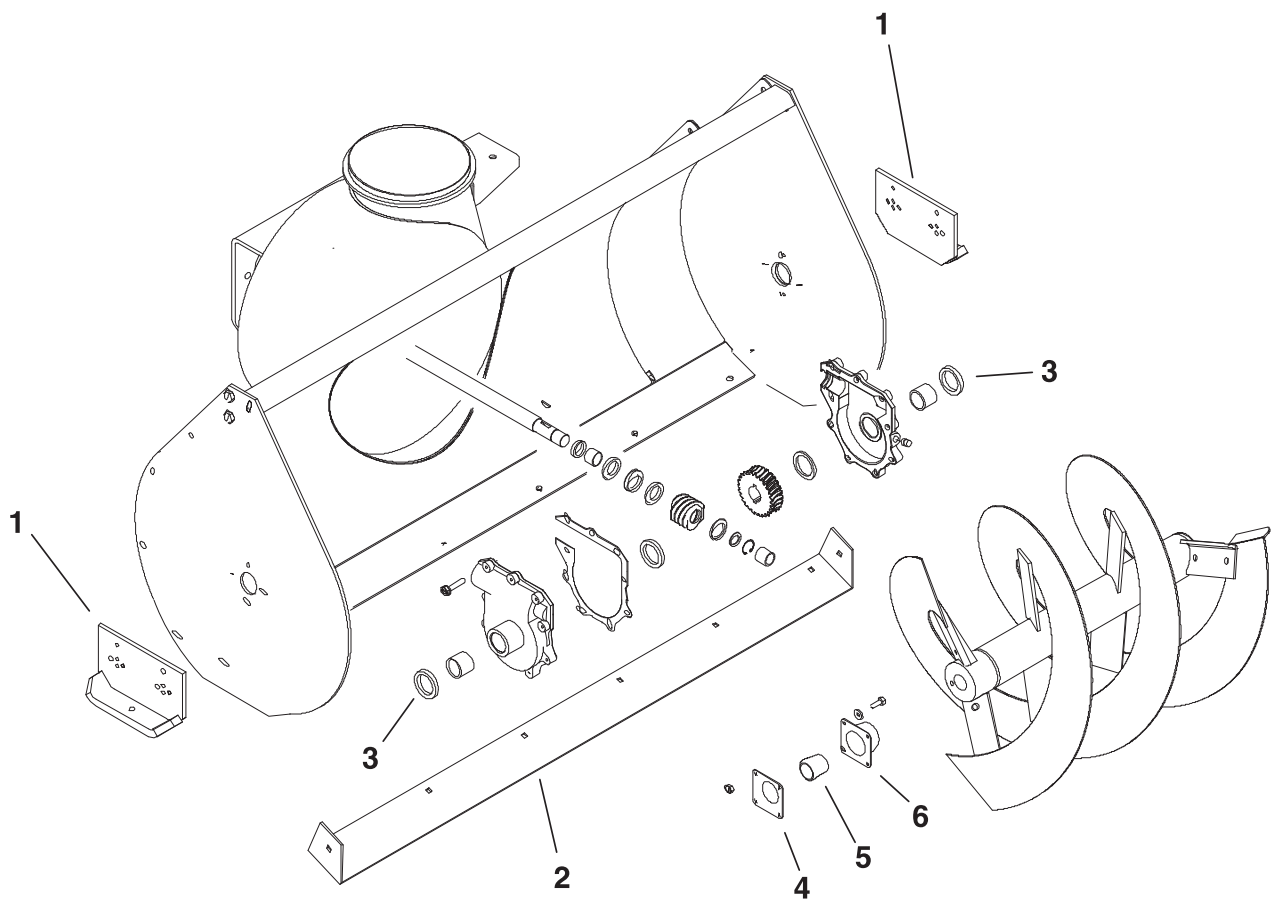

Ref. No.	Part #	Description
1	100-4600-01	SKID ASM
2	99-2303-01	BLADE-SCRAPER
3	7-0045	SEAL-OIL
4	20-1000	BEARING-FLANGE, REAR
5	20-0980	BEARING
6	20-0990	BEARING-FLANGE, FRONT

Always consult your product’s Parts Catalog to ensure that the correct parts will be ordered.

 Stump Grinder Model 22429

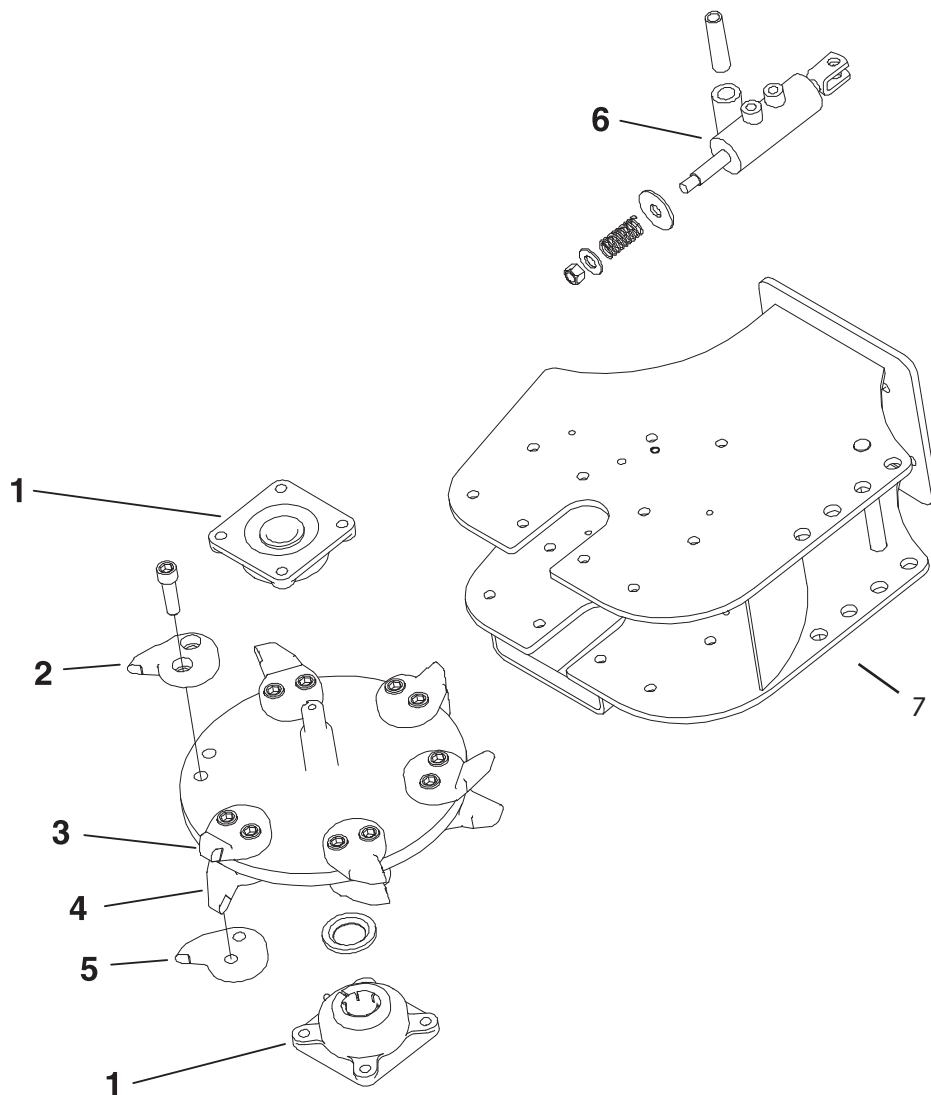


Ref.
No. Part # Description

1	104-2026	BEARING
2	104-2029	TOOTH-STR,CBORED
3	104-2031	TOOTH-CURVED,CBORED
4	104-2030	TOOTH-CURVED,THREADED
5	104-2028	TOOTH-STR, THREADED
6	104-5847	SEAL KIT
7	104-5807	GRINDER FRAME ASM

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

 
Tiller Model 22445

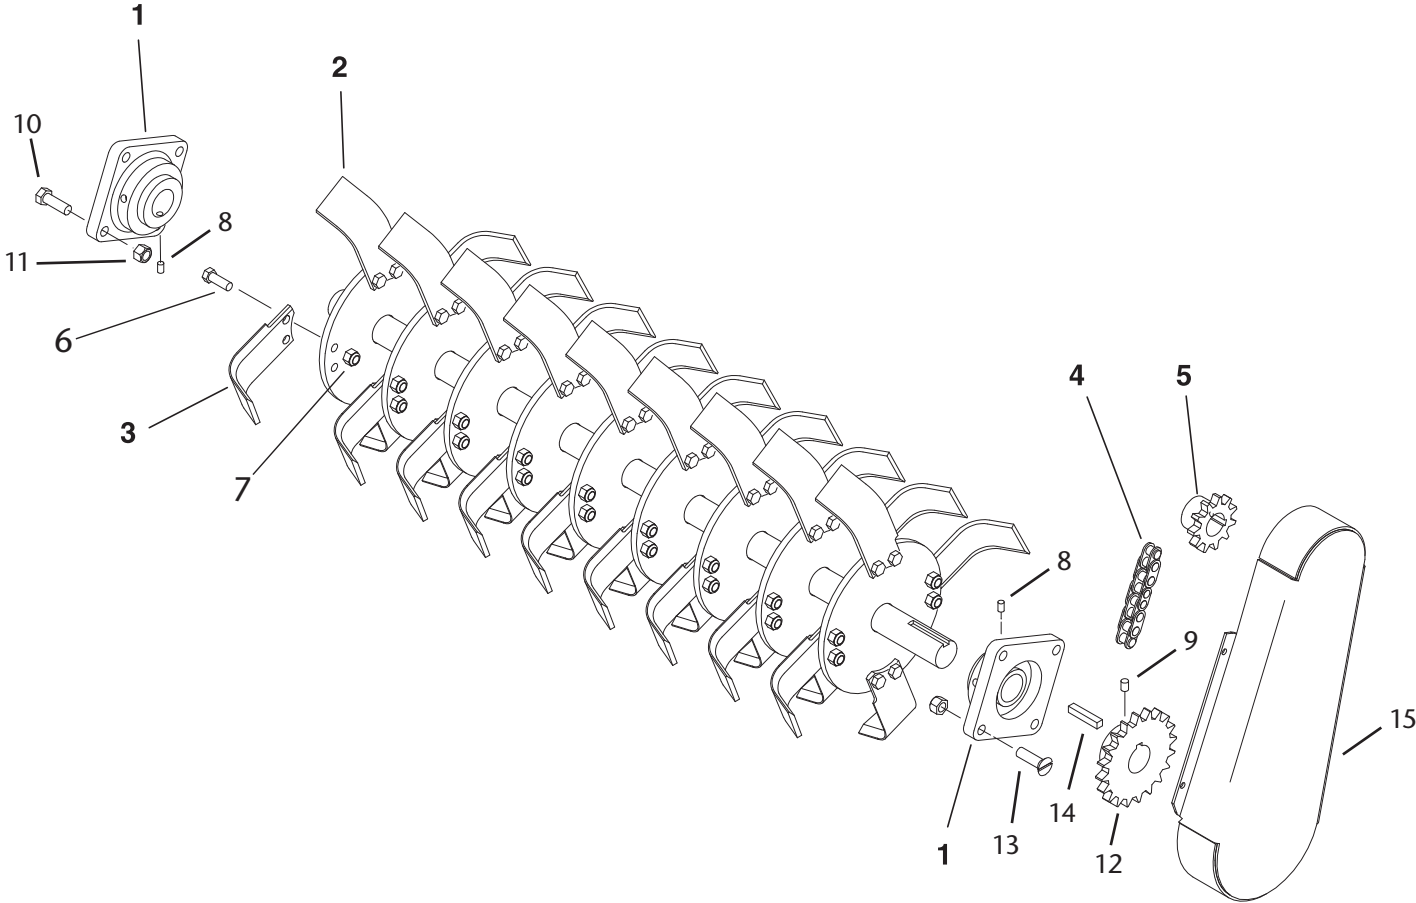

Ref. No.	Part #	Description
1	99-9979	BEARING ASM
2	104-2044	TINE-LH
3	104-2043	TINE-RH
4	98-9088	CHAIN-ROLLER
4	98-9089	LINK-CONNECTING
5	98-9085	SPROCKET-11 TOOTH
6	324-29	BOLT-HH
7	3296-48	NUT-LOCK, NI
8	3246-17	SET SCREW-HSH
9	3247-3	SCREW-SET
10	325-7	SCREW-HH
11	3296-23	NUT-LOCK, NI
12	98-9086	SPROCKET-20 TOOTH
13	98-9931	BOLT
14	98-9935	KEY-SQUARE
15	98-9071	COVER-CHAIN, TILLER

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

 Tracks

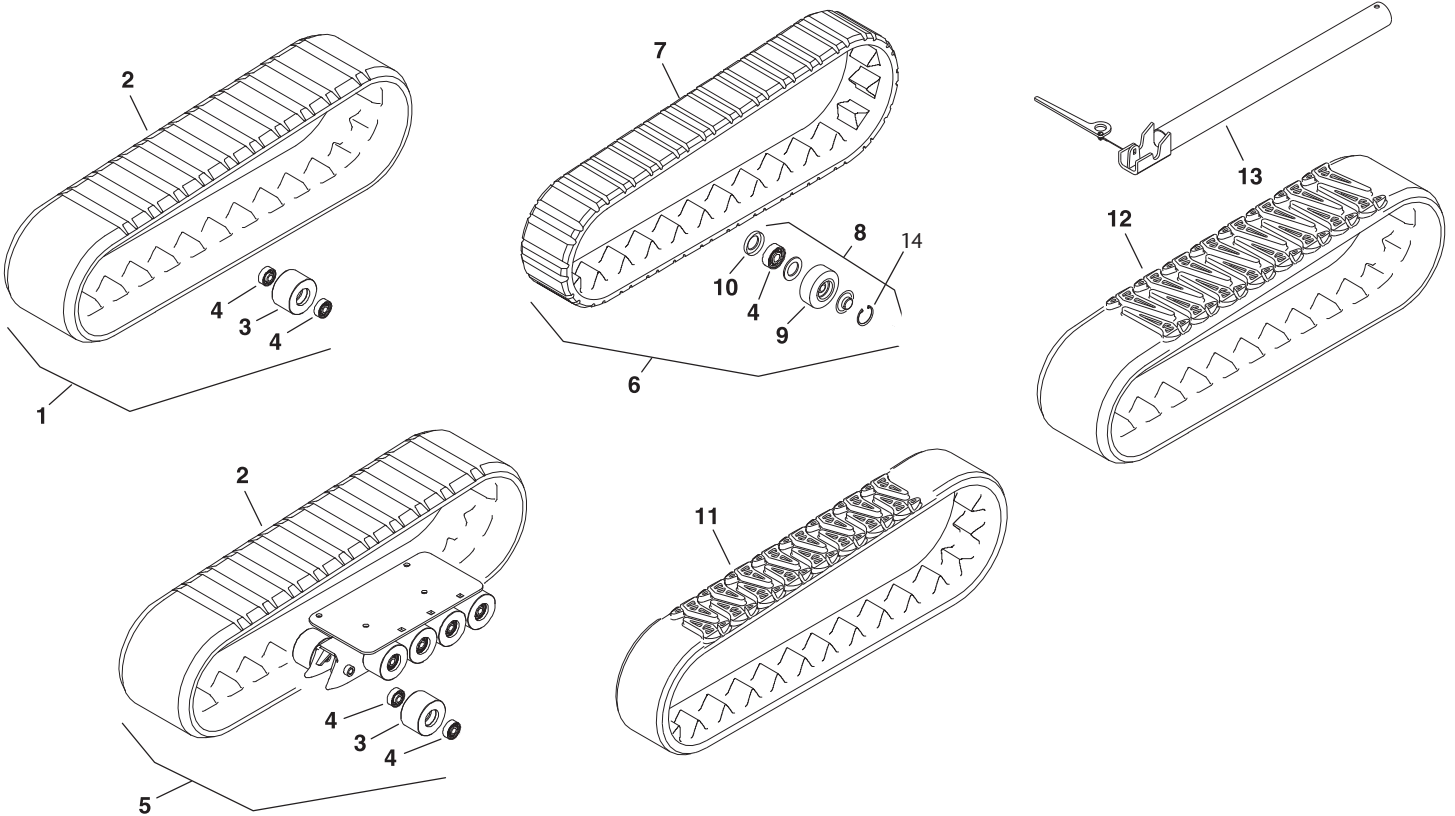


Ref. No.	Part #	Description	22307 Dingo TX 425	22308 Dingo TX 413	22320 Dingo TX 525	22324 TX 525 Wide	22319 Dingo TX 525	22306 Dingo TX	22321 TX 427	22322 TX 427 Wide
1	104-6107	KIT-TRACK, TX425	X		X	X				
2	100-8931	TRACK	X		X	X				X
3	105-0248	BOGEY WHEEL ASM	X							
4	120-5378	BEARING	X	X	X	X	X	X	X	X
5	106-7720	LH TRACK KIT, TX425	X							
5	106-7721	RH TRACK KIT, TX425	X							
5	106-7722	TRACK KIT, TX425	X							
6	104-6106	TX420 TRACK KIT					X	X		
6	106-7723	TX TRACK REBUILD KIT,					X	X		
7	98-9800	TRACK		X			X	X	X	
8	106-7620	TX ROAD WHEEL KIT	X		X	X	X	X		
8	106-7627	TX ROAD WHEEL KIT, 5-PACK	X	X			X	X	X	X
9	106-7621	ROAD WHEEL ASM	X	X	X	X	X	X	X	X
10	253-118	SEAL-OIL	X	X	X	X	X	X	X	X
11	108-5640	TRACK-AGGRESSIVE TREAD, N	X	X			X			
12	108-9749	TRACK-AGGRESSIVE TREAD, W	X		X	X				
*13	110-0069	ALIGNMENT TOOL F/A	X	X	X	X	X	X		
14	106-7595	RING-SNAP, INTERNAL	X	X	X	X	X	X	X	X

*Designed to align the track guide with the front idler wheel to the rear drive wheel. Use when a track is replaced and/or track lug damage appears in a short period of time.

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

 
Trench Filler Model 22472

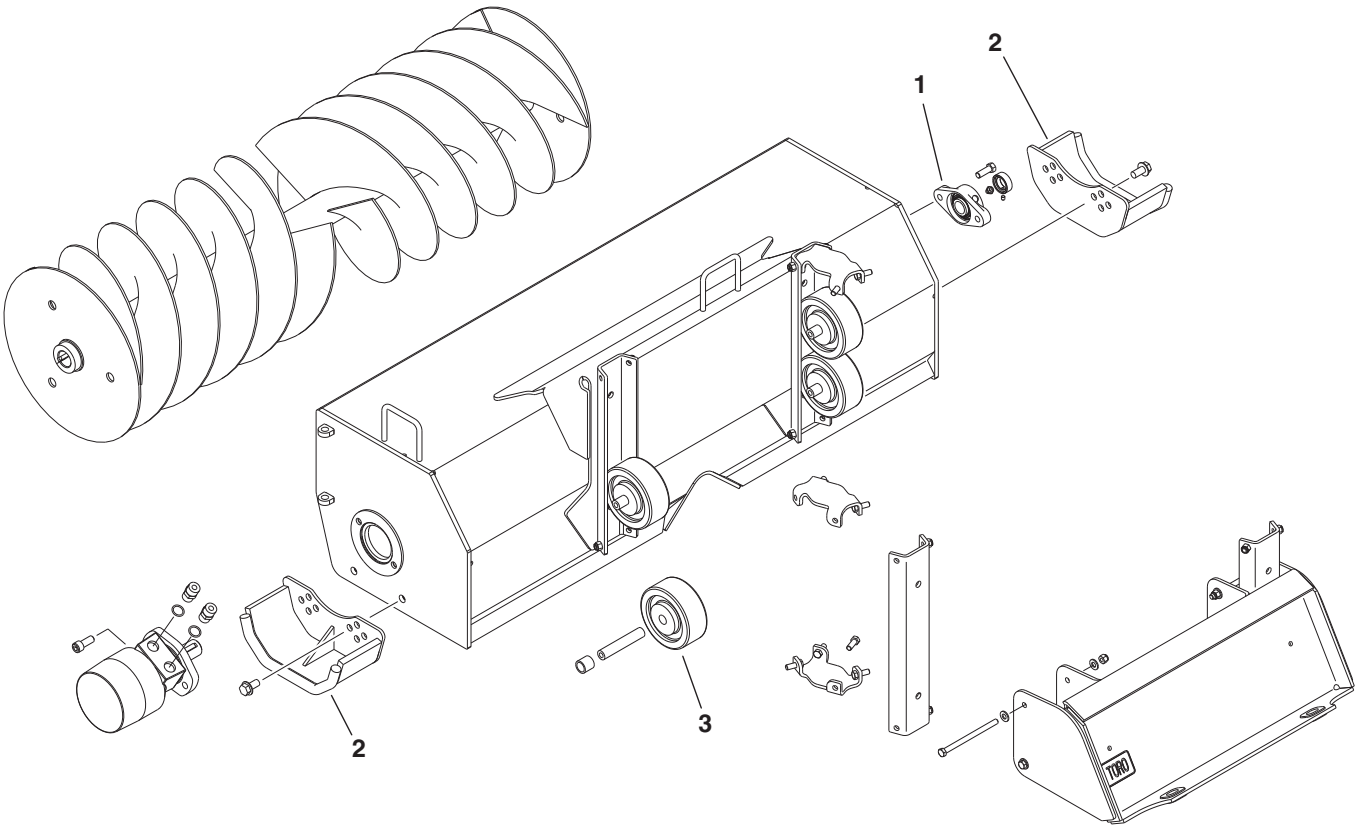

Ref. No.	Part #	Description
1	99-0160	BEARING
2	107-9393-01	SKID PLATE ASM
3	110-0237	ROLLER-FLOAT

Always consult your product’s Parts Catalog to ensure that the correct parts will be ordered.

 Trencher Attachments

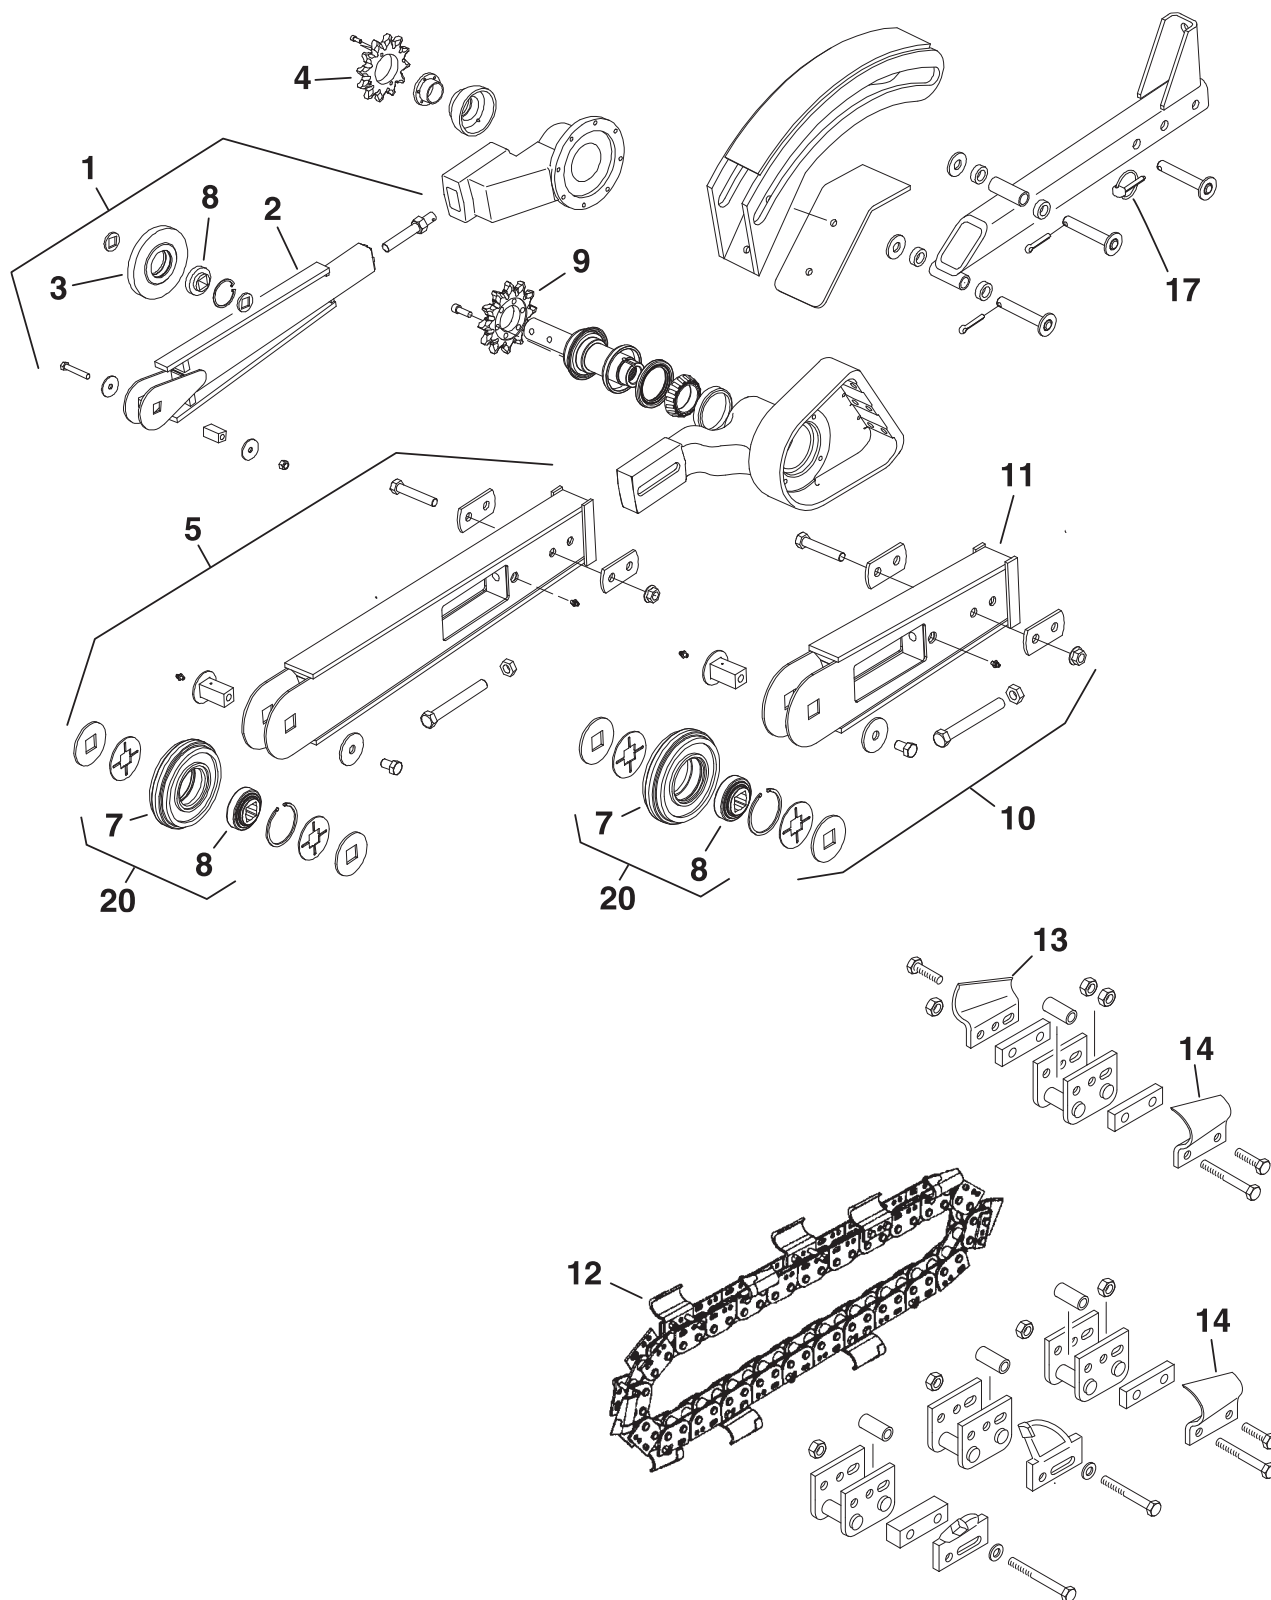


Trencher Attachments

Ref. No.	Part #	Description	22447 Trencher Head	22459 Trencher Head	22464 Crumber Kit	22465 Trencher, TX 413	22470 High-Torque Trencher	22471 High-Speed	22960 2' Trencher Boom	22961 3' Trencher Boom
1	104-1997	TRENCHER BOOM ASM	X							
2	104-1998-03	BOOM ASM	X							
3	104-1996	ROLLER-NOSE	X							
3	99-4328	ROLLER-NOSE	X							
4	100-1699	SAND SPROCKET-12T	X							
5	104-1949	BOOM ASM					X	X		X
7	104-1951	ROLLER-NOSE				X	X	X	X	X
8	104-1995	BEARING	X			X	X	X	X	X
8	99-4355	BEARING-SHAFT, SQUARE	X			X	X	X	X	X
9	104-1964	SPROCKET-TRENCHER		X		X	X	X		
10	104-1948	BOOM ASM				X	X	X	X	
11	115-0784-03	BOOM ASM				X			X	
12	106-7626	TRENCHER CHAIN ASM				X				
13	98-8223	TOOTH-RH,SOIL				X				
13	99-5925	TOOTH-SOIL, RH				X				
14	99-5924	TOOTH-SOIL, LH				X				
17	283-72	PIN-LYNCH			X					
20	107-9325	TRENCHER ROLLER ASM				X	X	X	X	X
20	107-9325	TRENCHER ROLLER ASM	X	X		X	X			X

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

 TRX Trencher

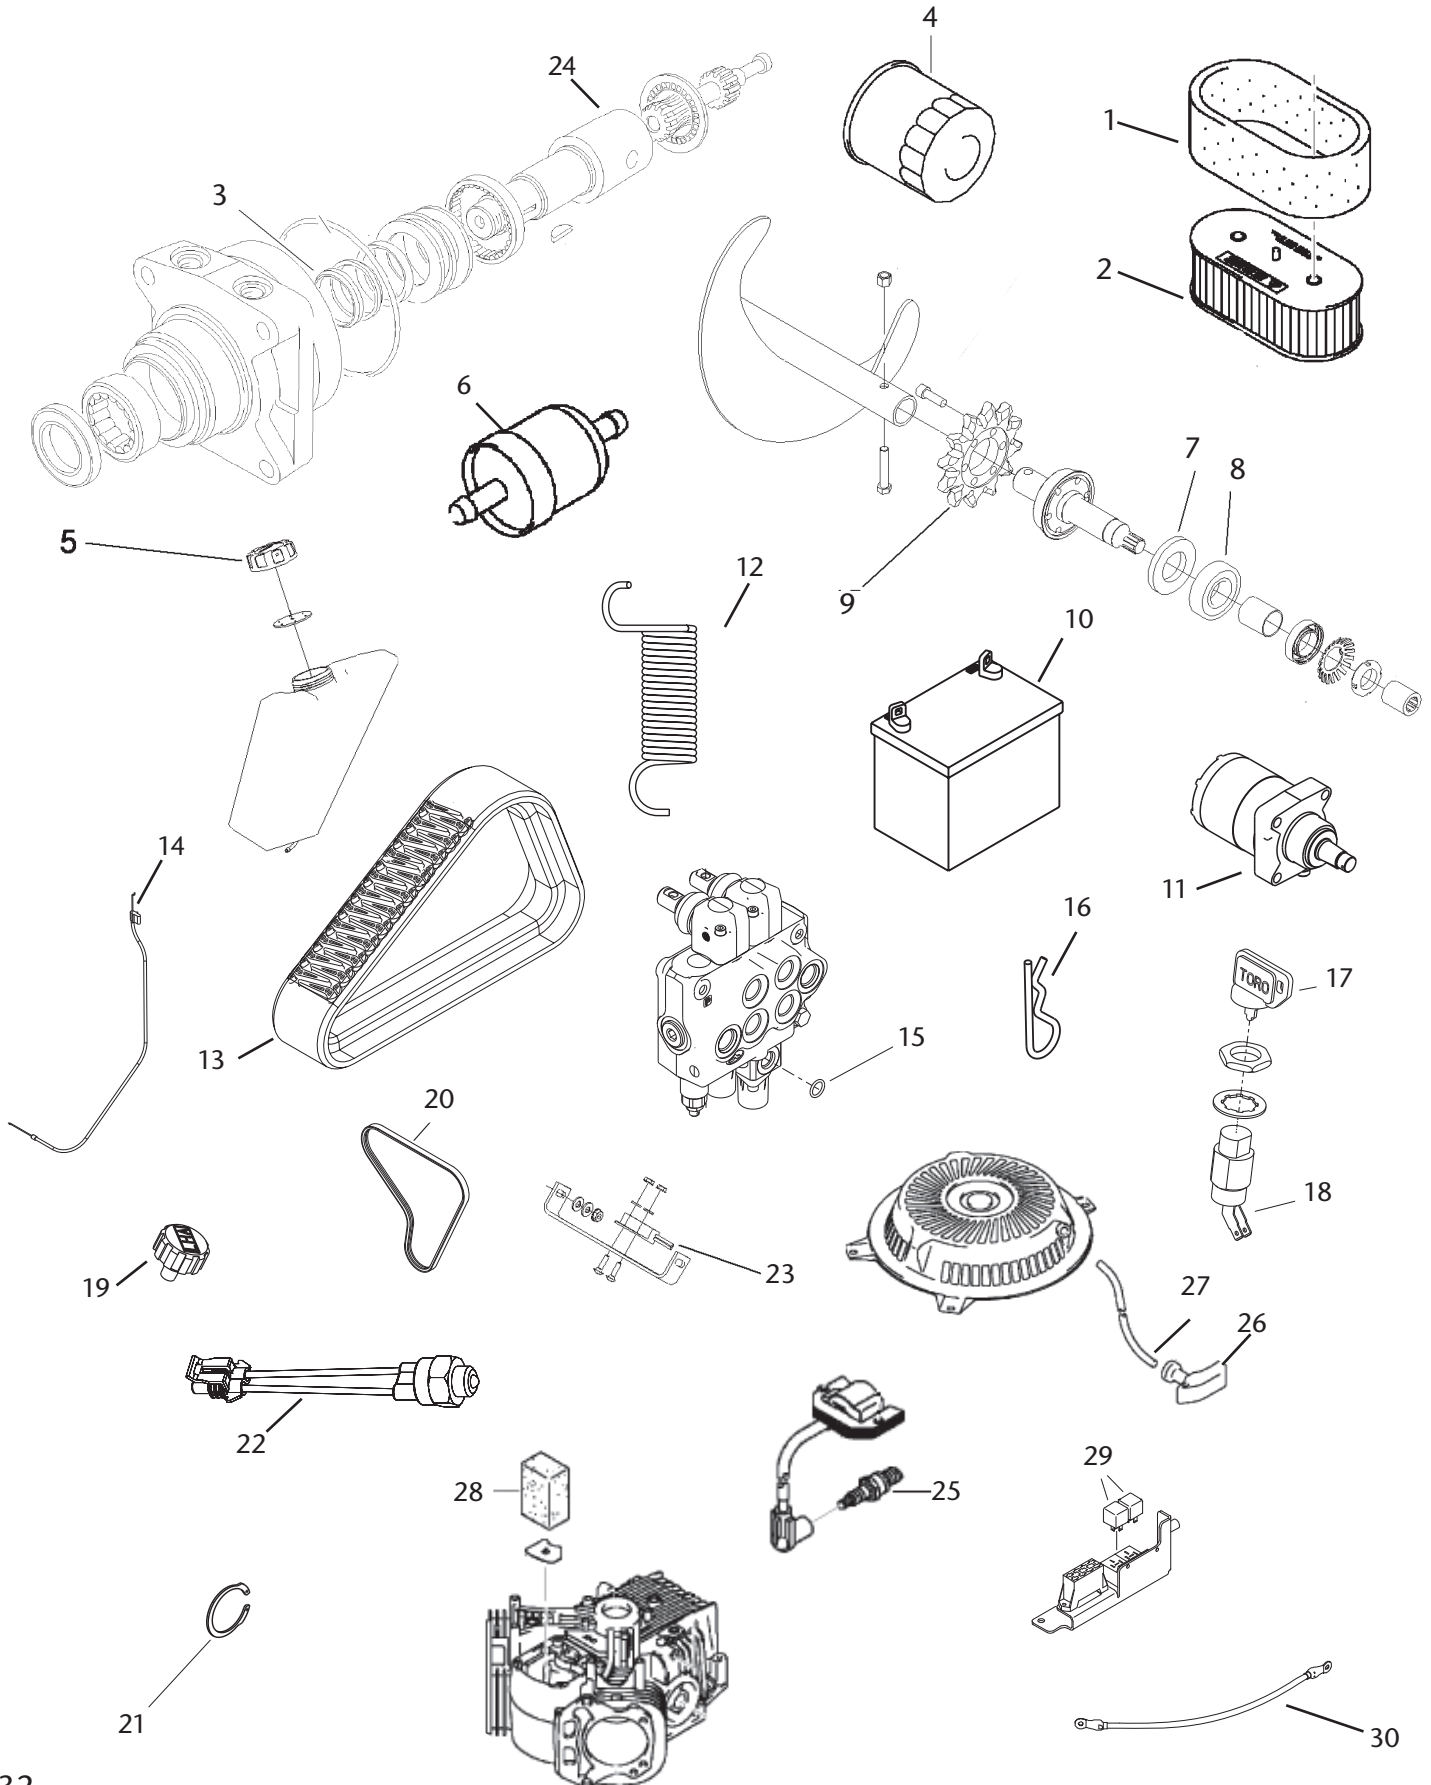


TRX Trencher

Ref. No.	Part #	Description	22970 TRX-15	22971 TRX-19	22972 TRX-16	22974 TRX-26	22973 TRX-20
1	115-6473	ELEMENT-FILTER, AIR	X	X			
2	115-6474	ELEMENT-FILTER, AIR	X	X			
3	100-6131	SEAL KIT	X	X			
4	KW10761	FILTER-OIL	X	X			
5	104-7418	CAP-FUEL, GAS	X	X		X	
6	121-4570	FILTER-FUEL			X	X	X
7	114-2955	SEAL-GREASE	X	X	X	X	X
8	104-5311	BEARING-BALL	X	X	X	X	X
8	106-8871	BEARING-BALL	X	X	X	X	X
9	104-1964	SPROCKET-TRENCHER	X	X	X	X	X
10	104-8162	BATTERY		X		X	X
11	104-8470	HYD WHEEL MOTOR ASM	X	X	X	X	X
12	112-2738	SPRING-TORSION	X	X	X	X	X
13	112-4816	TRACK-RUBBER	X	X	X	X	X
14	115-1211	CABLE-CONTROL	X	X	X	X	X
15	237-42	O-RING	X	X	X	X	X
16	3290-467	PIN-HAIR	X	X	X	X	X
17	63-8360	KEY-IGNITION (W/SHIELD)	X	X	X		X
18	104-2541	SWITCH ASM		X		X	X
18	29-5560	SWITCH-ON / OFF	X		X		
19	68-6150	BREATHER	X	X	X	X	X
20	114-2991	BELT-V	X	X	X	X	X
21	106-7595	RING-SNAP, INTERNAL	X	X	X	X	X
22	72-4310	SWITCH-BALL	X	X	X	X	X
23	100-1270	SWITCH-PROXIMITY	X	X	X	X	X
24	99-3090	SHAFT-COUPLING	X	X	X	X	X
25	115-6407	SPARKPLUG	X	X			
25	92-2153	SPARK PLUG			X	X	X
26	115-6457	GRIP-STARTER, RECOIL	X				
27	115-6461	ROPE	X				
28	115-6558	ELEMENT-BREATHER		X			
29	98-7249	RELAY		X		X	X
30	117-6422	CABLE-BATTERY, BLACK				X	X
*	104-5309	RING-RETAINING	X	X	X	X	X
*	104-5310	SEAL-LIP	X	X	X	X	X
*	105-6184	SEAL OVERHAUL KIT	X	X	X	X	X
*	107-1183	SEAL KIT	X	X	X	X	X
*	114-8639	KEY-WOODRUFF	X	X			
*	120-5378	BEARING	X	X	X	X	X
*	251-259	BEARING-BALL			X	X	X
*	3296-53	NUT-LOCK, NI	X	X	X	X	X
*	KW10163	KEY-WOODRUFF			X	X	X

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

* Not illustrated

 
Vibratory Plow

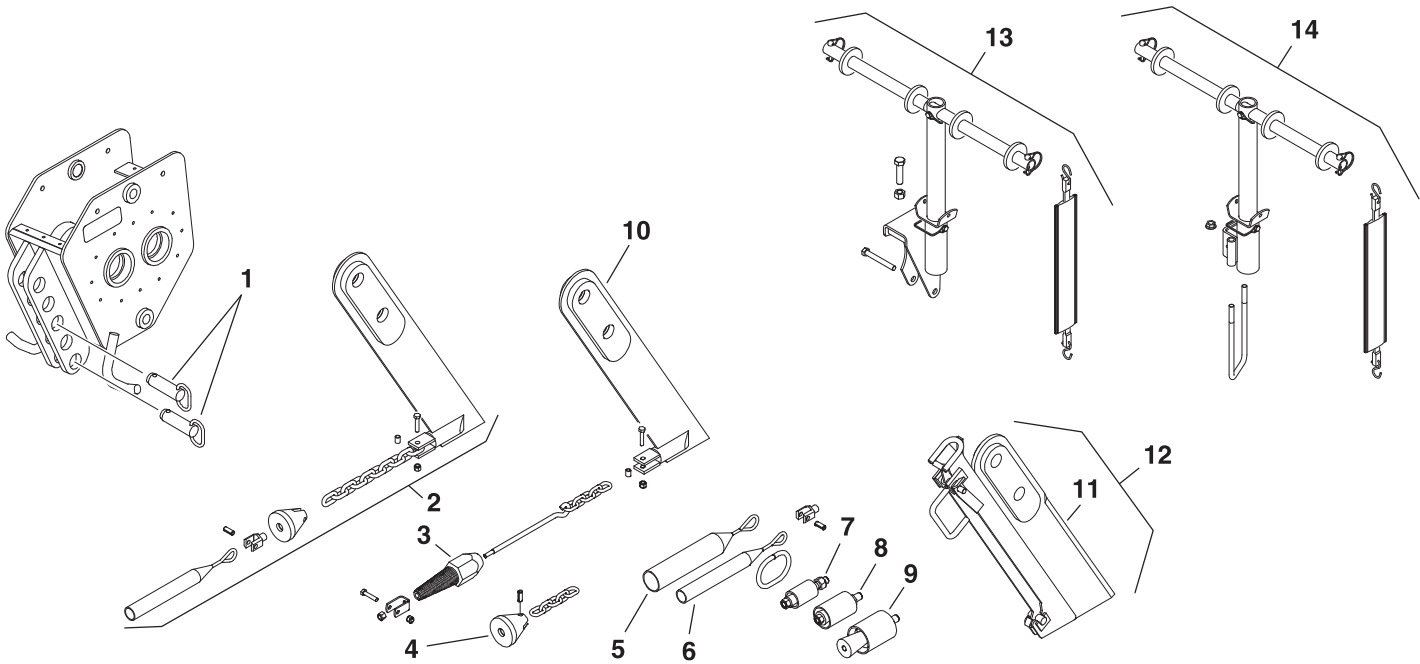

Ref. No.	Part #	Description	22437	22910	22911
1	99-2710	BLADE PIN ASM	X	X	
2	104-5944	PLOW BLADE AND GRIP KIT	X	X	X
3	104-0646	PULLER-PIPE	X	X	X
3	99-2748	PULLER-PIPE	X	X	X
4	100-6337	BULLET-PULLER	X	X	X
5	100-1662	BASKET-GRIP (1.25-1.5)	X	X	X
6	100-1661	BASKET-GRIP (.75-1.25)	X	X	X
7	100-6285	PULLER ASM (1 INCH)	X	X	X
8	100-6290	PULLER ASM (1.5 INCH)	X	X	X
9	100-6294	PULLER ASM (2 INCH)	X	X	X
10	106-7646-03	PLOW BLADE ASM (.38 X 12)	X	X	X
10	99-2682-03	PLOW BLADE ASM (.25 X 12)	X	X	X
10	99-8600-03	PLOW BLADE ASM (.5 X 18)	X	X	X
10	99-8647-03	PLOW BLADE ASM (.38 X 12)	X	X	X
11	104-2664	BLADE-CHUTED	X	X	X
12	104-0640	CHUTED BLADE ASM	X	X	X
13	104-2685	TX SPOOL CARRIER KIT	X	X	X
14	104-2661	SPOOL CARRIER ASM	X	X	X

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

 Wheels & Tires

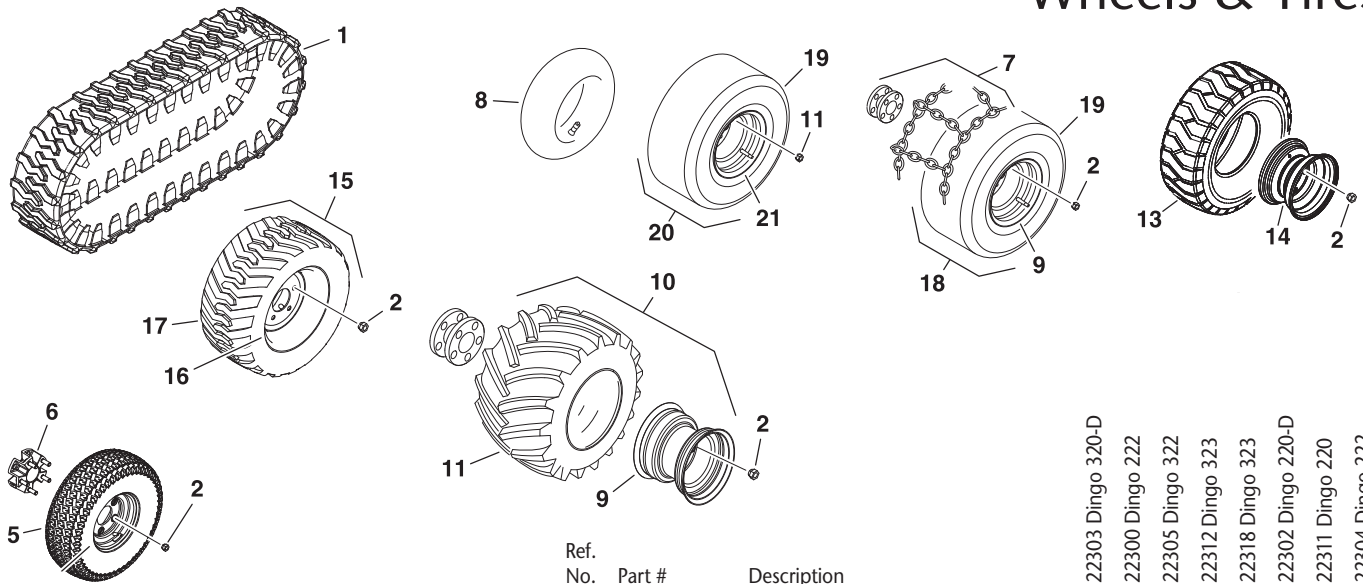


Ref. No.	Part #	Description	22303 Dingo 320-D	22300 Dingo 222	22305 Dingo 322	22312 Dingo 323	22318 Dingo 323	22302 Dingo 220-D	22311 Dingo 220	22304 Dingo 222	22317 Dingo 220
1	100-8847	TRACK-DINGO	X	X	X	X	X	X	X	X	X
2	242-50	NUT-LUG	X	X	X	X	X	X	X	X	X
5	98-2662	TIRE	X	X	X	X	X	X	X	X	X
6	100-8844	HUB ASM	X	X	X	X	X	X	X	X	X
7	100-4140	SWS TIRE CHAIN KIT	X		X	X			X	X	
8	105-4070	TUBE-INNER	X	X	X	X	X	X	X	X	X
8	106396	TUBE-TIRE	X	X	X	X	X	X	X	X	X
9	98-4753	WHEEL	X	X	X	X	X	X	X	X	X
10	99-3140	WHEEL AND TIRE ASM RH (PO	X	X	X	X	X	X	X	X	X
10	99-3141	WHEEL AND TIRE ASM LH (PO	X	X	X	X	X	X	X	X	X
11	99-3111	AG TIRE-18 X 8.50 - 8 (PO	X	X	X	X	X	X	X	X	X
12	104-0572	WHEEL AND TIRE ASM, NARRO	X	X	X	X	X	X	X	X	X
13	104-0574	TIRE	X	X	X	X	X	X	X	X	X
13	104-0575	TUBE-TIRE	X	X	X	X	X	X	X	X	X
14	104-0573	WHEEL	X	X	X	X	X	X	X	X	X
15	98-2747	LH WHEEL AND TIRE ASM	X	X	X	X	X	X	X	X	X
15	99-1447	RH WHEEL AND TIRE ASM	X	X	X	X	X	X	X	X	X
16	98-2748	WHEEL	X	X	X	X	X	X	X	X	X
17	98-2749	TIRE	X	X	X	X	X	X	X	X	X
18	98-4709	ASM - WHEEL/TIRE	X	X	X	X	X	X	X	X	X
19	98-4757	TURF TIRE-18 X 8.50-8	X	X	X	X	X	X	X	X	X
20	99-3257	TIRE & WHEEL ASM		X				X			
21	99-3063	WHEEL		X				X			
22	110-8831	TIRE SEALANT - 16OZ	Recommended for all tires 22								
22	110-8832	TIRE SEALANT - 32OZ									
22	110-8833	TIRE SEALANT - 1 GAL									
22	110-8834	TIRE SEALANT - 5 GAL									
22	110-8835	TIRE SEALANT PUMP - 1 GAL									
22	110-8836	TIRE SEALANT PUMP - 5 GAL									
*	242-35	NUT-WHEEL									

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

* Not illustrated

 Vibratory Plow and Trencher

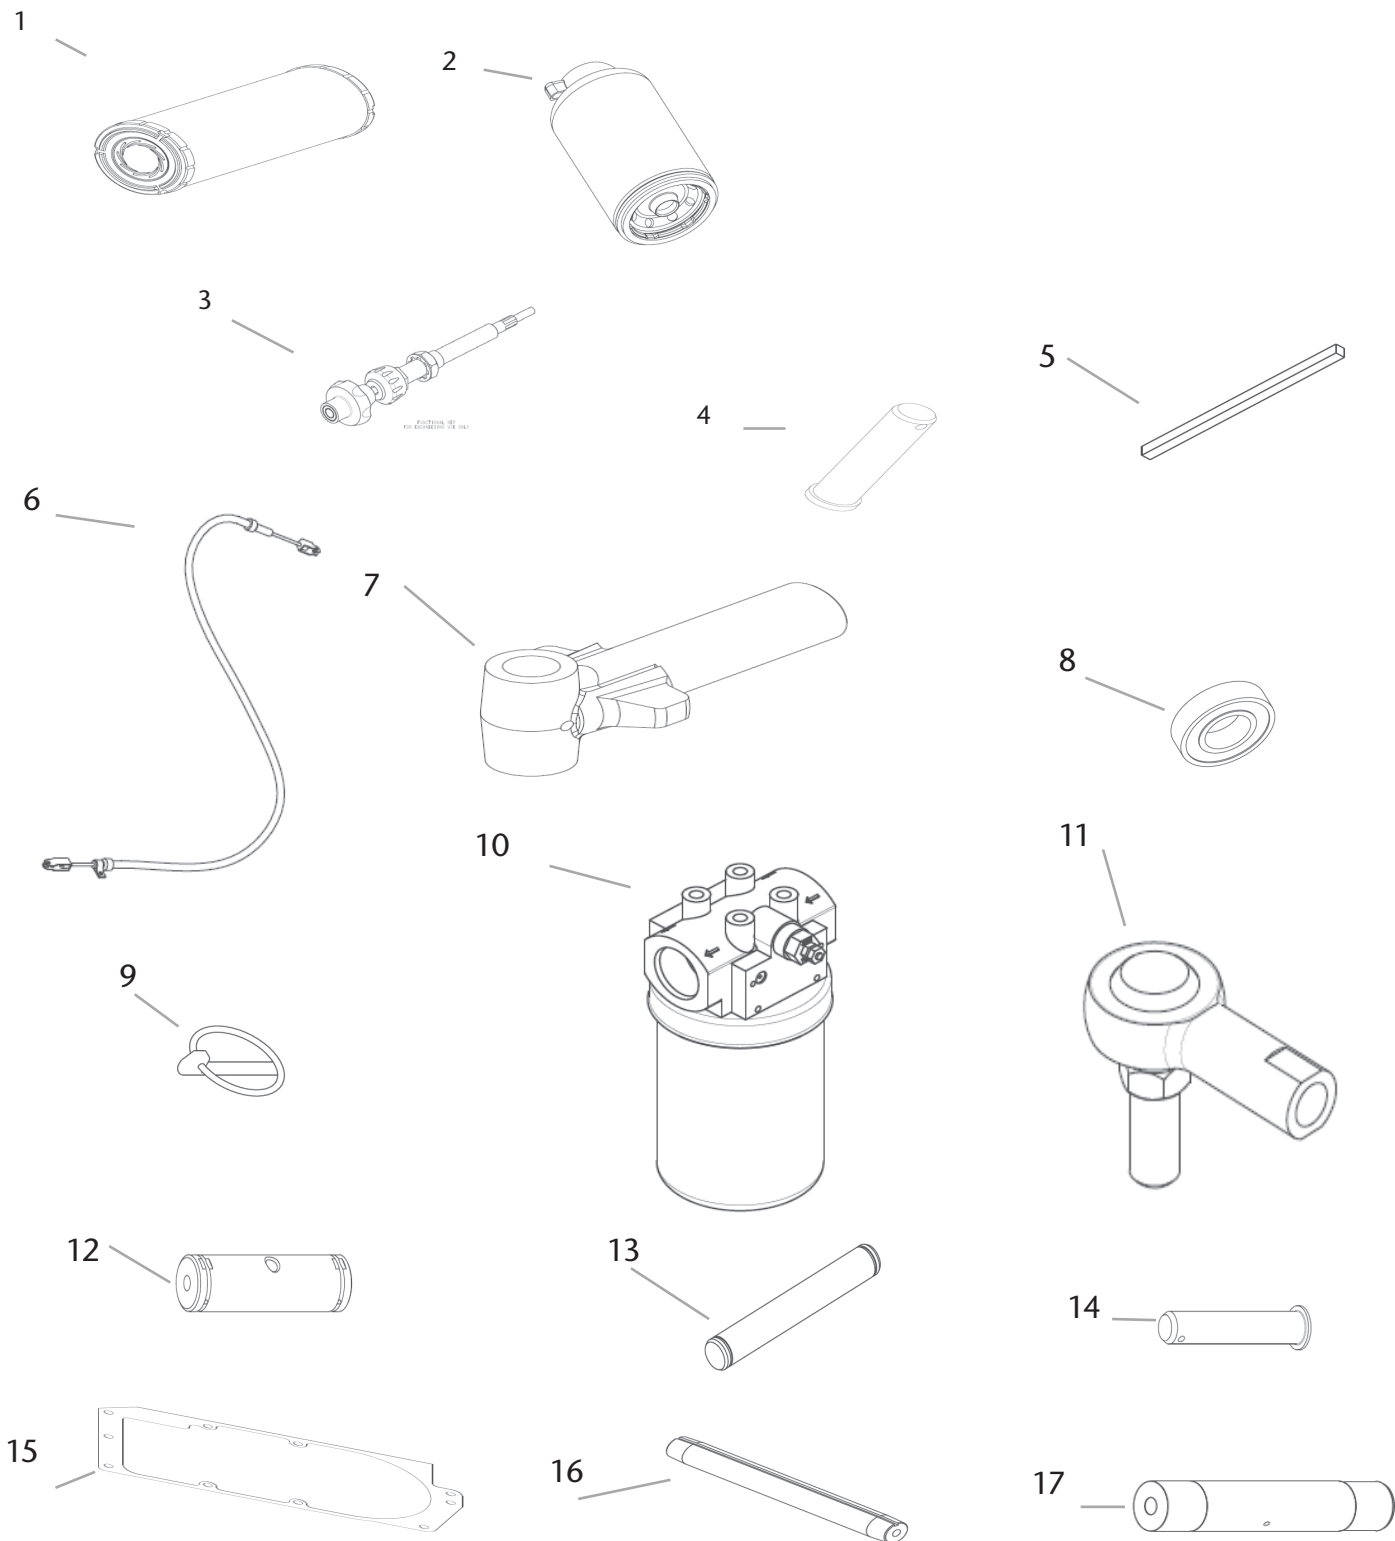

Vibratory Plow and Trencher

Ref. No.	Part #	Description	25400 Pro Sneak 360	25402 P40 Vibratory Plow	Maxi Sneaker Series C	Maxi Sneaker Series E
1	108-3810	FILTER-AIR	X			
2	110-9049	FILTER-SPIN ON	X			
3	AU112937A1	CABLE-THROTTLE	X		X	X
4	AU113192A1	PIN-PIVOT	X	X	X	X
5	AU116373A1	KEY-SQUARE	X	X	X	X
6	AU119124A2	CABLE-BRAKE	X		X	X
7	AU127310A1	PIVOT-ARTICULATION	X		X	X
8	AUA26581	BEARING	X		X	X
9	107-3039	PIN-KLIK	X	X	X	X
10	AUD121629	OIL FILTER ASM	X		X	X
11	AUH289652	JOINT-BALL (FEMALE)	X		X	X
12	AUH371054	PIN-PIVOT	X		X	X
13	AUH382457	PIN-LIFT	X	X	X	X
14	AUH393843	PIN-MOUNTING, BLADE	X	X	X	X
15	AUH413153	GASKET	X		X	X
16	AUH421867	SHAFT-MOUNTING, PLOW ARM	X	X	X	X
17	AUH436788	PIN-BEARING	X	X	X	X

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

Tree Care Compact Utility Line



STX Stump Grinders pg. 39



Handle Bar Stump Grinders pg. 40-41

 


Brush Chipper pg. 42



Log Splitter pg. 43


STX Stump Grinders

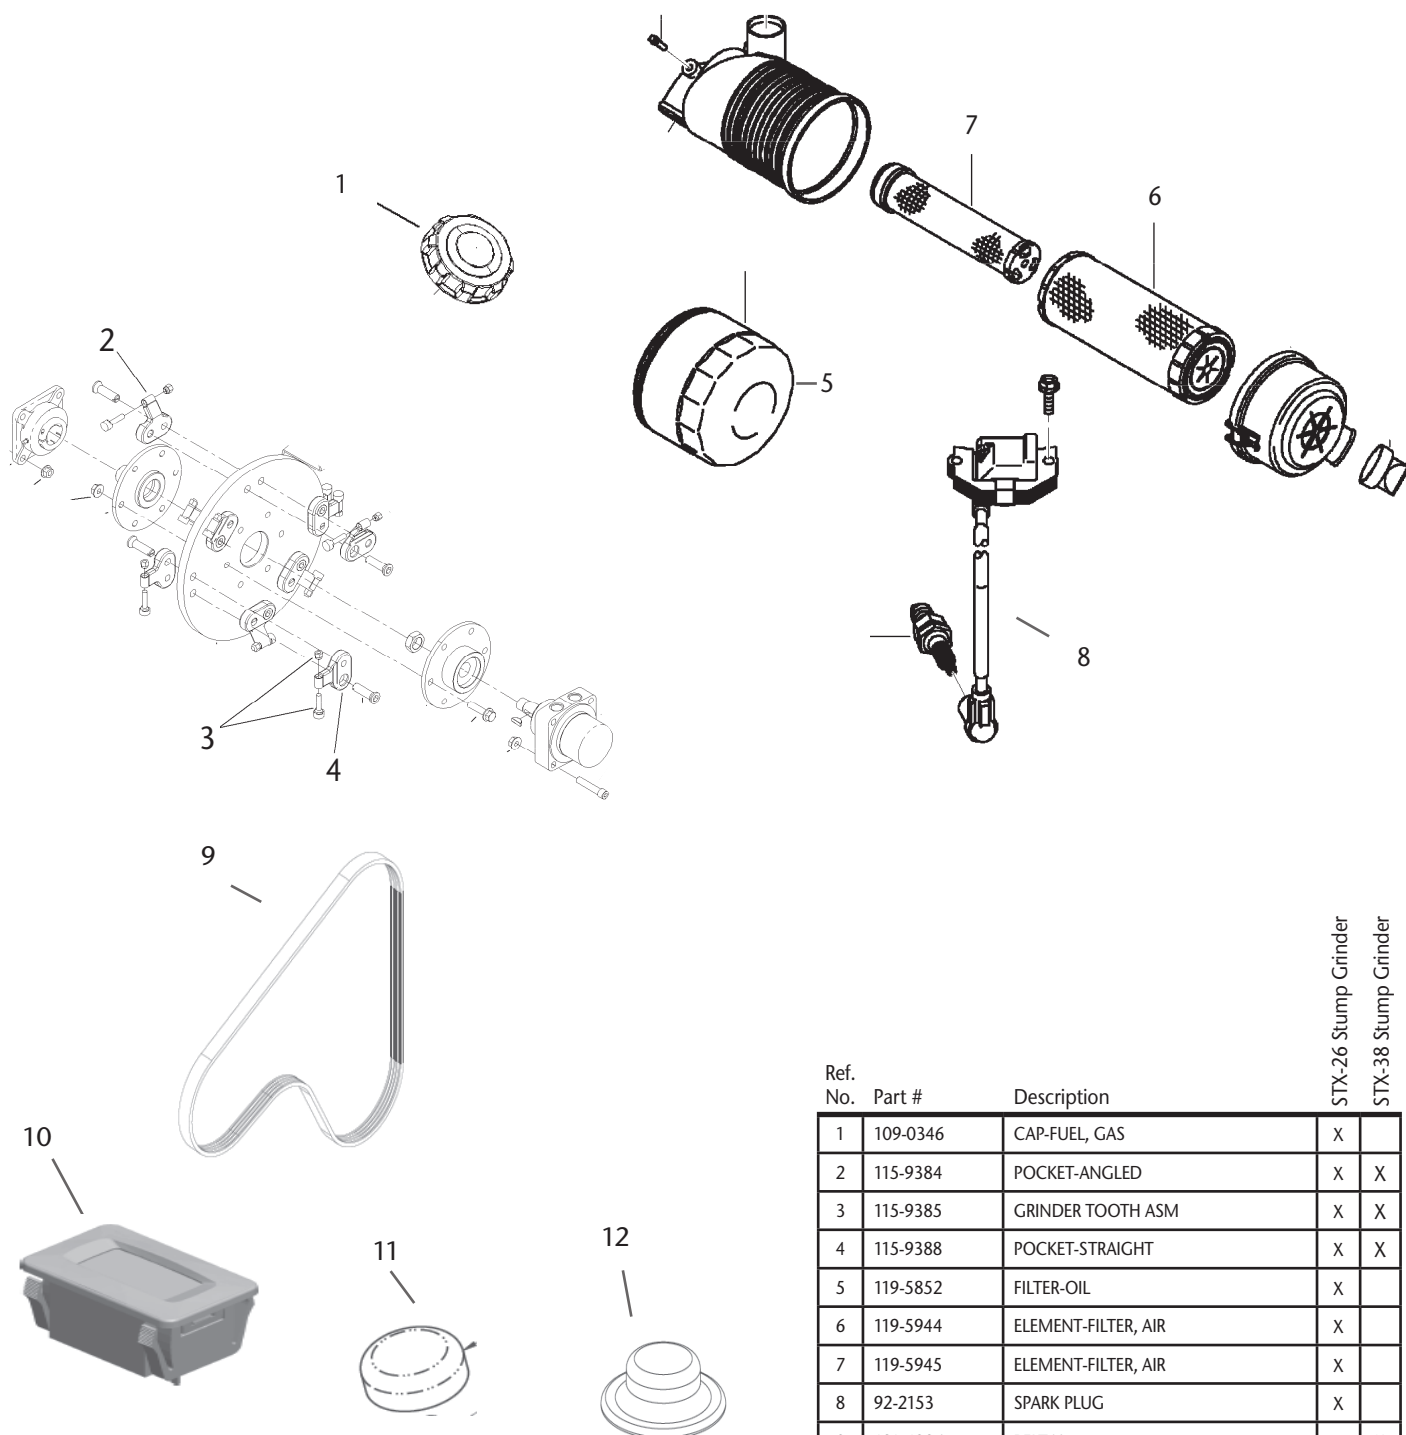

Ref. No.	Part #	Description	STX-26 Stump Grinder	STX-38 Stump Grinder
1	109-0346	CAP-FUEL, GAS	X	
2	115-9384	POCKET-ANGLED	X	X
3	115-9385	GRINDER TOOTH ASM	X	X
4	115-9388	POCKET-STRAIGHT	X	X
5	119-5852	FILTER-OIL	X	
6	119-5944	ELEMENT-FILTER, AIR	X	
7	119-5945	ELEMENT-FILTER, AIR	X	
8	92-2153	SPARK PLUG	X	
9	121-4326	BELT-V	X	X
10	120-2244	HOURLY-METER	X	X
11	106-7557	CAP-WHEEL, BEARING	X	X
12	119-4641	BOOT-BUTTON	X	X
*	3253-4	WASHER-LOCK	X	X

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.
* Not illustrated

 Handle Bar Stump Grinders

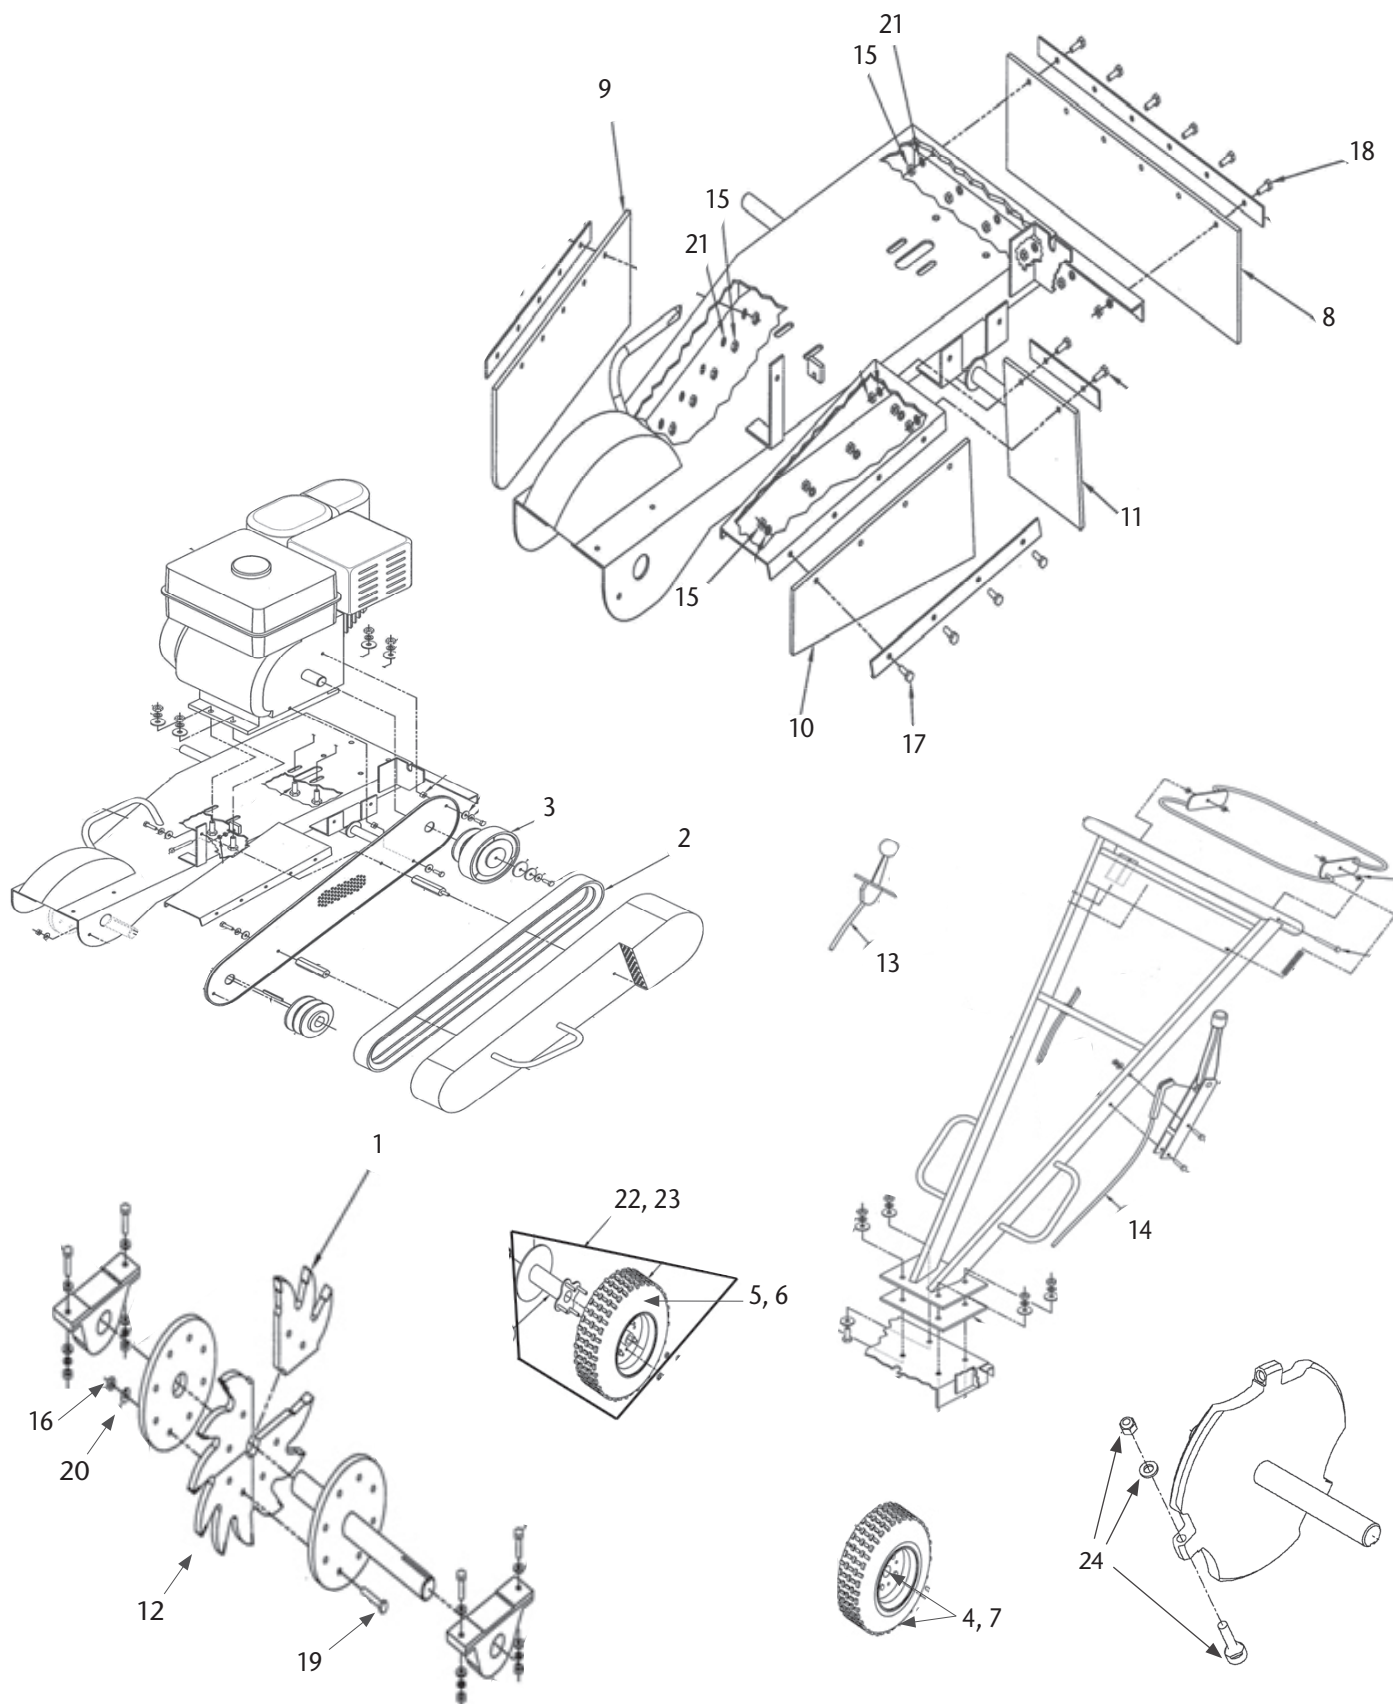


Handle Bar Stump Grinders

Ref. No.	Part #	Description	SGR-6 Stump Grinder	SGR-13 Stump Grinder
1	119-4702	BLADE-GRINDER	X	
2	120-1203	BELT-3V		X
2	120-1374	BELT-DRIVE	X	
3	120-1204	CLUTCH		X
3	120-1215	CLUTCH-CENTRIFUGAL	X	
4	120-1216	TIRE ASM (W/ HUB)		X
5	120-1287	TIRE ASM		X
6	120-1288	TIRE ASM	X	
7	120-1290	TIRE ASM		X
8	120-1236	FLAP-REAR		X
9	120-1240	FLAP-RH		X
10	120-1242	FLAP-LH		X
11	120-1244	FLAP-SMALL		X
12	120-1276	QUADRABLADE ASM		X
12	120-1277	QUADRUBLADE ASM	X	
13	120-1285	CABLE-THROTTLE		X
13	120-1375	CABLE-THROTTLE	X	
14	120-1286	CABLE-BRAKE		X
15	3217-6	NUT-HEX		X
16	71-9310	SPACER	X	X
17	322-3	SCREW-HH		X
18	322-5	SCREW-HH	X	X
19	323-8	SCREW-HH	X	
20	104-8301	NUT-FLANGE, NI	X	
20	3296-39	NUT-LOCK, NI		X
21	323-8	SCREW-HH	X	
22	120-1214	TIRE ASM (W/ HUB AND BRAK		X
23	120-1325-03	BRAKE HUB ASM	X	
*24	130-2221	GRINDER TOOTH ASSEMBLY, KIT	X	X

* Item 24 is used on the new 2014 SGR-6 and SGR-13 Stump Grinder Tooth Wheel Assembly. Kit includes grinder tooth, washer and nut-lock.

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

 BC-25 Brush Chipper

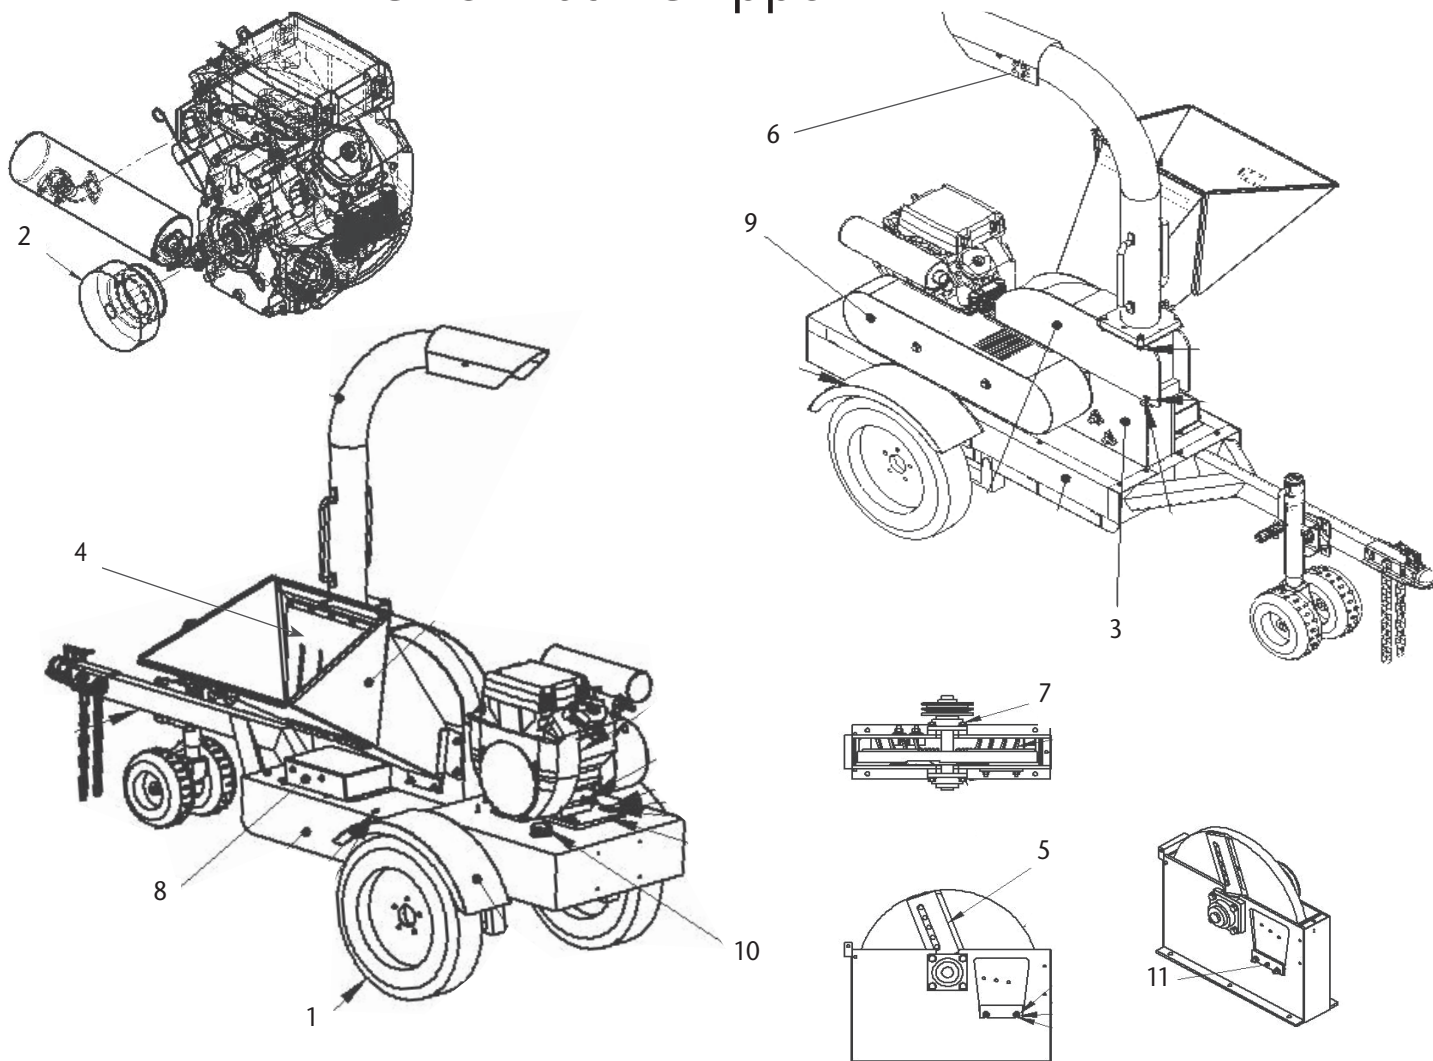


Ref. No.	Part #	Description	Suggested Retail	Standard Dealer	Promo Retail	Promo Dealer
-------------	--------	-------------	---------------------	--------------------	-----------------	-----------------

Ref. No.	Part #	Description
1	120-1206	WHEEL AND TIRE ASM
2	120-1217	CLUTCH-CHIPPER
3	120-1292	SWITCH-PLUNGER, NC (W/COVER)
4	120-1454	FLAP-CHIPPER
5	119-5167	BLADE-CHIPPER
6	100-1449	KNOB
6	120-1537	KNOB
7	120-1538	BEARING ASM
8	104-8162	BATTERY
9	120-1546	BELT-V, CHIPPER
9	120-1839	BELT-V, BANDED
10	115-7788	CAP-FUEL
11	120-1483	BLOCK-CUTTER
*	323-10	SCREW-HH

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

* Not Illustrated

 LS-9 Log Splitter

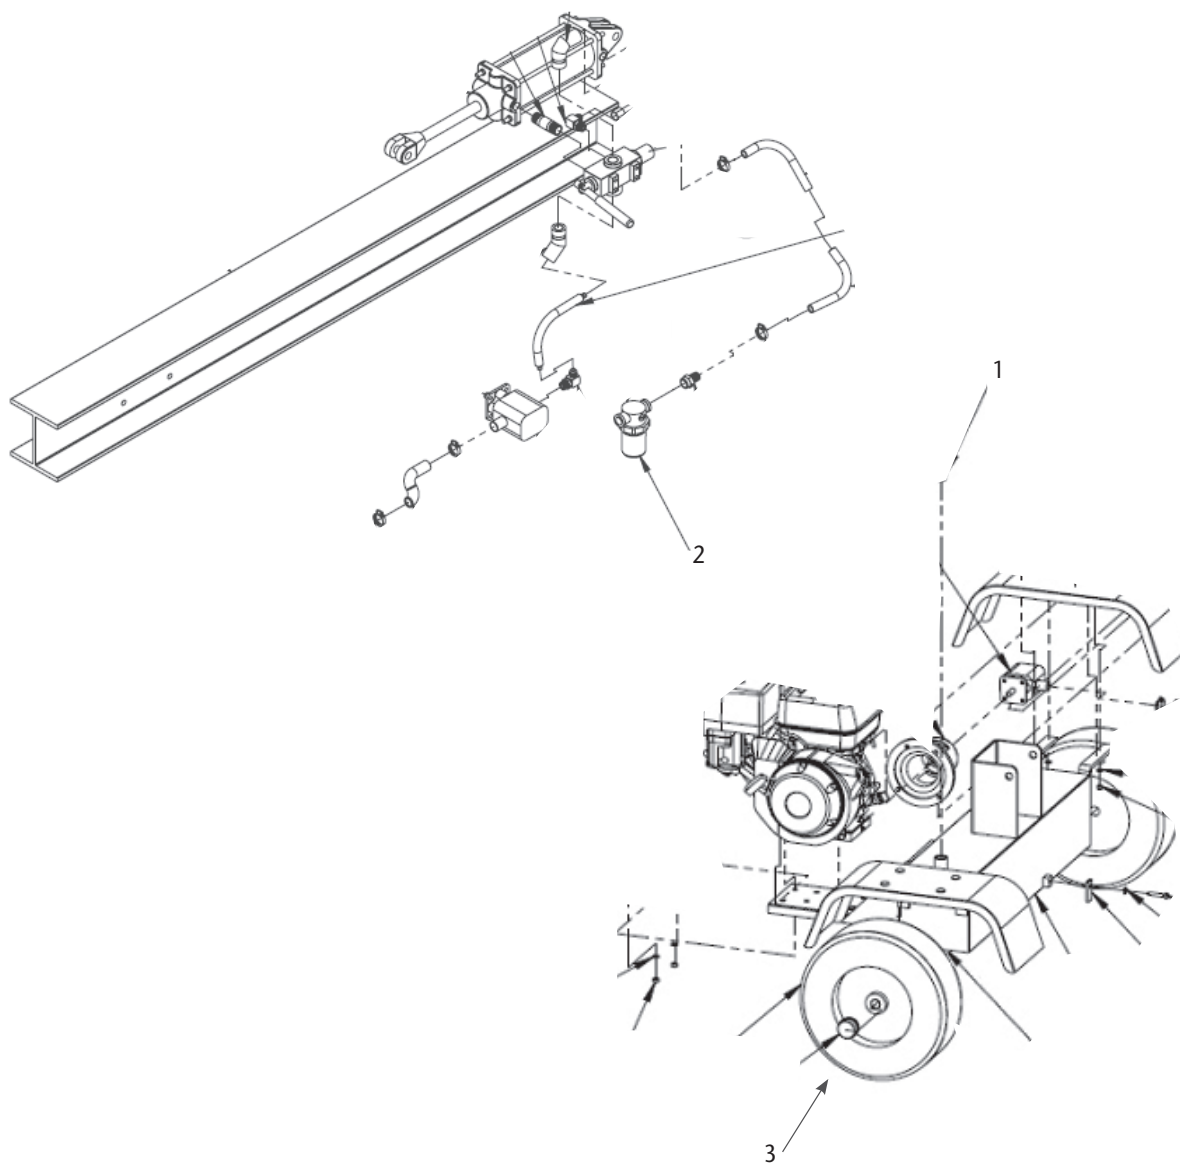

Ref. No.	Part #	Description
1	120-1412	CAP-BREATHER
2	120-1414	FILTER AND HEAD ASM
3	120-1206	WHEEL AND TIRE ASM
*	120-1565	LIGHT-TAIL
*	3253-21	WASHER-LOCK

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.
 * Not Illustrated



Compact Utility Equipment Kits & Accessories

TRACTION UNITS

KIT NUMBER	DESCRIPTION / INFORMATION	MODELS USED ON
22475	Operator Ride-On Platform for gas powered TX Compact Utility Loaders	22306, 22307, 22308
22476	Operator Ride-On Platform for diesel powered TX Compact Utility Loaders	22319, 22320
98-2651	Diesel Engine Cylinder Head Heater Mounts front side of the cylinder head next to the air intake. 400w 115v heater that heats the antifreeze to assist in cold weather starts. Cord and installation instruction included.	22302, 22303, 22319, 22320
98-9937	Sand Sprocket recommended on chain drive traction units in heavy mud, clay or sandy conditions. Sprocket will work on all Australian built traction units. Comes standard on 1999 and up Toro manufactured machines.	22300, 22302, 22304
99-3159	Battery Hold Down Bracket used to hold down a 26j60 525 cca Exide battery. Needed to convert Australian battery to US battery.	22302
99-4360	Cross Over Relief Kit includes installation instructions, hydraulic hoses, cross relief valve and mounting hardware. This kit must be installed on wheeled Dingo units using the hydraulic breaker for normal warranty to apply.	22300, 22302, 22303, 22304, 22305, 22311, 22312
105-4052	Gas Tank Conversion Kit contains all necessary parts to convert a legacy or interim style Dingo fuel tank to current production style fuel tank.	22300
100-2532	Diesel Tank Conversion Kit contains all necessary parts to convert a legacy or interim style Dingo fuel tank to current production style fuel tank.	22302
100-4163	Hydraulic Cylinder Kit contains cylinder; instructions and parts book for new Texas style lift cylinder with internal phasing valve.	22303, 22304, 22305
100-4165	Poppet Quick Disconnect Seal Kit contains seals needed to rebuild the female poppet coupler.	22300, 22302, 22303, 22304, 22305
100-6119	Female Flush Face Coupler Repair Kit contains all parts needed to rebuild female flush face coupler.	22303, 22304, 22305, 22306
100-6120	Male Flush Face Coupler Repair Kit contains all parts needed to rebuild male flush face coupler.	
104-1874	Repair Kit for Snap Coupler Converter Kit 100-4789 contains all seals needed to rebuild couplers.	
104-4221	Hydraulic Valve Kit Flow control valve containing spool quad seals	22303, 22304, 22305
104-4635	Remote Air Cleaner converts glass jar pre-cleaners to Nelson type air cleaner used on 4-PAW units	22300, 22304
104-5750	Diesel Pump Cover Kit replaces existing pump cover on Australian Diesel machine. Incorporates a battery hold down bracket.	22302
104-7422	Hydraulic 4 Spool Valve Kit has added seals to prevent spools from sticking	22304, 22312, 22317, 22318
104-9997	TX Muffler Guard Kit heavy-duty guard shields muffler from debris and damage from equipment.	22306

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.

Compact Utility Equipment Kits & Accessories

TRACTION UNITS

KIT NUMBER	DESCRIPTION / INFORMATION	MODELS USED ON
106-7692	One Piece Flush Face Coupler seal kit for new female coupler FEM-501 10BMS-NL for 2002 traction units. Same seal kit will fit the new female coupler FEM-501 10F0-NL for attachments also.	105-8394, 104-6134
105-8400	Tail Pipe Kit replaces the original tail pipe #99-3272. The kit includes 2 pipes, adjustable mounting bracket, mounting bolt, washers & nuts, 2 exhaust clamps, and instructions.	22300
106-7580	TX 420 brake kit includes replacement brake block weldment, hardened brake plate and drive wheel hub. Kit is needed only if brake plate will not set due to damage to the welded 3 piece brake block.	22306
106-7581	TX 425 brake kit includes replacement brake block weldment, hardened brake plate and drive wheel hub. Kit is needed only if brake plate will not set due to damage to the welded 3 piece brake block.	22307
106-7611	RH tensioner kit fits 220000001 through 220000399	22307
106-7612	LH tensioner kit fits 220000001 through 220000399	22307
106-7722	Track Kit TX 425 one track, ten road wheels, and cast track guide (serial 220000300-240000300)	22307
106-7723	Track Kit TX 425 one track, ten road wheels, and no cast track guide (serial 230000301 & up if steel track guides are not damaged)	22307
108-4650	Hood Latching Kit includes a guide, new cam latch, and mounting hardware. It will assist hood alignment into the latch and ease opening and closing the hood. (22306/07 serial 240000301-240000999 & 22308 serial 240000100-240000999)	22306, 33307, 22308
108-4657	TX Rear Cover Kit will replace the rear plastic door with a three-panel metal cover. Includes mounting hardware, two side panels, and one rear panel. (22306 serial 200000100-240000300 & 22307 serial 220000100-240000300)	22306, 22307
107-9310	TX Reference Guide Kit includes a set of all-weather dash mounted operating instruction cards.	22306, 22307, 22308, 22319, 22320
237-81	O-Ring between Coupler and Adapter for flush face couplers	All
117-2727	O-Ring Kit replacement o-rings for most hydraulic connections	All
490-7403	TX Operator Training Video	22306, 22307, 22308, 22319, 22320
490-7784	Rental POS Video on DVD covers operating wheeled and TX units, and rental of TX	All
492-1722	SWS Dingo Service Manual contains information needed to rebuild and repair Dingo traction units	22300, 22302, 22304
361-10 Red 361-9 Blk	12 oz can of Touch-Up Spray Paint	All Traction Units All Attachments
112-0178 Red 112-0176 Blk	0.6 oz Brush-In-Cap Touch-Up Paint	All Traction Units All Attachments
112-0177 Red 112-0175 Blk	0.3 oz Paint Marker Touch-Up Paint 112-0175 Black	All Traction Units All Attachments

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.



Compact Utility Equipment Kits & Accessories

ATTACHMENTS

KIT NUMBER	DESCRIPTION / INFORMATION	MODELS USED ON
23161	Wheeled Dingo Backhoe mounting Kit contains all brackets needed to mount backhoe to traction unit	22412, 23160, 23163
23162	TX 420/425 Backhoe Mounting Kit contains all bracket and mounting hardware needed to mount backhoe to traction unit	22412, 23160, 23163
104-5740	Backhoe Rubber Stabilizer Pads replaces the standard steel foot. Use on concrete and asphalt.	22412, 23160
112-2532	Heat shield kit for backhoe to protect operator from the heat of the engine.	22412, 23160, 23163
112-4881	TX 500 series Valve Update kit for vibratory plow model 22910.	22319, 22320
20035 Snow Cab	Contact Original Cab Company @ 765-663-2214	22300, 22302, 22303, 22304, 22305, 22311, 22312, 22317, 22318
Sun Shade	Contact Original Cab Company @ 765-663-2214	22300, 22302, 22303, 22304, 22305, 22312

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.



Program Parts Index

BY PART NUMBER

Part #	Description	Page
100-1270	SWITCH-PROXIMITY	10,32
100-1283	CABLE-BRAKE	10
100-1449	KNOB	42
100-1661	BASKET-GRIP (.75-1.25)	34
100-1662	BASKET-GRIP (1.25-1.5)	34
100-1699	SAND SPROCKET-12T	30
100-1854	PLUG-GLOW	8
100-1881	ELEMENT-BREATHING	8
100-1979	V-BELT	8
100-4140	SWS TIRE CHAIN KIT	35
100-4163	CYLINDER KIT	6
100-4600-01	SKID ASM	25
100-4640	9" BACKHOE BUCKET ASM	15
100-4641	12" BACKHOE BUCKET ASM	15
100-4642	16" BACKHOE BUCKET ASM	15
100-4701	NIPPLE-CONNECT, PRESSURE	13
100-4744	KIT-FLUSH FACE, ORB	13
100-4752	BIT-BORING, 1-1/4 INCH	23
100-4753	BIT-BORING, 1-7/16 INCH	23
100-4754	BIT-BORING, 2 INCH	23
100-4755	BIT-BORING, 2-1/2 INCH	23
100-4756	REAMER-2 INCH	23
100-4757	REAMER, 2-7/8 INCH	23
100-4758	REAMER, 3-1/4 INCH	23
100-4759	REAMER, 3-1/2 INCH	23
100-4760	REAMER, 4-1/2 INCH	23
100-4789	QUICK DISCONNECT	13
100-6131	SEAL KIT	10,32
100-6285	PULLER ASM (1 INCH)	34
100-6290	PULLER ASM (1.5 INCH)	34
100-6294	PULLER ASM (2 INCH)	34
100-6337	BULLET-PULLER	34
100-7170	PIN-BUCKET	15
100-7201	CYLINDER-HYD, SWING	15
100-7203	CYLINDER-HYD, BOOM	15
100-7217	STABILIZER CYLINDER ASM	15
100-7233	TOOTH-BUCKET	15
100-8815	CAP-DUST, NIPPLE	13
100-8816	CAP-DUST, COUPLER	13
100-8840	KIT-LIGHT	12
100-8844	HUB ASM	35
100-8847	TRACK-DINGO	35

Part #	Description	Page
100-8931	TRACK	28
100-8940	KIT-LIGHT	12
104-0572	WHEEL AND TIRE ASM, NARRO	35
104-0573	WHEEL	35
104-0574	TIRE	35
104-0575	TUBE-TIRE	35
104-0640	CHUTED BLADE ASM	34
104-0646	PULLER-PIPE	34
104-1853	BOLT-HH	19
104-1948	BOOM ASM	30
104-1949	BOOM ASM	30
104-1951	ROLLER-NOSE	30
104-1964	SPROCKET-TRENCHER	30,32
104-1990	STD BUCKET TOOTH BAR KIT	17
104-1995	BEARING	30
104-1996	ROLLER-NOSE	30
104-1997	TRENCHER BOOM ASM	30
104-1998-03	BOOM ASM	30
104-1999-03	PLATE-TYNE	21
104-2026	BEARING	26
104-2028	TOOTH-STR, THREADED	26
104-2029	TOOTH-STR,CBORED	26
104-2030	TOOTH-CURVED,THREADED	26
104-2031	TOOTH-CURVED,CBORED	26
104-2043	TINE-RH	27
104-2044	TINE-LH	27
104-2048	TOOTH-BUCKET	17
104-2492	BATTERY	10
104-2541	SWITCH ASM	32
104-2661	SPOOL CARRIER ASM	34
104-2664	BLADE-CHUTED	34
104-2685	TX SPOOL CARRIER KIT	34
104-5311	BEARING-BALL	32
104-5847	SEAL KIT	26
115-0784-03	BOOM ASM	30
104-5943	SHAFT-FORK	20
104-5944	PLOW BLADE AND GRIP KIT	34
104-5996	TOOTH-WISDOM, CARBIDE	14
104-5997	TOOTH-CHISEL, CARBIDE	14
104-5998	PILOT-HARDFACED	14
104-6020	NARROW BUCKET TOOTH BAR K	17
104-6106	TX420 TRACK KIT	28

Program Parts Index

BY PART NUMBER

Part #	Description	Page
104-6107	KIT-TRACK, TX425	28
104-6114	NIPPLE-CONNECTOR	13
104-6115	COUPLER-FEMALE	13
104-6126	WASHER-FLAT	22
104-6134	COUPLER-FACE, FLUSH	13
104-7418	CAP-FUEL, GAS	8,32
104-7419	CAP-FUEL, DIESEL	8
104-8162	BATTERY	32,42
104-8301	NUT-FLANGE, NI	40
104-8470	HYD WHEEL MOTOR ASM	10,32
104-9979	BATTERY	10
105-0248	BOGEY WHEEL ASM	28
105-0249	MUFFLER	8
105-0330	KIT - THIGH SUPPORT (DING	12
105-4070	TUBE-INNER	35
105-5805	MAT-FOOT	12
105-8370	TILT CYLINDER ASM	6
105-8381	MUFFLER	8
117-1828	MUFFLER	8
105-8394	BULKHEAD COUPLER ASM	13
105-8395	BULKHEAD NIPPLE ASM	13
106-3161	CYLINDER-HYD	6
106-3162	CYLINDER-HYD	6
106-5705	PUMP-HYD, LH	6
106-5706	PUMP-HYD, RH	6
106-7557	CAP-WHEEL, BEARING	39
106-7595	RING-SNAP, INTERNAL	28,32
106-7620	TX ROAD WHEEL KIT	28
106-7621	ROAD WHEEL ASM	28
106-7626	TRENCHER CHAIN ASM	30
106-7627	TX ROAD WHEEL KIT, 5-PACK	28
106-7645	COUPLING-SHAFT	10
106-7646-03	PLOW BLADE ASM (.38 X 12)	34
106-7654	HYD MOTOR ASM	10
106-7656	KIT-SEAL	18
106-7666	TOOL-MOIL	18
106-7667	TOOL-CHISEL	18
106-7684	TOOL-ASPHALT	18
106-7692	NIPPLE-FACE, FLUSH	13
106-7695	TX413 QUICK COUPLER KIT	13
106-7720	LH TRACK KIT, TX425	28
106-7721	RH TRACK KIT, TX425	28
106-7722	TRACK KIT, TX425	28

Part #	Description	Page
106-7723	TX TRACK REBUILD KIT,	28
106-8871	BEARING-BALL	32
106-9394	CABLE-BRAKE	10
106-9422	BELT-POLY-V	6
106-9434	CABLE-THROTTLE	8
106-9435	CABLE-CHOKE	8
106-9470	PUMP-HYD	6
106-9584	MUFFLER ASM	8
106-9590	PUMP-HYD, RH	6
106-9591	PUMP-HYD, LH	6
107-2172	CAP-DIESEL	8
107-9075	PLUG-FILLER, OIL	8
107-9312	TOOTH-INNER	14
107-9313	TOOTH-OUTER	14
107-9314	PILOT-AUGER	14
107-9320	KIT-CYLINDER,TILT	6
107-9325	TRENCHER ROLLER ASM	30
107-9342	PIN-HITCH	16
107-9343	PIN-HITCH	16
107-9393-01	SKID PLATE ASM	29
107-9403	ROLLER-TOOTH, CARBIDE	22
107-9416	SPROCKET-17 TOOTH	22
107-9417	SPROCKET-22 TOOTH	22
107-9422	HANDLE-ARM, CASTOR	22
107-9433	WHEEL AND TIRE ASM	22
107-9435	ARM-SUPPORT, CASTOR	22
107-9438	CHAIN-ROLLER	22
107-9459	WASHER-FELT	22
107-9463	WASHER-FLAT	22
108-3810	FILTER-AIR	36
108-4679	CABLE-THROTTLE/CHOKE	8
108-5509	HYD CYLINDER ASM,	15
108-5640	TRACK-AGGRESSIVE TREAD, N	28
108-5653	PIN-PIVOT	16
108-5658	PIN-PIVOT	16
108-5683	13" BACKHOE BUCKET ASM	16
108-5692	TOOTH-BUCKET	16
108-6262	V-BELT	6
108-9749	TRACK-AGGRESSIVE TREAD, W	28

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.



Program Parts Index

BY PART NUMBER

Part #	Description	Page
109-0346	CAP-FUEL, GAS	39
110-0065	9" BACKHOE BUCKET ASM	16
110-0066	16" BUCKET ASM, FINAL	16
110-0069	ALIGNMENT TOOL F/A	28
110-0079	HYD CYLINDER ASM	20
110-0237	ROLLER-FLOAT	29
110-6697	GASKET-EXHAUST	8
110-8831	TIRE SEALANT - 16OZ	35
110-8832	TIRE SEALANT - 32OZ	35
110-8833	TIRE SEALANT - 1 GAL	35
110-8834	TIRE SEALANT - 5 GAL	35
110-8835	TIRE SEALANT PUMP - 1 GAL	35
110-8836	TIRE SEALANT PUMP - 5 GAL	35
110-9049	FILTER-SPIN ON	36
112-2511	BELT	8
112-2738	SPRING-TORSION	6,32
112-2791	CABLE-BRAKE	10
112-4816	TRACK-RUBBER	32
114-1439	ROD-SCREENING	19
114-1756	MOTOR-HYD	10
114-2955	SEAL-GREASE	32
114-2991	BELT-V	32
114-7800	BLADE-LEFT	19
114-7801	BLADE-RIGHT	19
115-1211	CABLE-CONTROL	32
115-5304	CAP-FUEL	8
115-6407	SPARKPLUG	32
115-6473	ELEMENT-FILTER, AIR	32
115-6474	ELEMENT-FILTER, AIR	32
115-7788	CAP-FUEL	42
115-8189	FILTER-OIL, ENGINE	8
115-9384	POCKET-ANGLED	39
115-9385	GRINDER TOOTH ASM	39
115-9388	POCKET-STRAIGHT	39
119-4641	BOOT-BUTTON	39
119-4702	BLADE-GRINDER	40
119-5167	BLADE-CHIPPER	42
119-5852	FILTER-OIL	39
119-5944	ELEMENT-FILTER, AIR	39
119-5945	ELEMENT-FILTER, AIR	39
120-1203	BELT-3V	40
120-1204	CLUTCH	40
120-1206	WHEEL AND TIRE ASM	42,43
120-1214	TIRE ASM (W/ HUB AND BRAK	40

Part #	Description	Page
120-1215	CLUTCH-CENTRIFUGAL	40
120-1216	TIRE ASM (W/ HUB)	40
120-1217	CLUTCH-CHIPPER	42
120-1236	FLAP-REAR	40
120-1240	FLAP-RH	40
120-1242	FLAP-LH	40
120-1244	FLAP-SMALL	40
120-1276	QUADRABLADE ASM	40
120-1277	QUADRUBLADE ASM	40
120-1285	CABLE-THROTTLE	40
120-1286	CABLE-BRAKE	40
120-1287	TIRE ASM	40
120-1288	TIRE ASM	40
120-1290	TIRE ASM	40
120-1292	SWITCH-PLUNGER, NC (W/COV	42
120-1325-03	BRAKE HUB ASM	40
120-1374	BELT-DRIVE	40
120-1375	CABLE-THROTTLE	40
120-1412	CAP-BREATHING	43
120-1414	FILTER AND HEAD ASM	43
120-1454	FLAP-CHIPPER	42
120-1483	BLOCK-CUTTER	42
120-1537	KNOB	42
120-1538	BEARING ASM	42
120-1546	BELT-V, CHIPPER	42
120-1839	BELT-V, BANDED	42
120-2244	HOURLY-METER	39
120-5378	BEARING	10,24,28
121-4326	BELT-V	39
121-4570	FILTER-FUEL	32
130-2221	GRINDER TOOTH ASSEMBLY, KIT	40
1-413540	CABLE-BATTERY, NEGATIVE	10
20-0980	BEARING	25
20-0990	BEARING-FLANGE, FRONT	25
20-1000	BEARING-FLANGE, REAR	25
218-578	FUSE-BLADE, 10 AMP	10
237-42	O-RING	6,32
242-50	NUT-LUG	35
253-118	SEAL-OIL	28
254-72	BEARING-CUP, TAPERED	10,22
254-94	BEARING-CONE, TAPERED	10,22
283-68	PIN-CLEVIS	21
283-72	PIN-LYNCH	15,30
29-5560	SWITCH-ON / OFF	32

Program Parts Index

BY PART NUMBER

Part #	Description	Page
32121-15	PIN-ROLL	20
3217-6	NUT-HEX	40
3217-8	NUT-HEX	19
322-3	SCREW-HH	40
322-5	SCREW-HH	40
323-8	SCREW-HH	40
324-29	BOLT-HH	27
3246-17	SETSCREW-HSH	27
3247-3	SCREW-SET	27
3253-6	WASHER-LOCK	19
325-7	SCREW-HH	27
3290-355	PIN-HAIR	15,21
3290-467	PIN-HAIR	10,32
3296-23	NUT-LOCK, NI	27
3296-39	NUT-LOCK, NI	40
3296-48	NUT-LOCK, NI	27
3296-53	NUT-LOCK, NI	14,24
353-989	PLUG-HEX, HOLLOW	6
354-79	CAP-DUST	6
54-0110	FILTER-OIL, TRANSMISSION	6
63-7650	SEPARATOR-FILTER / WATER	8
63-8300	ELEMENT-SPIN ON	8
63-8360	KEY-IGNITION (W/SHIELD)	10,32
66-3240	CAP-RADIATOR	8
68-6150	BREATHING	6,32
68-8950	TUBE-INNER (W/VALVE)	24
7-0045	SEAL-OIL	25
71-9310	SPACER	40
72-4310	SWITCH-BALL	6,32
86-3010	FILTER-OIL	6
92-2153	SPARK PLUG	32,39
92-6989	WIRE-21 INCH	10
93-3102	CAP-FUEL	8
93-5957	CAP-RADIATOR	8
93-7160	CAP-OIL, HYD	6
93-7498	PLUG-PLASTIC	6
93-9938	8 INCH WHEEL ASM	24
93-9939	TIRE	24
94-7372	ELEMENT-BRUSH, POLY	24
94-8178	SEAL KIT	10
95-3611	V-BELT	6
95-4192	UNLEADED GAS CAP ASM	8
95-5942	ELEMENT-BRUSH, WIRE (OPTI	24
96-1275	COUPLER-FACE, FLUSH	13

Part #	Description	Page
96-1276	NIPPLE-FACE, FLUSH	13
98-2662	TIRE	35
98-2710	DIESEL FUEL CAP ASM	8
98-2747	LH WHEEL AND TIRE ASM	35
98-2748	WHEEL	35
98-2749	TIRE	35
98-2759	MUFFLER	8
98-2767	MOTOR-WHEEL, HYD	10
98-4709	ASM - WHEEL/TIRE	35
98-4753	WHEEL	35
98-4757	TURF TIRE-18 X 8.50-8	35
98-4889-03	JIB	21
98-4897-03	TOW BAR ASM	21
98-4906	CHAIN-ROLLER	10
98-7249	RELAY	10
98-7612	FILTER-FUEL	8
98-8211	PILOT - AUGER	14
98-8214	PILOT - ROCK AUGER	14
98-8215	TEETH - ROCK AUGER	14
98-8223	TOOTH-RH,SOIL	30
98-8231-03	FORK FRAME ASM	20
98-8273	BIT-BORING, 1-3/4 INCH	23
98-8274	REAMER, 2-1/2 INCH	23
98-8276	TOOL-UNCOUPLING	23
98-8278	ROD-DRILL, 60 INCH	23
98-9056	COMB - LEVELING	21
98-9071	COVER-CHAIN, TILLER	27
98-9085	SPROCKET-11 TOOTH	27
98-9086	SPROCKET-20 TOOTH	27
98-9088	CHAIN-ROLLER	27
98-9089	LINK-CONNECTING	10,27
98-9800	TRACK	28
98-9931	BOLT	27
98-9935	KEY-SQUARE	27
98-9937	SPROCKET-25T	10
98-9939-03	FORK ASM	20
98-9942	CYLINDER-HYD	21
99-0160	BEARING	29
99-1352	KIT-SEAL	6,21
99-1395	CYLINDER - HYDRAULIC	17
99-1410	CHAIN-LIFT	21
99-1422	CONTROL-THROTTLE	8
99-1441	BATTERY	10
99-1447	RH WHEEL AND TIRE ASM	35



Program Parts Index

BY PART NUMBER

Part #	Description	Page
99-1683	ARM-PIVOT, LH	20
99-2303-01	BLADE-SCRAPER	25
99-2682-03	PLOW BLADE ASM (.25 X 12)	34
99-2710	BLADE PIN ASM	34
99-2748	PULLER-PIPE	34
99-3052	HYD MOTOR ASM	10
99-3063	WHEEL	35
99-3074	GASKET	6
99-3090	SHAFT-COUPLING	10,32
99-3111	AG TIRE-18 X 8.50 - 8 (PO	35
99-3140	WHEEL AND TIRE ASM RH (PO	35
99-3141	WHEEL AND TIRE ASM LH (PO	35
99-3173	ELEMENT-FILTER, AIR	8
99-3198	FILTER-SAFETY	8
99-3257	TIRE & WHEEL ASM	35
99-4315	PIN-MOUNTING	18
104-1996	ROLLER-NOSE	30
99-4345	SPACER	18
99-4355	BEARING-SHAFT, SQUARE	30
99-4363	TOOL-LINE CUT, CHISEL	18
99-4364	TOOL-LINE CUT, ASPHALT	18
99-5084	FILTER-ELEMENT	6
99-5147-03	POINT-SPEAR	21
99-5924	TOOTH-SOIL, LH	30
99-5925	TOOTH-SOIL, RH	30
99-6162	CYLINDER-LIFT	6
99-6173	CABLE-THROTTLE	8
99-7404	CABLE-POSITIVE	10
99-8343	GASKET-MUFFLER	8
99-8600-03	PLOW BLADE ASM (.5 X 18)	34
99-8647-03	PLOW BLADE ASM (.38 X 12)	34
99-9979	BEARING ASM	27
AU112937A1	CABLE-THROTTLE	36
AU113192A1	PIN-PIVOT	36
AU116373A1	KEY-SQUARE	36
AU119124A2	CABLE-BRAKE	36
AU127310A1	PIVOT-ARTICULATION	36
AUA26581	BEARING	36
107-3039	PIN-KLIK	#N/A
AUD121629	OIL FILTER ASM	36
AUH289652	JOINT-BALL (FEMALE)	36
AUH371054	PIN-PIVOT	36

Part #	Description	Page
AUH382457	PIN-LIFT	36
AUH393843	PIN-MOUNTING, BLADE	36
AUH413153	GASKET	36
AUH421867	SHAFT-MOUNTING, PLOW ARM	36
AUH436788	PIN-BEARING	36
KW10761	FILTER-OIL	32
AUD121629	OIL FILTER ASM	36
AUH289652	JOINT-BALL (FEMALE)	36
AUH371054	PIN-PIVOT	36

Always consult your product's Parts Catalog to ensure that the correct parts will be ordered.



NOTES

NOTES



NOTES

NOTES

Cutting blades are the most important component of your Toro® equipment.

It Pays To Keep Them Sharp.

Toro's Pro-Sharp Blade Sharpening Service is an exchange program that allows you to always have sharp blades for your Toro brush chipper and stump grinder.



To Order Pro-Sharp Service*:

-  Go to www.toro.com/Pro-Sharp for more information or call 1-800-348-2424 ext. 4997 to order by phone.
-  Toro will ship a tote of sharpened blades the same business day. (Orders placed by 11:00 AM CST)
-  When you receive the tote with sharpened blades, use the enclosed, pre-paid, pre-printed return label and send your dull blades in the tote back to Toro.

*Pro-Sharp Service not available in Canada

PRO
SHARP
SERVICE
Toro® Blade Sharpening Services