

TECHNICAL DATA

TAMPER

BT 50



Maximum reliability and longevity
All around engine protection



Easy handling
Lightweight and ergonomic handle




Simple operation
Engine and fuel supply with combined switch

Shipping dimensions in cub.yd

BT 50

0.345

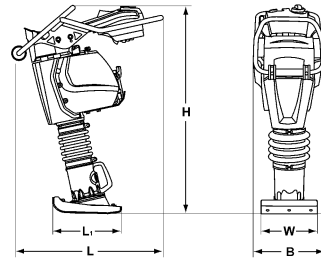

Standard Equipment

- ☒ Engine Protection System
 - Protective engine covering
 - Paper air filter system with two stages
 - Automatic oil level control
 - Dual fuel filter system
- ☒ Vibration insulated steering handle
- ☒ Self-cleaning air filter
- ☒ Protective covering
- ☒ Single point lifting device
- ☒ Recoil starter
- ☒ Plastic castor as loading aid
- ☒ Infinitely variable frequency
- ☒ Combination of engine stop/fuel switch
- ☒ 3-2-1 Warranty

Optional Equipment

- ☐ h-/ rpm meter
- ☐ Transport device with puncture proof wheels
- ☐ Tamper foot widths (6.3-13in)
- ☐ Tamper foot extensions
- ☐ Special painting
- ☐ Tool kit
- ☐ Service Kit
- ☐ TOUGH WARRANTY

Dimensions in inch

	B	H	L	L1	W
BT 50	13.8	40.6	28.7	13.2	9.1

Technical Data

BOMAG BT 50

Weights

Operating weight CECE	lb	128
Basic weight	lb	126

Dimensions

Working width (tamper plate)	in	9.1
------------------------------------	----	-----

Driving Characteristics

Working speed max.	ft/min	65.6
Area coverage max.	ft ² /h	2,970.9

Drive

Engine manufacturer	Honda
Engine type	GXR 120
Emission stage	CARB Phase 3
Cooling	air
Number of cylinders	1
Performance SAE J 1349	hp 3.8
Fuel	Gasoline
Drive system	mech.
Fuel comsump. aver. during operation	gal/h 0.2

Exciter system

Frequency	vpm	600.0-708.0
Impact force	lb	15.0
Jumping height	in	2.8

Capacities

Fuel	gal	0.8
------------	-----	-----

Technical modifications reserved. Machines may be shown with options.



PRUS 541 60 010

121125 Sa01

BOMAG Americas, Inc.
125 Blue Granite Parkway
Ridgeway, SC 29130
USA
Tel. +1 803 3370700
Fax +1 803 3370800
www.bomag.com/us

